

LIST OF PARTS

THOMSON

DOUBLE MICROMETER AIR CLUTCH CUTTERS AND CREASERS

STYLE 8 - 7 AC-DM SIZE 33 x 47	STYLE 8 - 6 AC-DM SIZES 22 x 32 28 x 41
STYLE 10 - 8 - 7 AC-DM SIZE 44 x 66	STYLE 8 - 7 AC-DM SIZE 38 x 54
STYLE 9 - 7 AC-DM SIZE 28 x 41	



General Offices and Factory
THOMSON - NATIONAL PRESS COMPANY
FRANKLIN, MASSACHUSETTS

Sales Offices
NEW YORK - CHICAGO - ATLANTA - LOS ANGELES

Price Ten Dollars

Copyright 1962 by THOMSON - NATIONAL PRESS COMPANY

Printed in U.S.A.

ORDERING INSTRUCTIONS

WHEN ORDERING PARTS BE SURE TO GIVE THE FOLLOWING INFORMATION:

Serial number of press (Stamped on bed in upper right hand corner, or on name plate);

Style and size of press (Stamped on name plate);

Plate key number;

Plate;

Part name (Indicate right hand or left hand from operator's position);

Part number (Indicated under press sizes).

All orders should be addressed to:

**THOMSON - NATIONAL PRESS COMPANY
FRANKLIN, MASSACHUSETTS**

The minimum charge on all part orders is two dollars (\$2.00).

When parts are sent to us for repair or for replacement, they should be tagged with the owner's name and shipped prepaid to Thomson-National Press Company, Franklin, Mass.

Prices of parts on application.

All prices are f.o.b. Franklin, Mass.

Always state the definite mode of transportation, whether air mail, express, parcel post, freight or truck.


GENERAL INDEX

DESCRIPTION	PAGE NO.
INDEX TO PLATES – Style 9 - 7 AC-DM Size 28 x 41	4
INDEX TO PLATES – Style 9 - 7 AC-DM Size 28 x 41	5
INDEX TO PLATES – Style 8 - 7 AC-DM Size 38 x 54	6
INDEX TO PLATES – Style 8 - 7 AC-DM Size 38 x 54	7
INDEX TO PLATES – Style 10 - 8 - 7 AC-DM Size 44 x 66	8
INDEX TO PLATES – Style 10 - 8 - 7 AC-DM Size 44 x 66	9
INDEX TO PLATES – Style 8 - 6 AC-DM Sizes 22 x 32 and 28 x 41	10
INDEX TO PLATES – Style 8 - 6 AC-DM Sizes 22 x 32 and 28 x 41	11
INDEX TO PLATES – Style 8 - 7 AC-DM Size 33 x 47	12
INDEX TO PLATES – Style 8 - 7 AC-DM Size 33 x 47	13
PLATE 1 AND 1A – PRESS ASSEMBLY – Style 9 - 7 AC-DM Size 28 x 41	14
PLATE 2 AND 2A – PRESS ASSEMBLY – Style 8 - 7 AC-DM Size 38 x 54	15
PLATE 3 AND 3A – PRESS ASSEMBLY – Style 10 - 8 - 7 AC-DM Size 44 x 66	16
PLATE 3B AND 3C – PRESS ASSEMBLY – Style 8 - 6 Sizes 22 x 32 and 28 x 41	17
PLATE 3D AND 3E – PRESS ASSEMBLY – Style 8 - 7 AC-DM Size 33 x 47	18
PLATE 4 – FRAME, RIGHT REAR ASSEMBLY	19
PLATE 5 – FRAME, LEFT REAR ASSEMBLY	20
PLATE 6 – REAR RIGHT SIDE ASSEMBLY	21
PLATE 7 – REAR LEFT SIDE ASSEMBLY	22
PLATE 8 – REAR LEFT SIDE ASSEMBLY	23
PLATE 9 – FRONT RIGHT SIDE ASSEMBLY	24
PLATE 10 – FRONT LEFT SIDE ASSEMBLY	25
PLATE 11 – BRIDGE, RIGHT FRONT ASSEMBLY	26
PLATE 12 – BRIDGE, LEFT FRONT ASSEMBLY	27
PLATE 13 – BRIDGE, LEFT FRONT AND CENTER ASSEMBLY	28
PLATE 14 – FLYWHEEL SHAFT AND AIR CLUTCH ASSEMBLY	29
PLATE 15 – LUBRICATOR AND COMPRESSOR ASSEMBLY	30
PLATE 15A – COMPRESSOR ASSEMBLY	31
PLATE 16 – UPPER AND REAR ASSEMBLY	32
PLATE 17 – FRAME, RIGHT REAR ASSEMBLY	33
PLATE 18 – ELECTRICAL CONTROL ASSEMBLY	34
PLATE 18A – ELECTRICAL CONTROL ASSEMBLY	35
PARTS LIST – PAGE 36 through 51	
AIR COMPRESSOR (Quincy)	
AIR COMPRESSOR PARTS LIST	
AIR COMPRESSOR PARTS LIST SUPPLEMENT	
AIR COMPRESSOR INSTRUCTION SHEET	
AIR VALVE (Ross) – LIFEGUARD SOLENOID INTROLD (Pilot Operated) THREE-WAY – NORMALLY CLOSED	
AIR VALVE (Ross) – WHITE MODEL SOLENOID OPERATED THREE-WAY – NORMALLY CLOSED & NORMALLY OPEN	
DRIVES (U.S. Motors) – VARIDRIVE MOTORS – Instruction Sheet	
DRIVES (U.S. Motors) – TYPES J, E, JN & EN – Parts List	
DRIVES (U.S. Motors) – TYPES VE, VEU, & VEV – Parts List	
DRIVES (Reeves) – VARI-SPEED MOTODRIVE – #200-600 – Parts List	
DRIVES (Reeves) – VARI-SPEED MOTODRIVE – HANDWHEEL CONTROL AND INDICATOR – #400-500 & 600 – Parts List	
DRIVES (Reeves) – VARI-SPEED MOTODRIVE – #200-300 – HANDWHEEL CONTROL AND INDICATOR (with Plastic Dial) – Parts List	
DRIVES (G.E.) – POLYDYNE DRIVE – Instructions	
LUBRICATION (BIJUR) – AUTOMATIC OILING SYSTEM – Types AA & AB – Specifications	
LUBRICATION (BIJUR) – AUTOMATIC OILING SYSTEM – Type P – Specifications	
LUBRICATION (BIJUR) – AUTOMATIC OILING SYSTEM – Type AA – Service Instructions	
LUBRICATION (BIJUR) – AUTOMATIC OILING SYSTEM – Type P – Service Instructions	

INDEX TO PLATES


LUBRICATOR AND COMPRESSOR ASSEMBLY

  PLATE 15

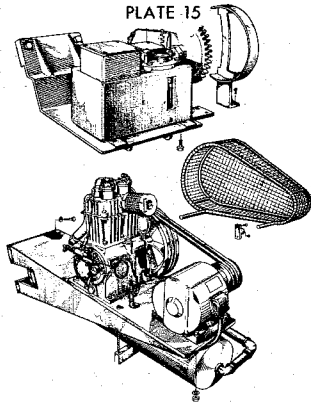


 
FRAME, LEFT REAR ASSEMBLY

 PLATE 5

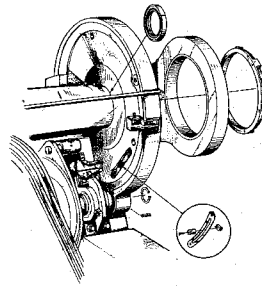

ELECTRICAL CONTROL ASSEMBLY

PLATE 18

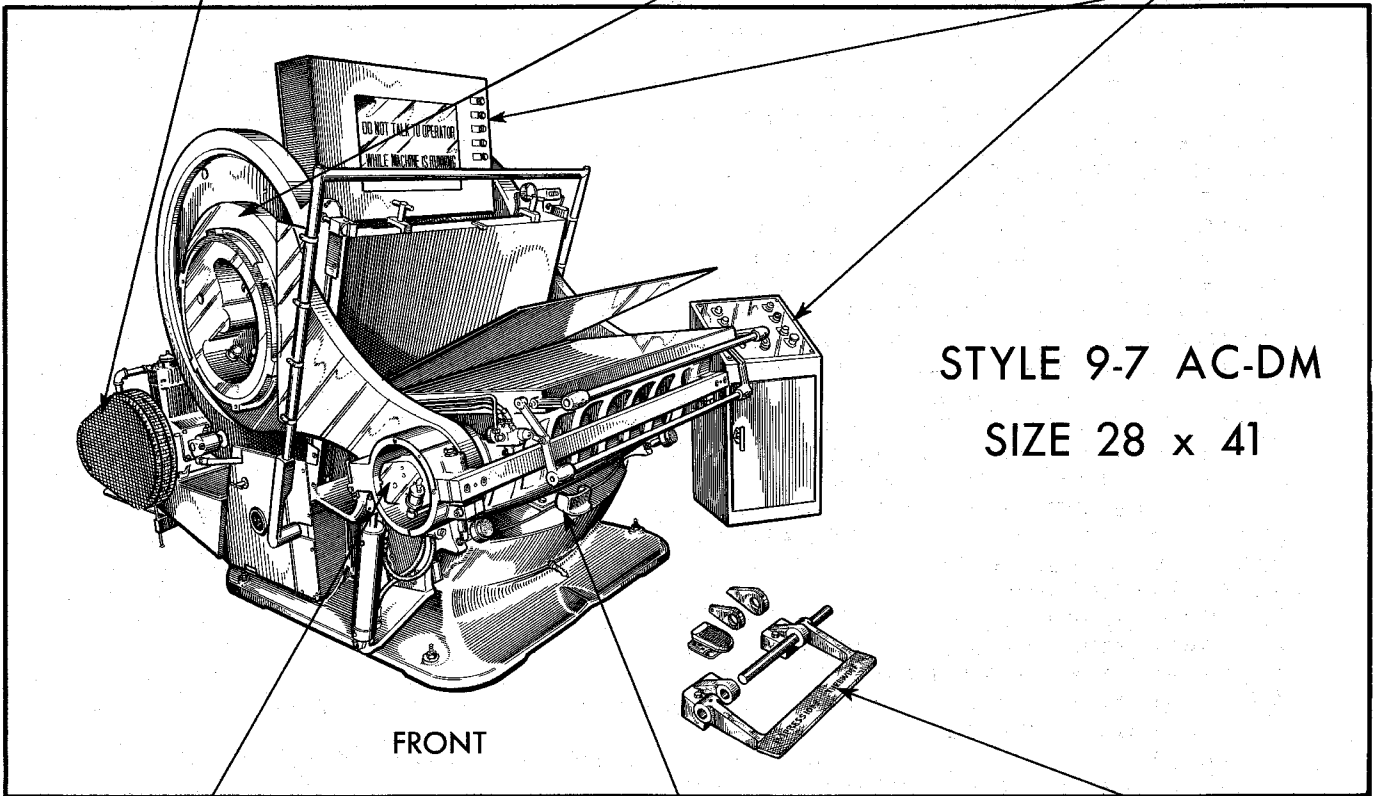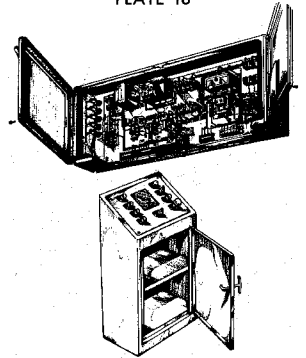


STYLE 9-7 AC-DM
SIZE 28 x 41

FRONT


BRIDGE, LEFT FRONT ASSEMBLY

 PLATE 12

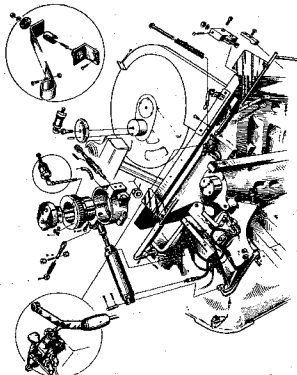


BRIDGE, LEFT FRONT AND CENTER ASSEMBLY

 PLATE 13

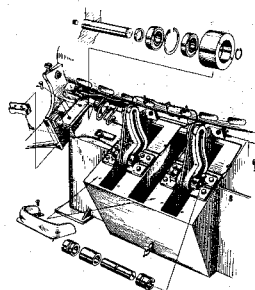

PRESS ASSEMBLY

 
PLATE 1

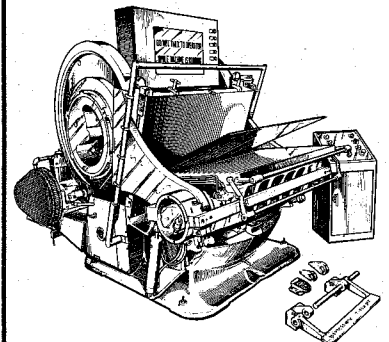

INDEX TO PLATES


FLYWHEEL SHAFT AND AIR CLUTCH ASSEMBLY

 PLATE 14

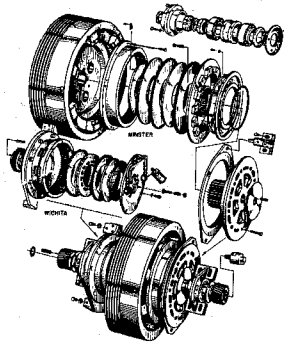


UPPER AND REAR ASSEMBLY

 PLATE 16

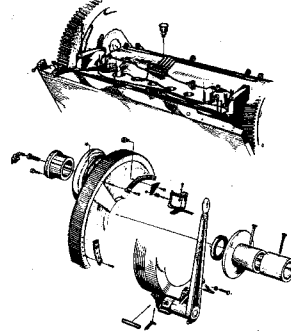


STYLE 9-7 AC-DM
SIZE 28 x 41

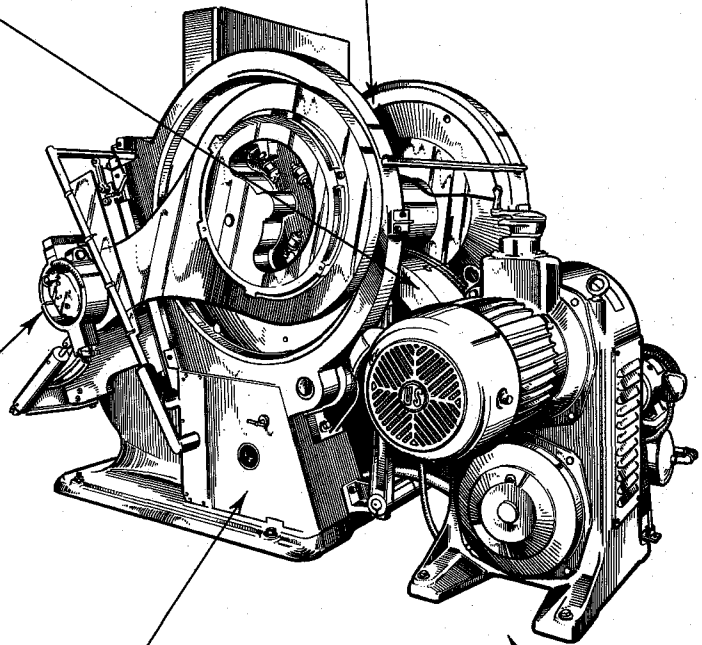 

REAR


FRONT RIGHT SIDE ASSEMBLY

 PLATE 9

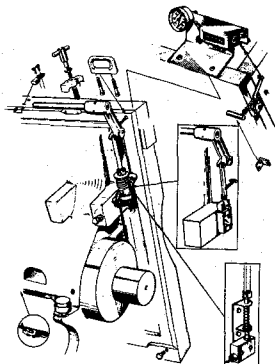


FRAME, RIGHT REAR ASSEMBLY

 PLATE 4

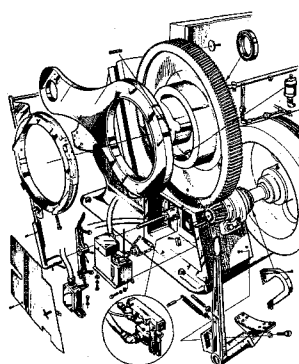

PRESS ASSEMBLY

 
PLATE 1A

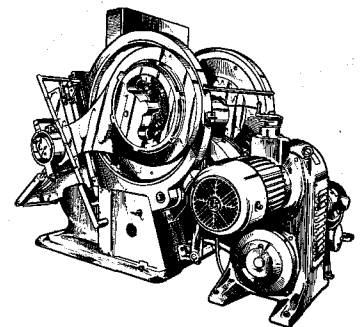

INDEX TO PLATES


LUBRICATOR AND COMPRESSOR ASSEMBLY

  PLATE 15

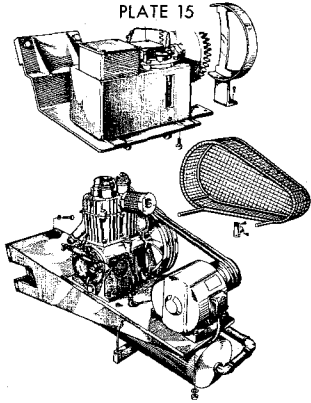


 
BRIDGE, LEFT FRONT ASSEMBLY

 PLATE 12

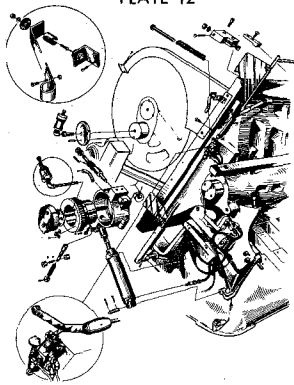


ELECTRICAL CONTROL ASSEMBLY

PLATE 18

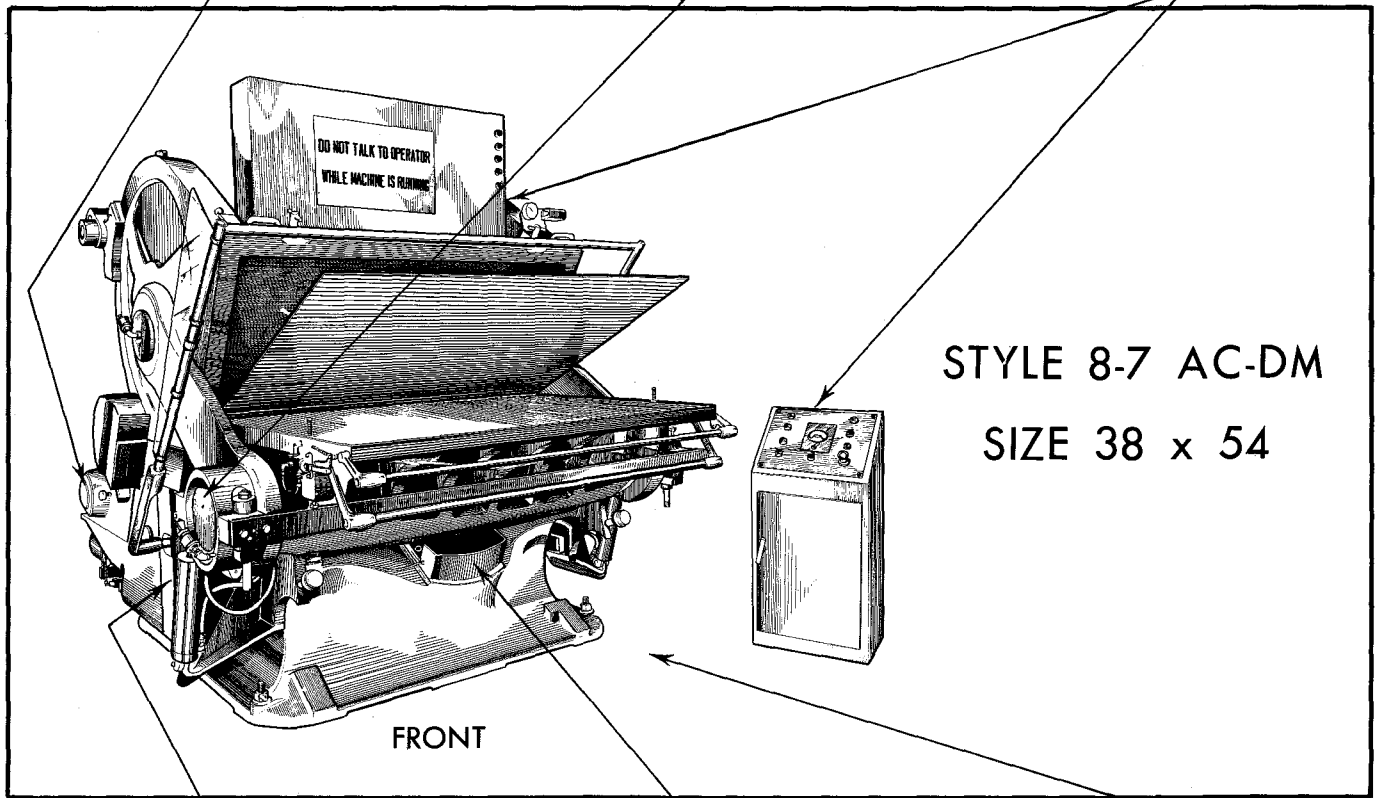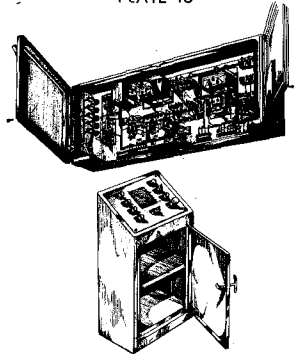


REAR LEFT SIDE ASSEMBLY

 PLATE 7

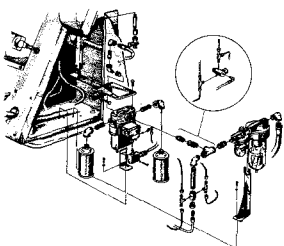


BRIDGE, LEFT FRONT AND CENTER ASSEMBLY

 PLATE 13

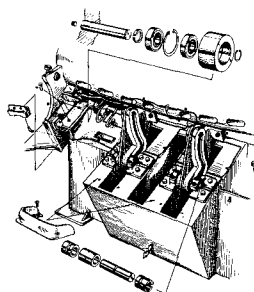

PRESS ASSEMBLY

 
PLATE 2

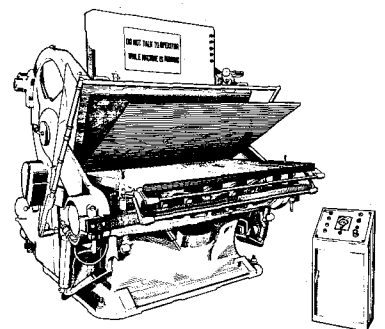

INDEX TO PLATES


FRONT RIGHT SIDE ASSEMBLY

 PLATE 9

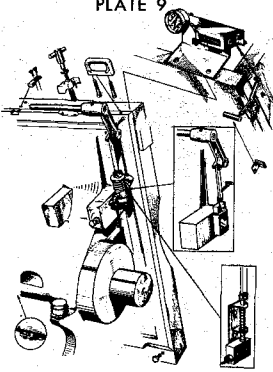


UPPER AND REAR ASSEMBLY

 PLATE 16

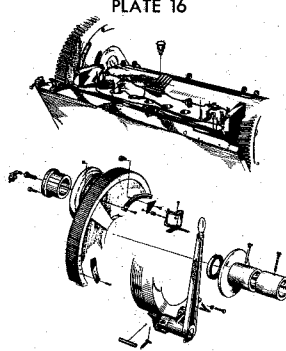


FLYWHEEL SHAFT AND AIR CLUTCH ASSEMBLY

 PLATE 14

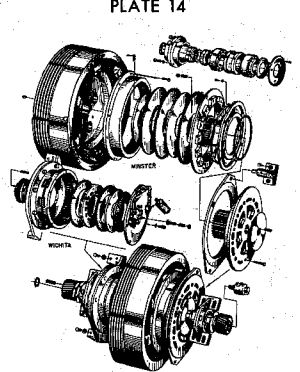


STYLE 8-7 AC-DM
SIZE 38 x 54

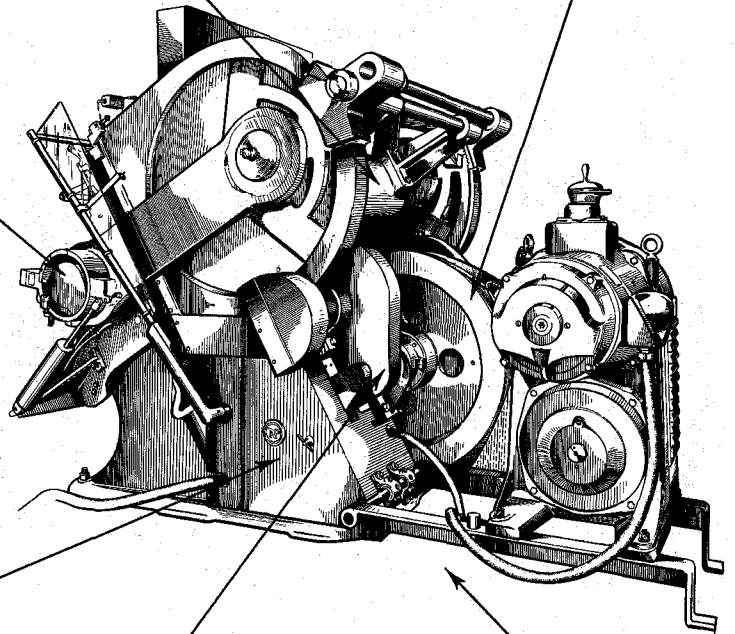 

REAR


REAR RIGHT SIDE ASSEMBLY

 PLATE 6

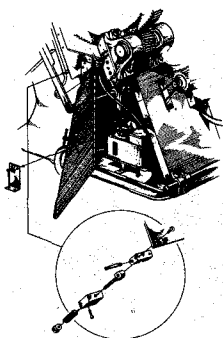


FRAME, RIGHT REAR ASSEMBLY

 PLATE 17

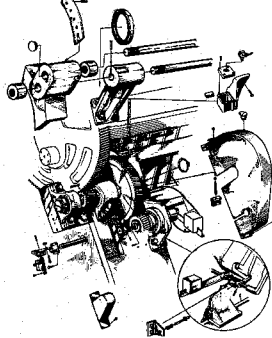

PRESS ASSEMBLY

 
PLATE 2A

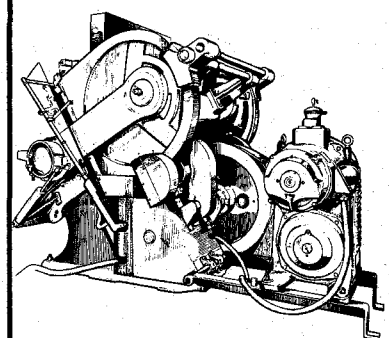

INDEX TO PLATES


LUBRICATOR AND COMPRESSOR ASSEMBLY

  PLATE 15

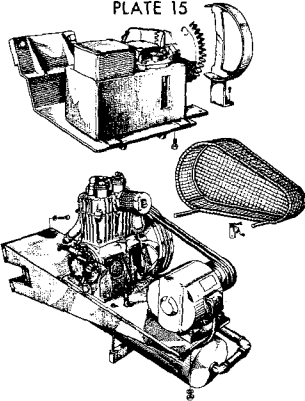


 
REAR LEFT SIDE ASSEMBLY

 PLATE 8

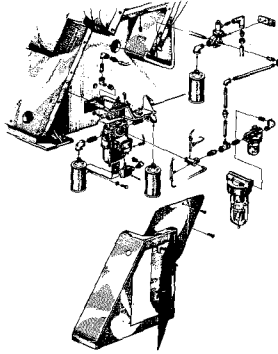


ELECTRICAL CONTROL ASSEMBLY

PLATE 18

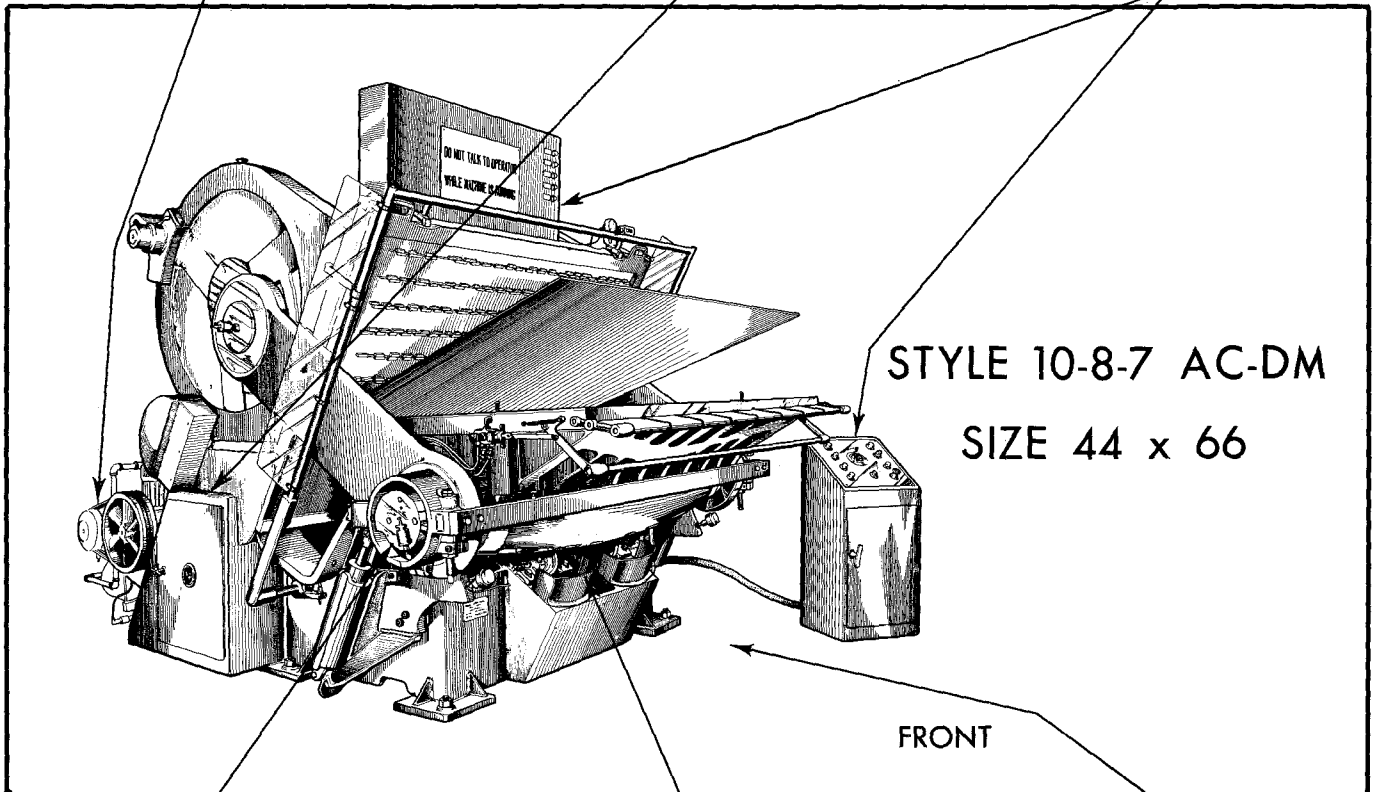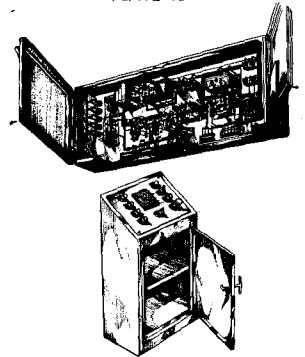


BRIDGE, LEFT FRONT ASSEMBLY

 PLATE 12

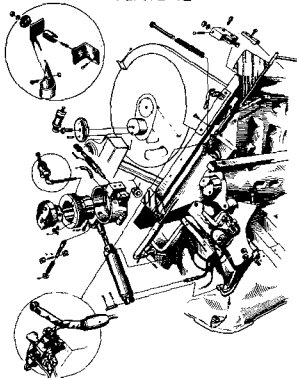


BRIDGE, LEFT FRONT AND CENTER ASSEMBLY

 PLATE 13

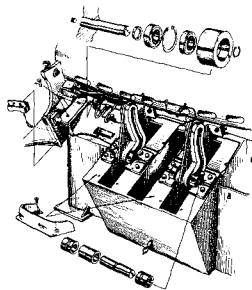

PRESS ASSEMBLY

 
PLATE 3

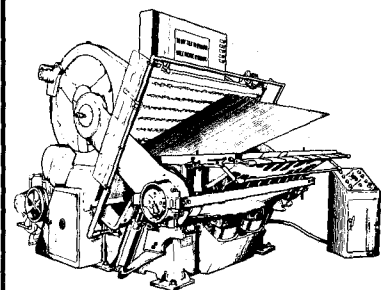

INDEX TO PLATES


FRONT RIGHT SIDE ASSEMBLY

 PLATE 9

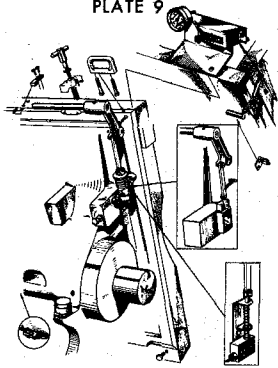


UPPER AND REAR ASSEMBLY

 PLATE 16

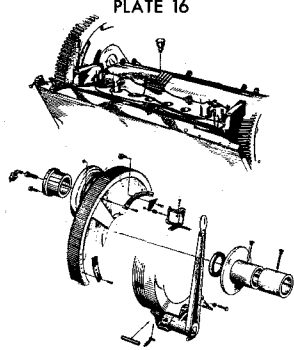


FLYWHEEL SHAFT AND AIR CLUTCH ASSEMBLY

 PLATE 14

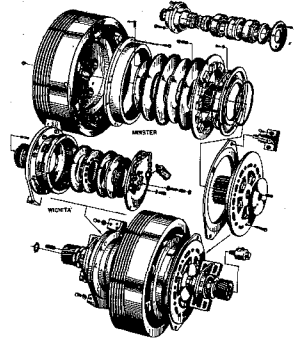


STYLE 10-8-7 AC-DM
SIZE 44 x 66

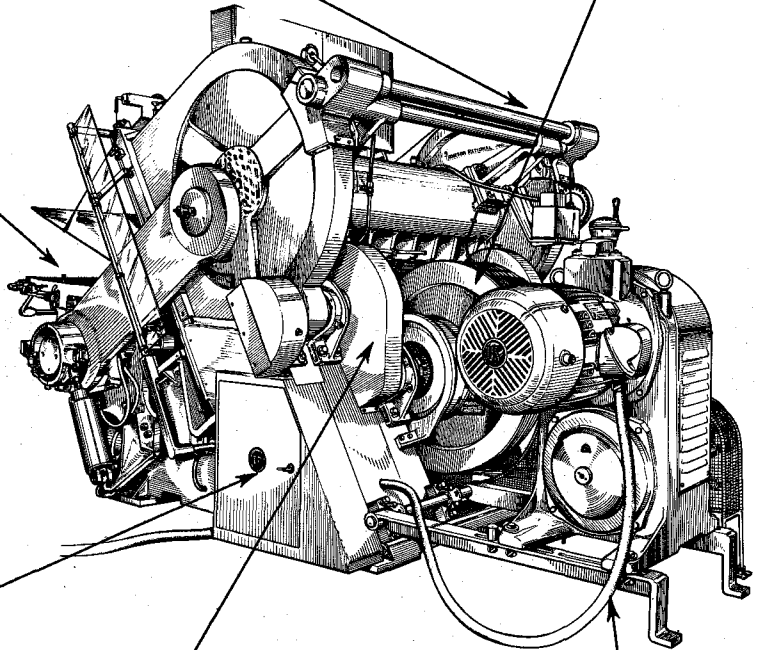 

REAR


REAR RIGHT SIDE ASSEMBLY

 PLATE 6

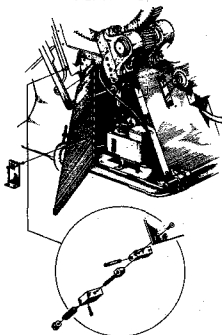


FRAME, RIGHT REAR ASSEMBLY

 PLATE 17







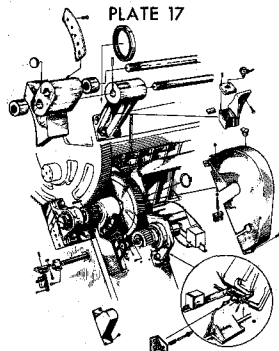


PRESS ASSEMBLY

 PLATE 3A

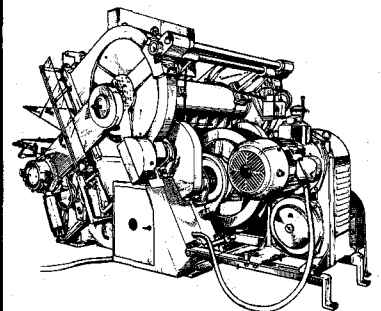


INDEX TO PLATES

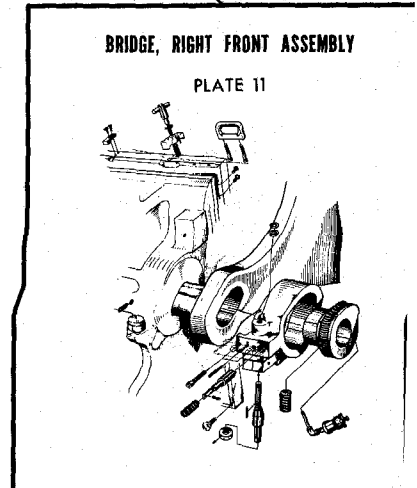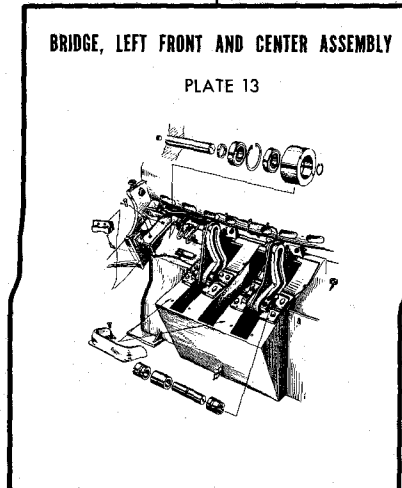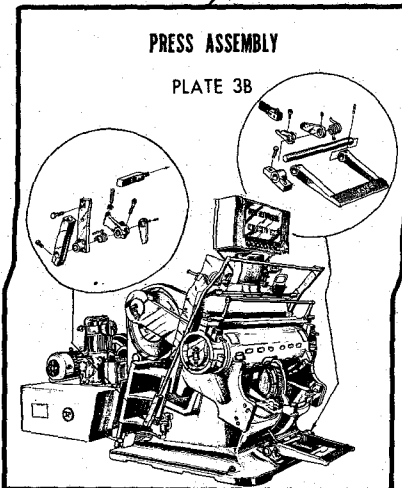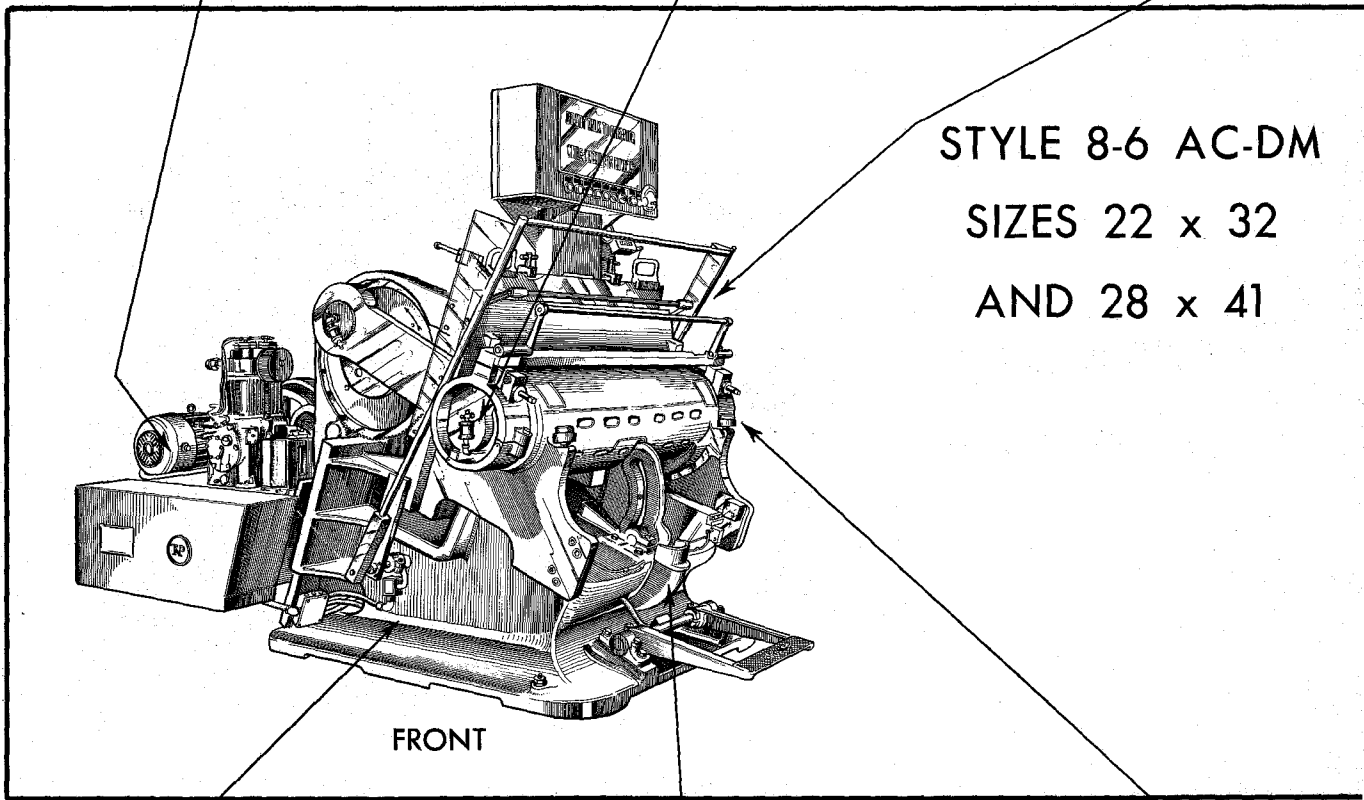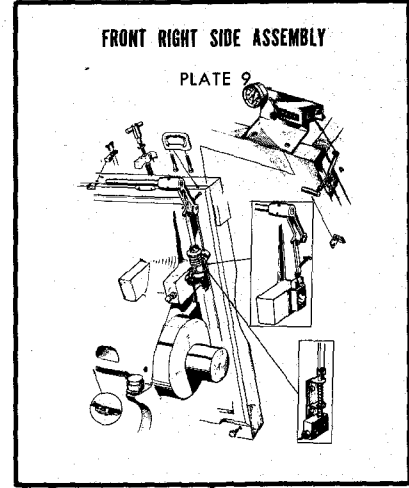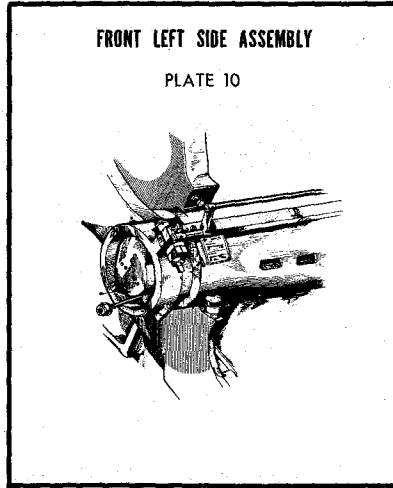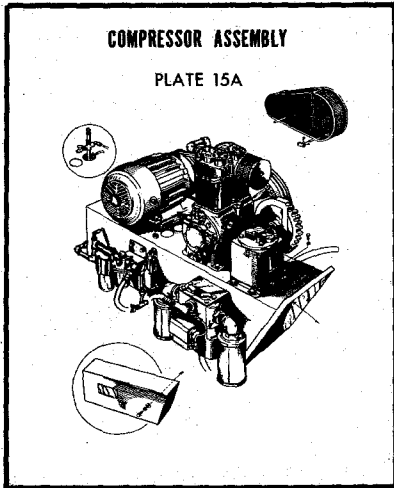       

INDEX TO PLATES


UPPER AND REAR ASSEMBLY

 PLATE 16

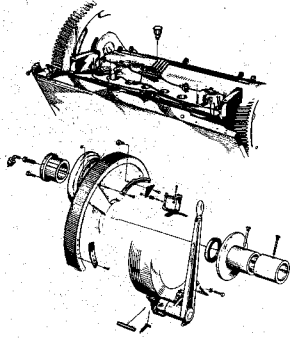

ELECTRICAL CONTROL ASSEMBLY

 
PLATE 18A

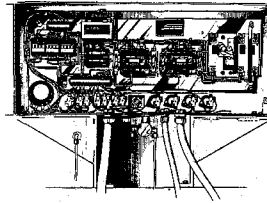

STYLE 8-6 AC-DM

SIZES 22 x 32

 
AND 28 x 41

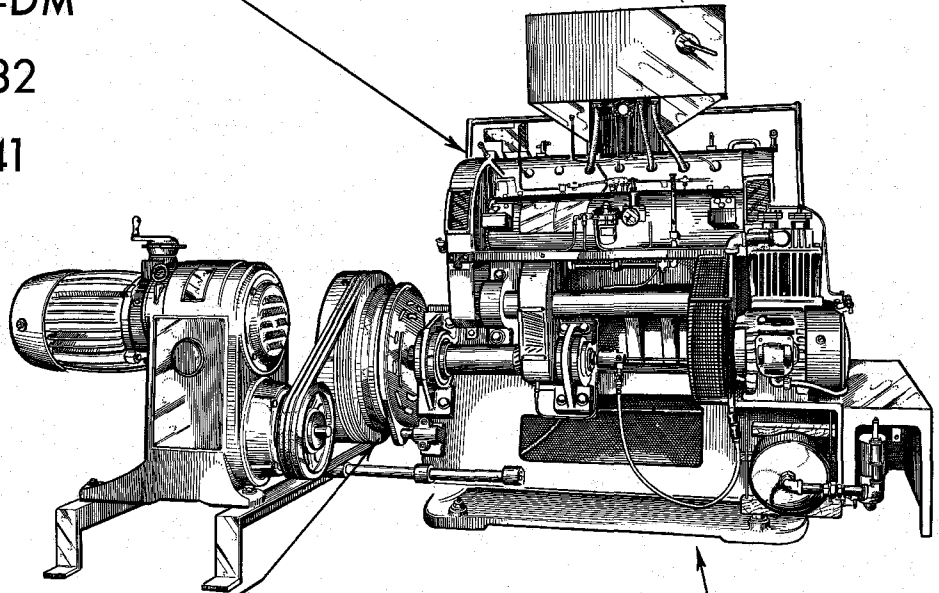

REAR


FLYWHEEL SHAFT AND AIR CLUTCH ASSEMBLY

 PLATE 14

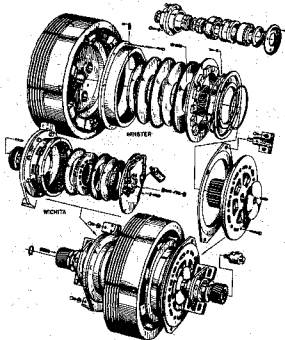

PRESS ASSEMBLY

  
PLATE 3C

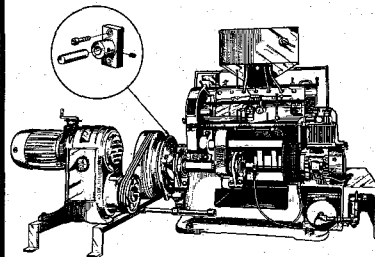

INDEX TO PLATES


 
BRIDGE, LEFT FRONT ASSEMBLY

 PLATE 12

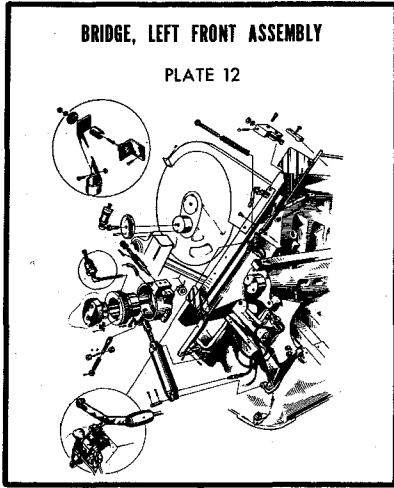


ELECTRICAL CONTROL ASSEMBLY

PLATE 18

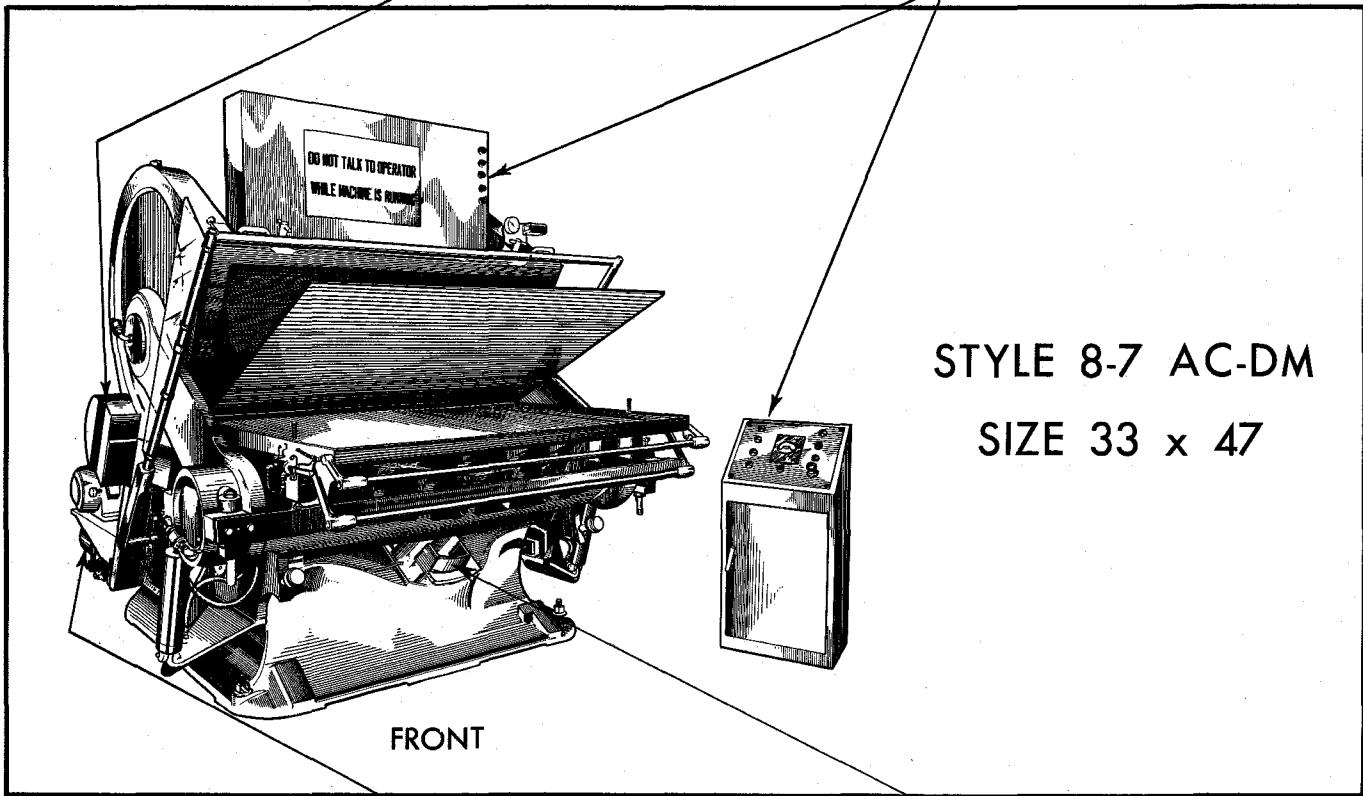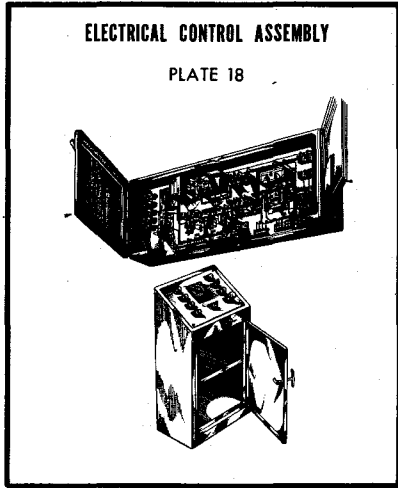


COMPRESSOR ASSEMBLY

 PLATE 15A

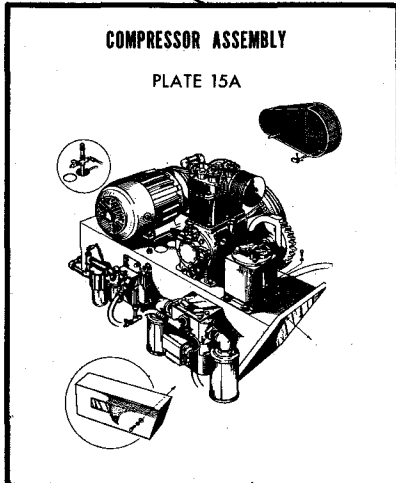

BRIDGE, LEFT FRONT AND CENTER ASSEMBLY

 
PLATE 13

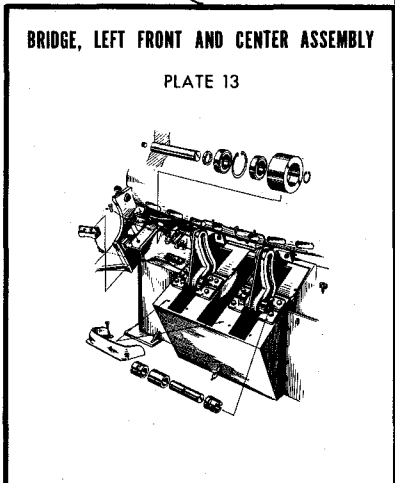

INDEX TO PLATES


FRONT RIGHT SIDE ASSEMBLY

 PLATE 9

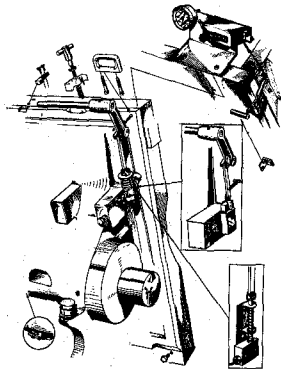


UPPER AND REAR ASSEMBLY

 PLATE 16

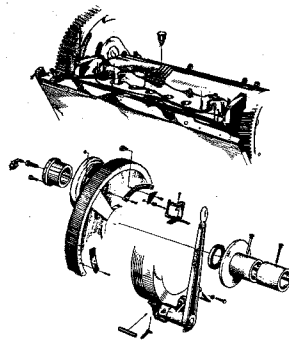


STYLE 8-7 AC-DM
SIZE 33 x 47

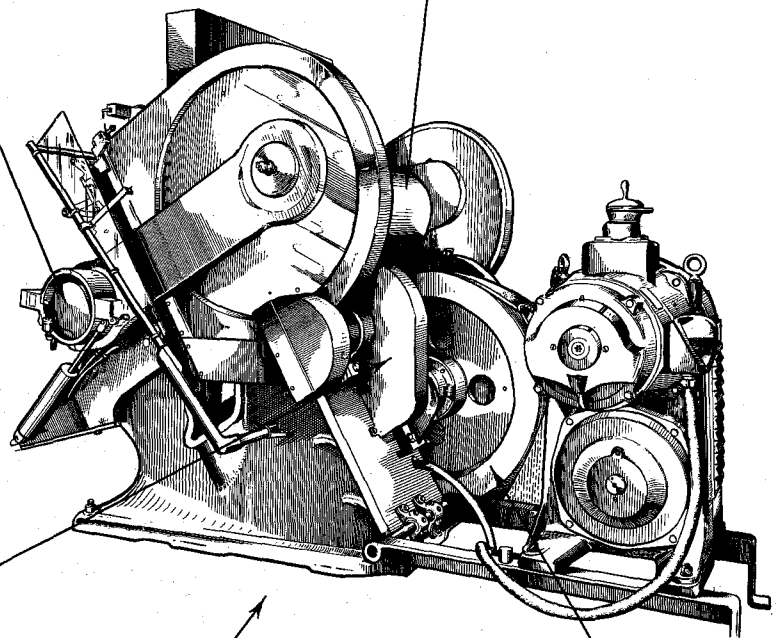 

REAR


FRAME, RIGHT REAR ASSEMBLY

 PLATE 17

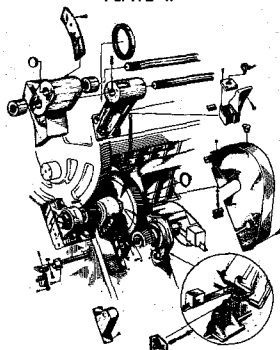


PRESS ASSEMBLY

 PLATE 3E

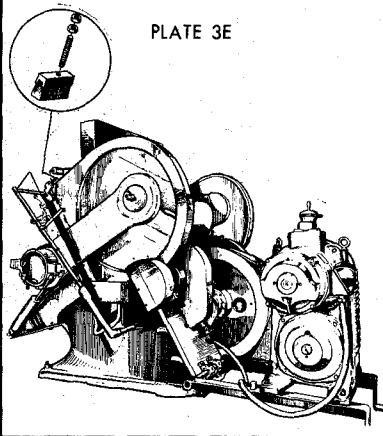

FLYWHEEL SHAFT AND AIR CLUTCH ASSEMBLY


 
PLATE 14

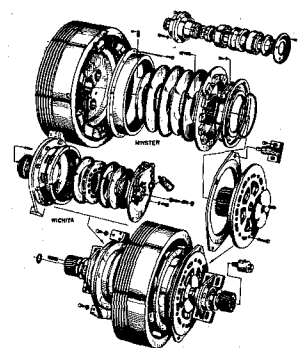

PRESS ASSEMBLY

STYLE 9-7 AC-DM

 
 
SIZE 28 x 41

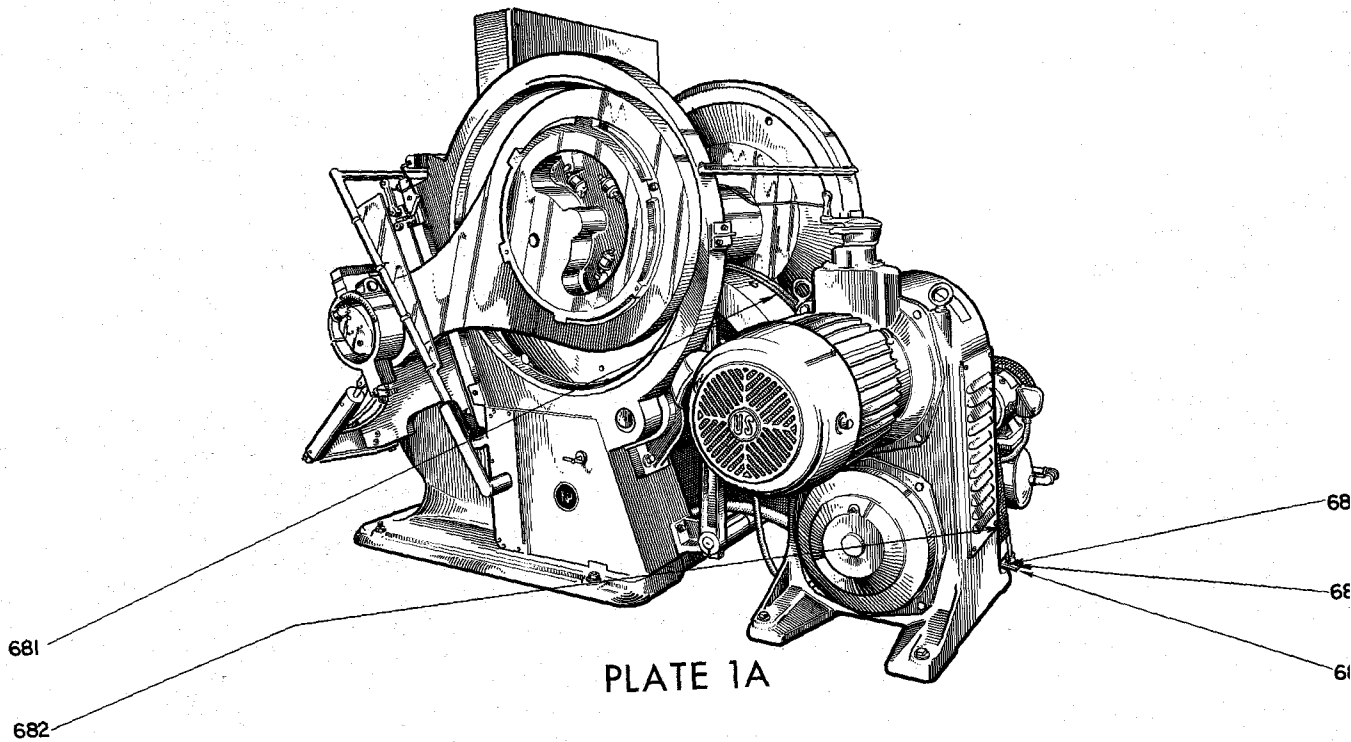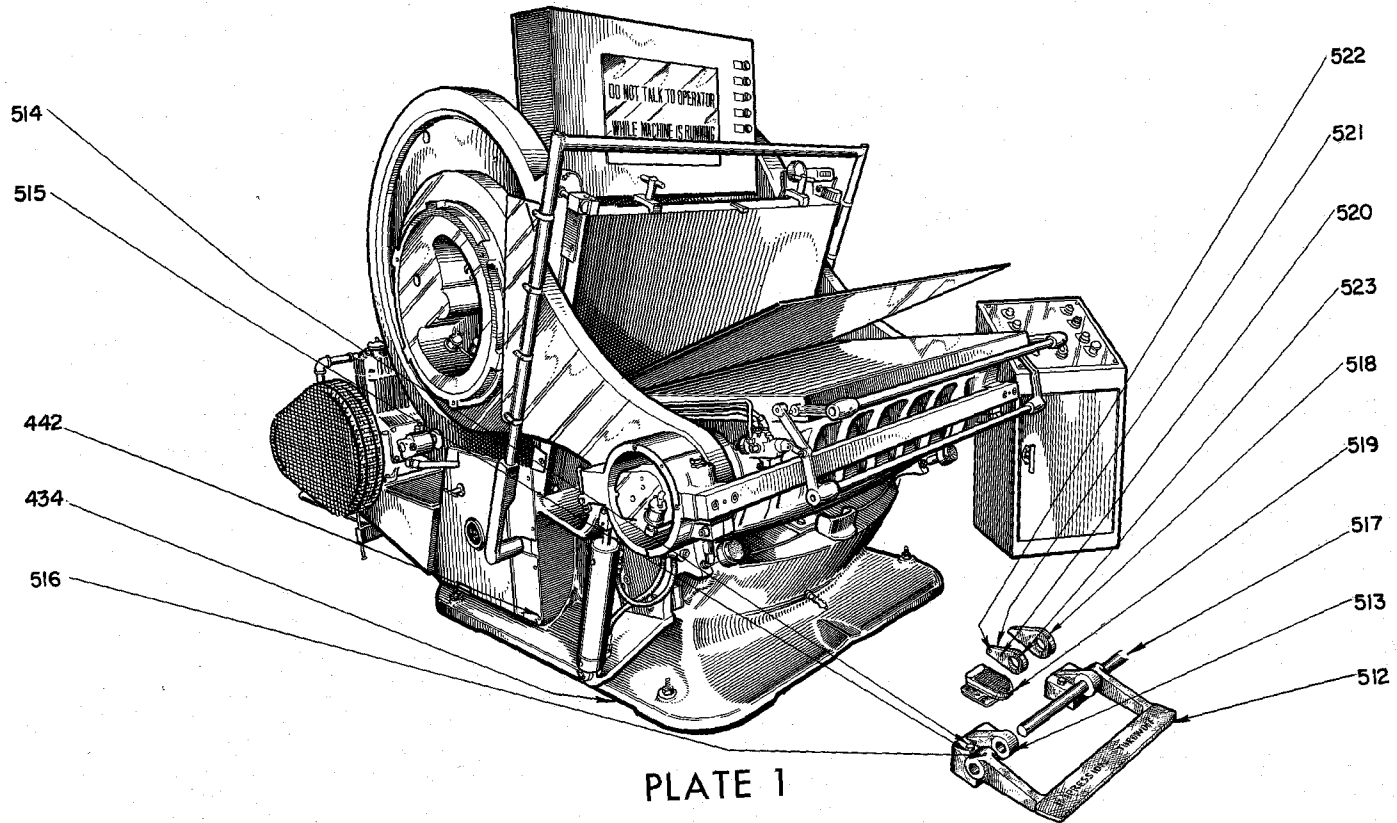

PRESS ASSEMBLY

STYLE 8-7 AC-DM

  SIZE 38 x 54

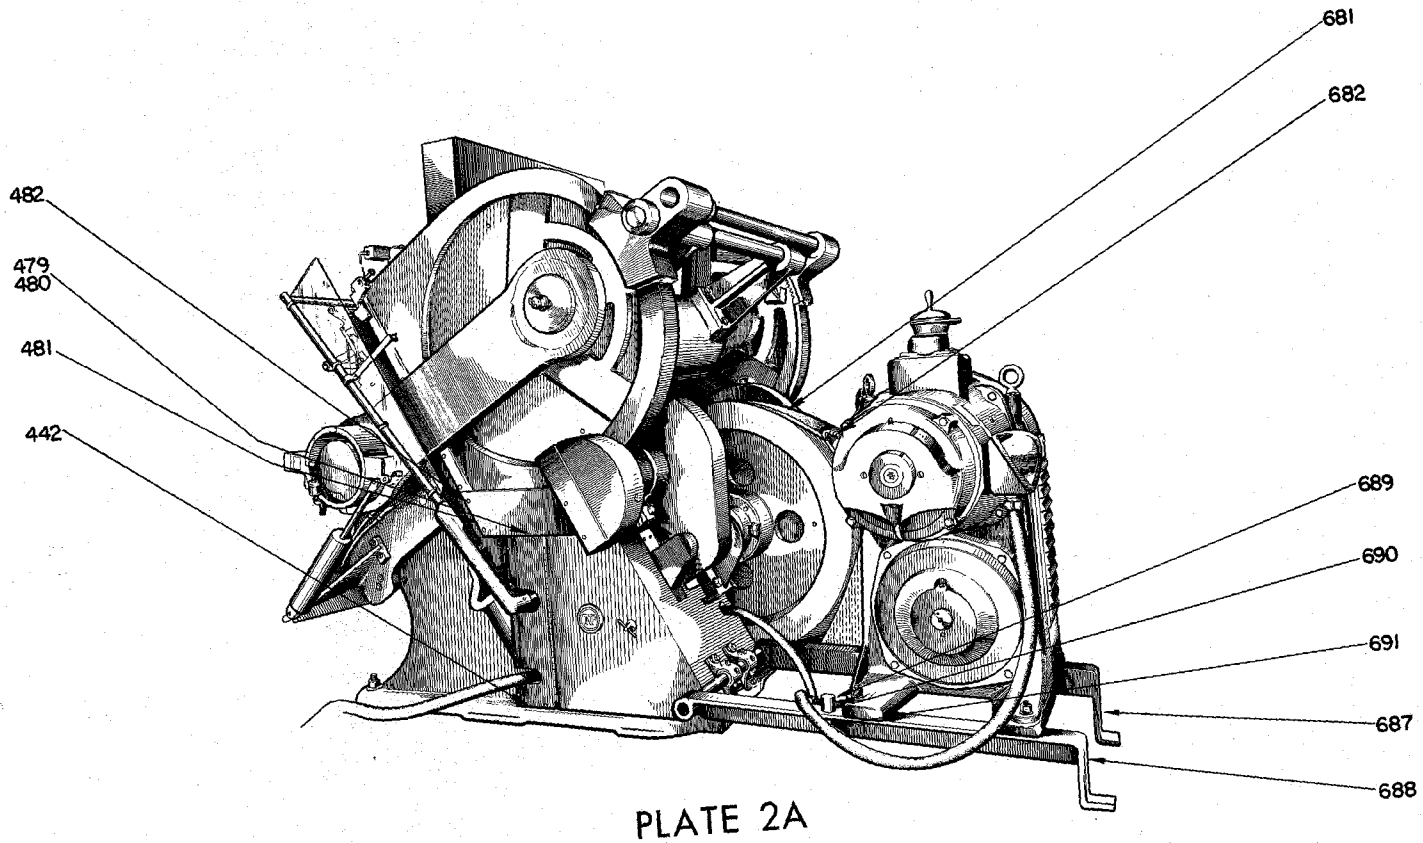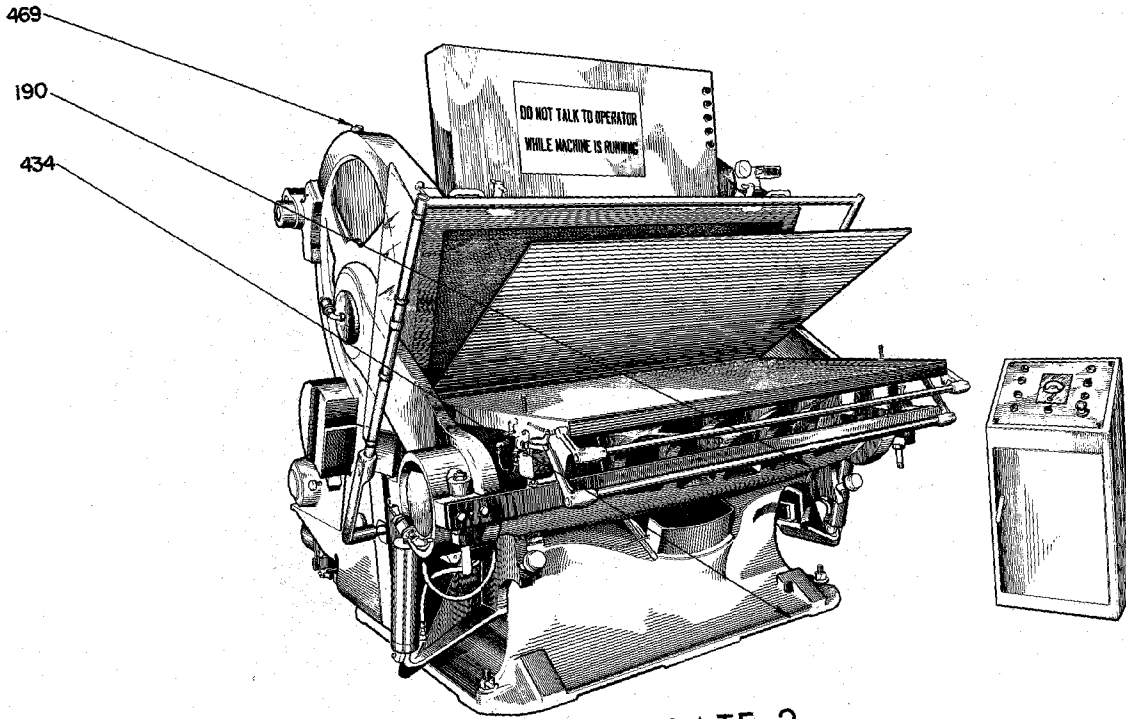

PRESS ASSEMBLY

STYLE 10-8-7 AC-DM SIZE 44 x 66

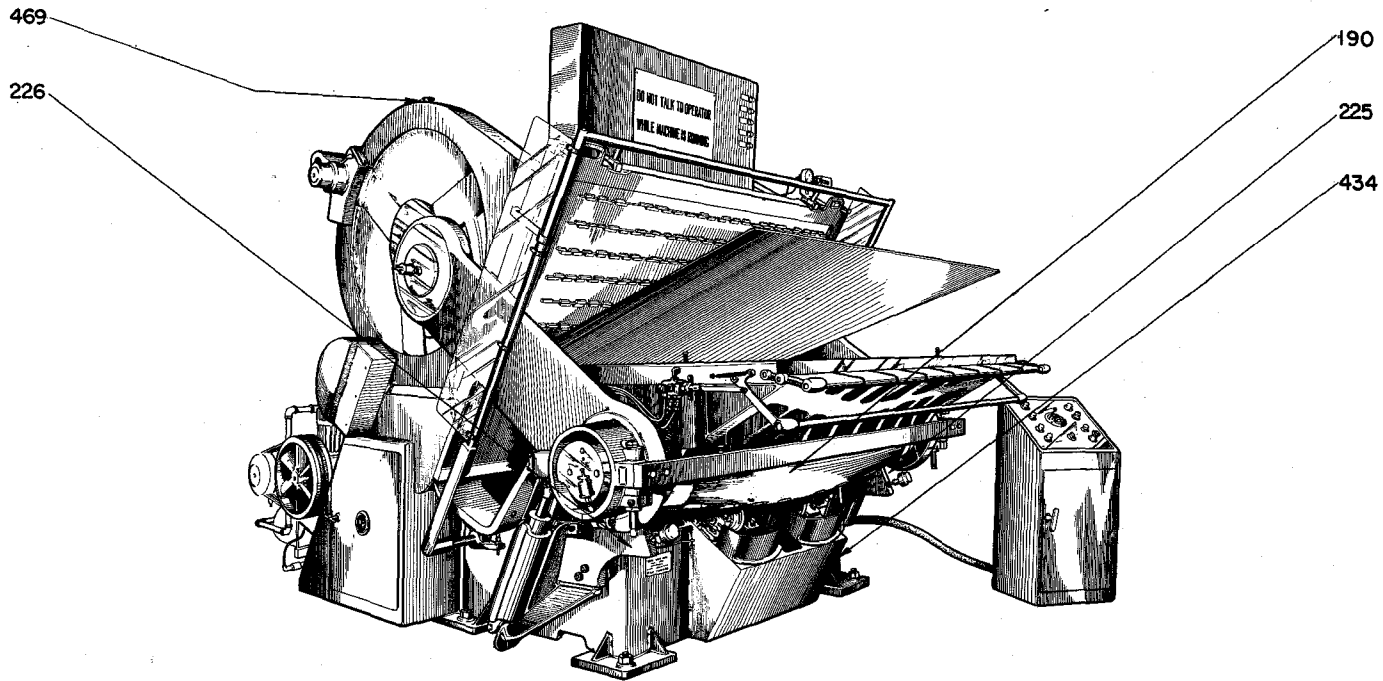 


PLATE 3

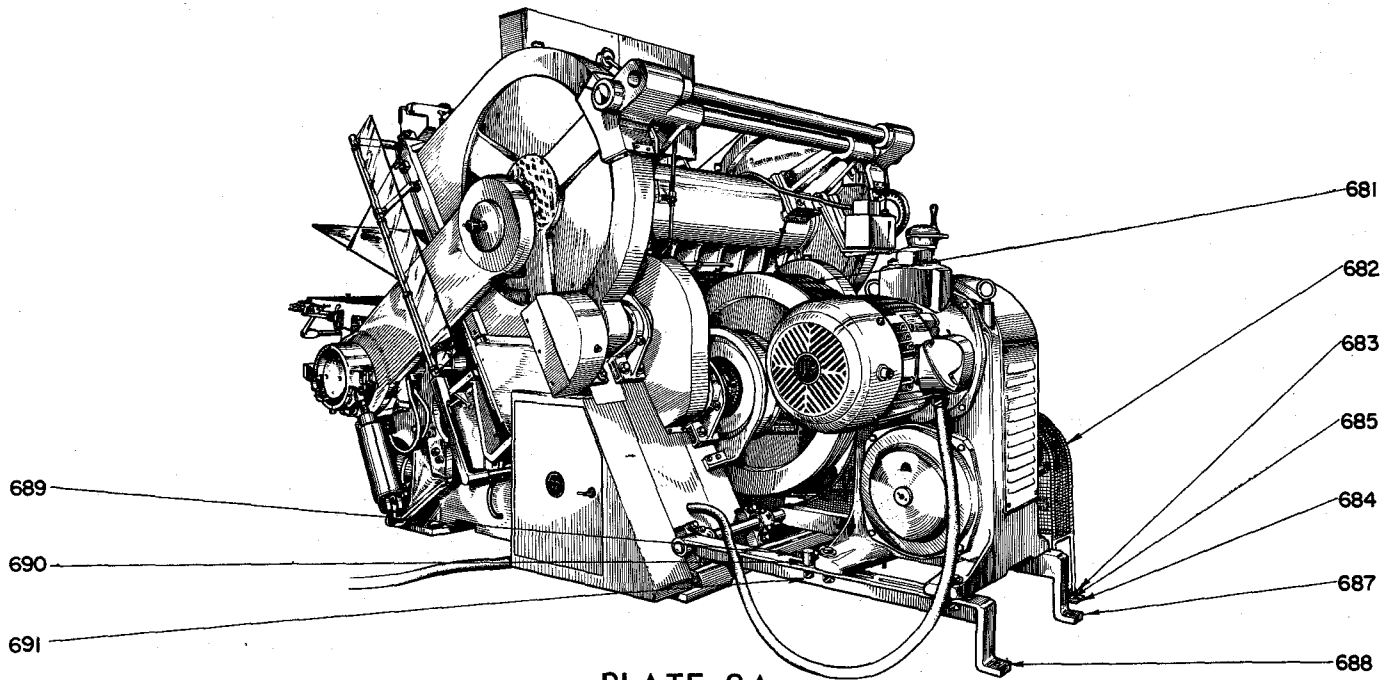 


PLATE 3A

PRESS ASSEMBLY

STYLE 8-6 AC-DM

SIZES 22 x 32 AND 28 x 41

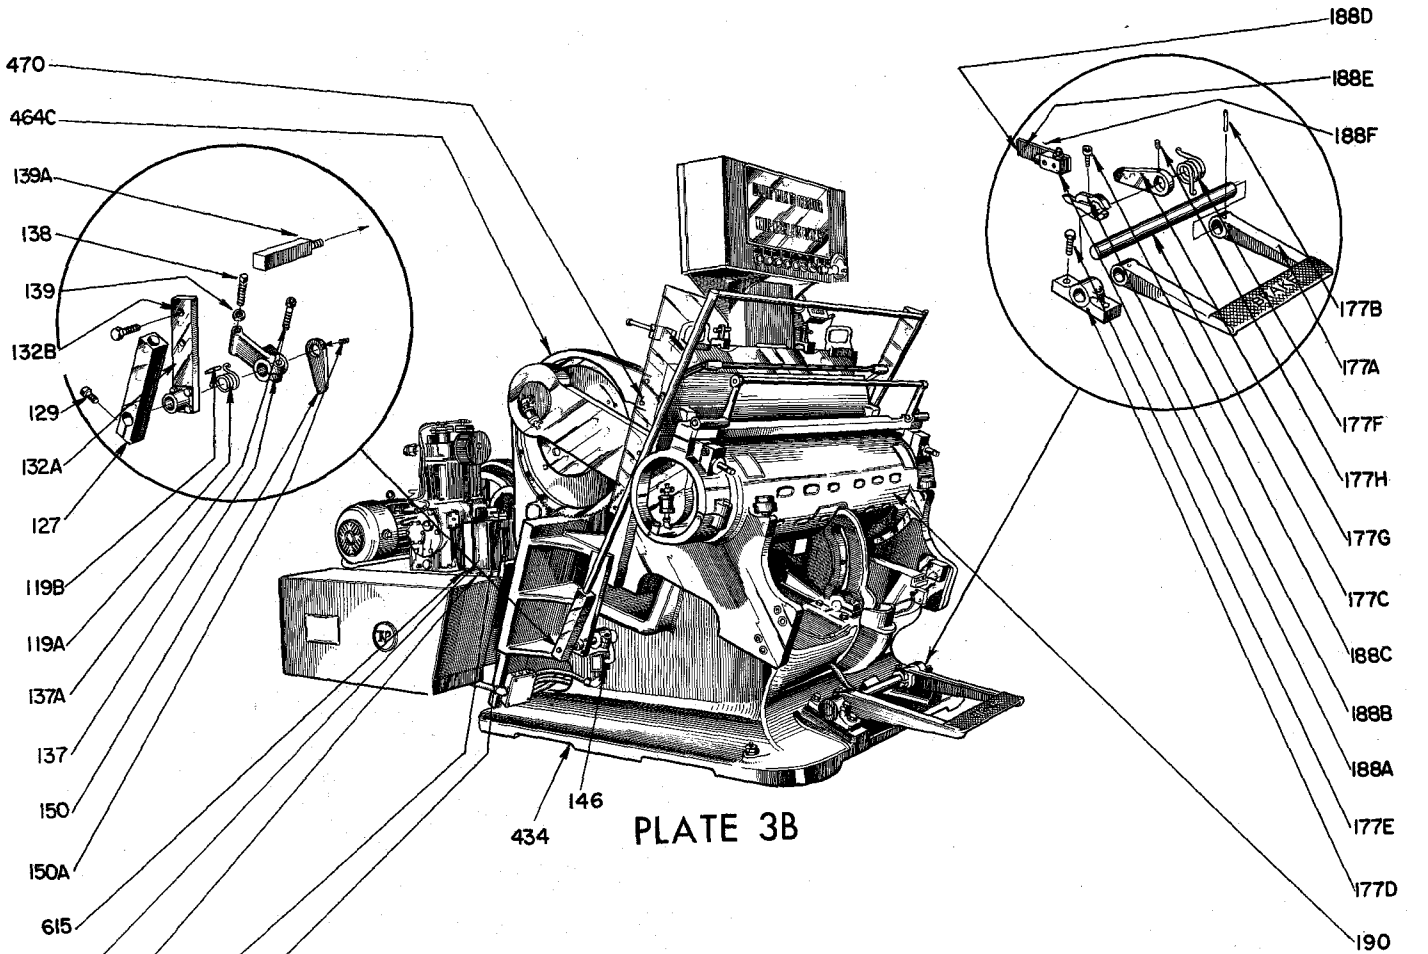 


PLATE 3B

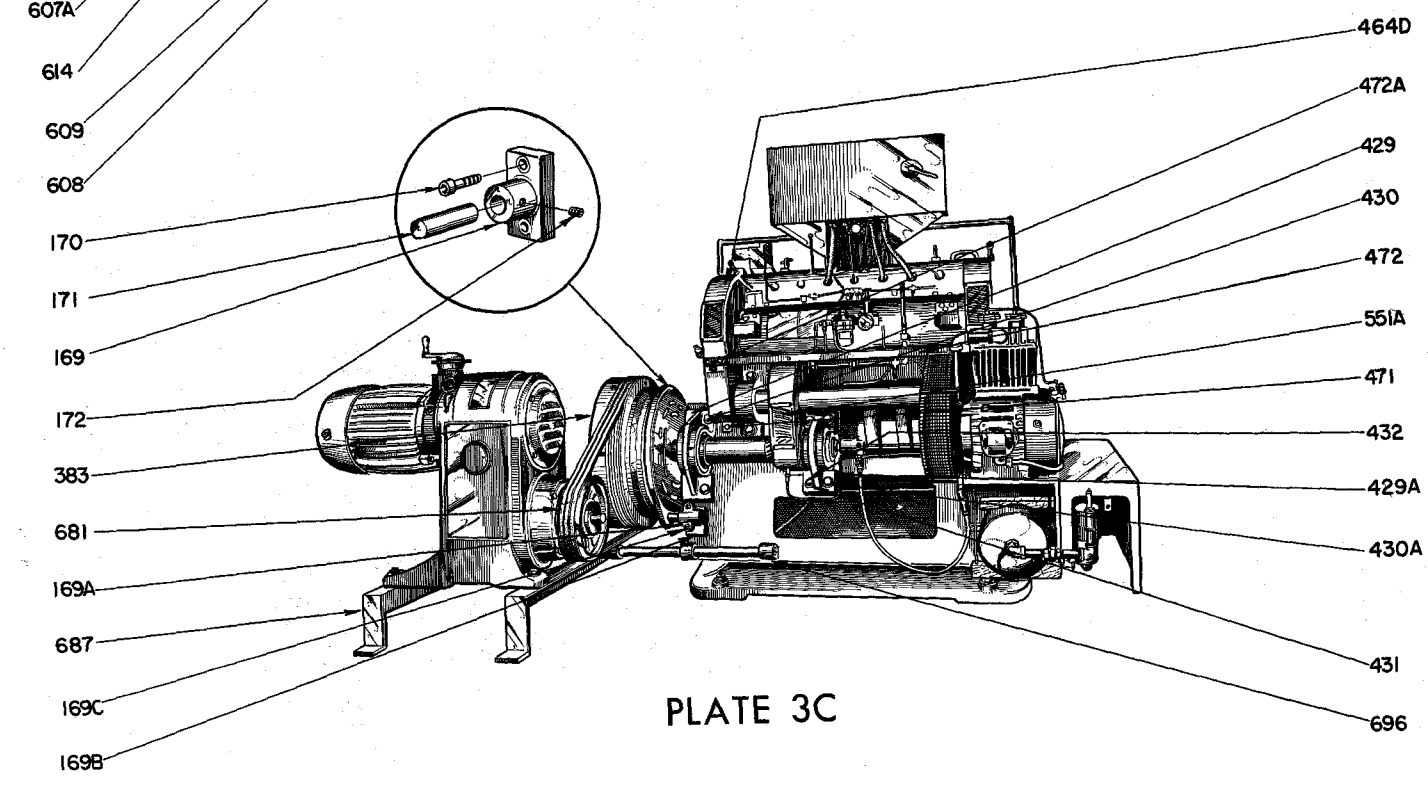 


PLATE 3C

PRESS ASSEMBLY

STYLE 8-7 AC-DM

SIZE 33 x 47

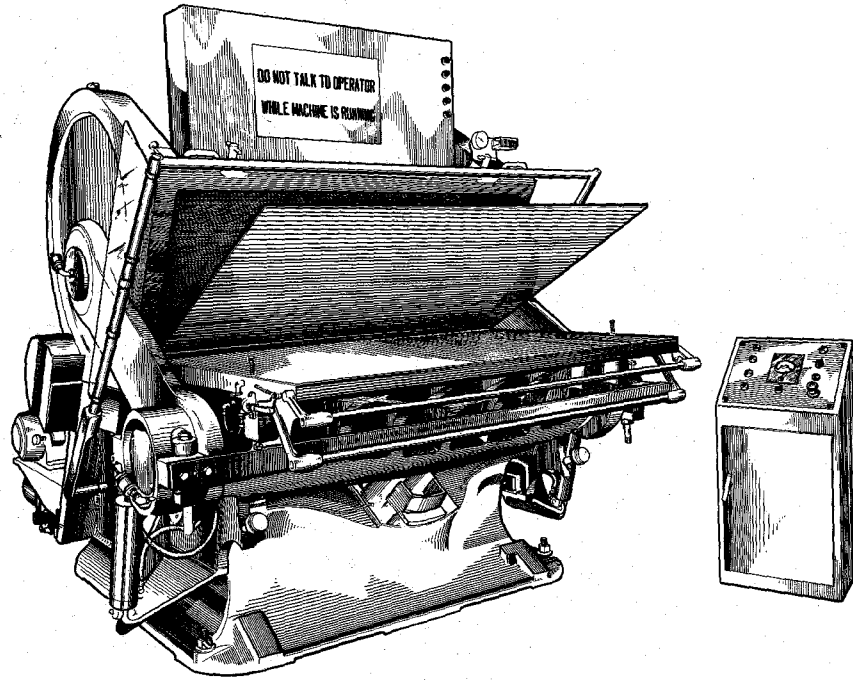 


PLATE 3D


 
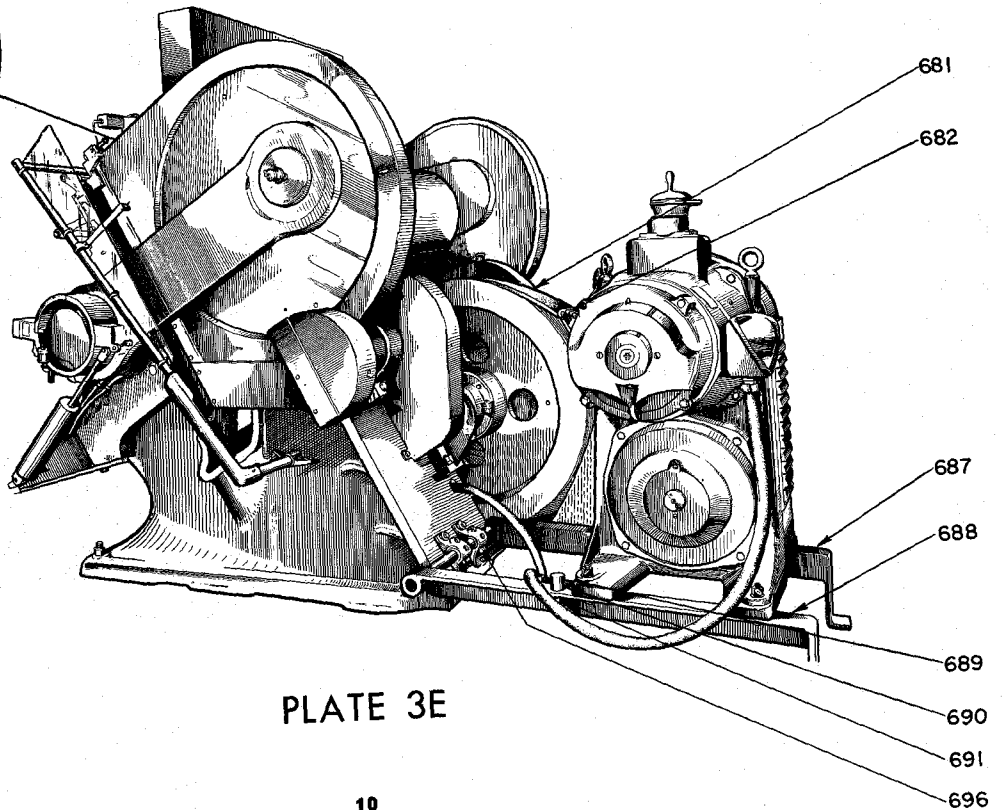 


PLATE 3E


FRAME, RIGHT REAR ASSEMBLY

 PLATE 4

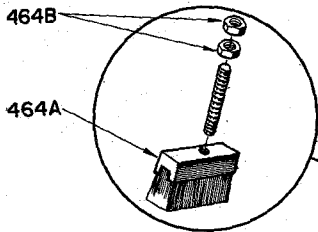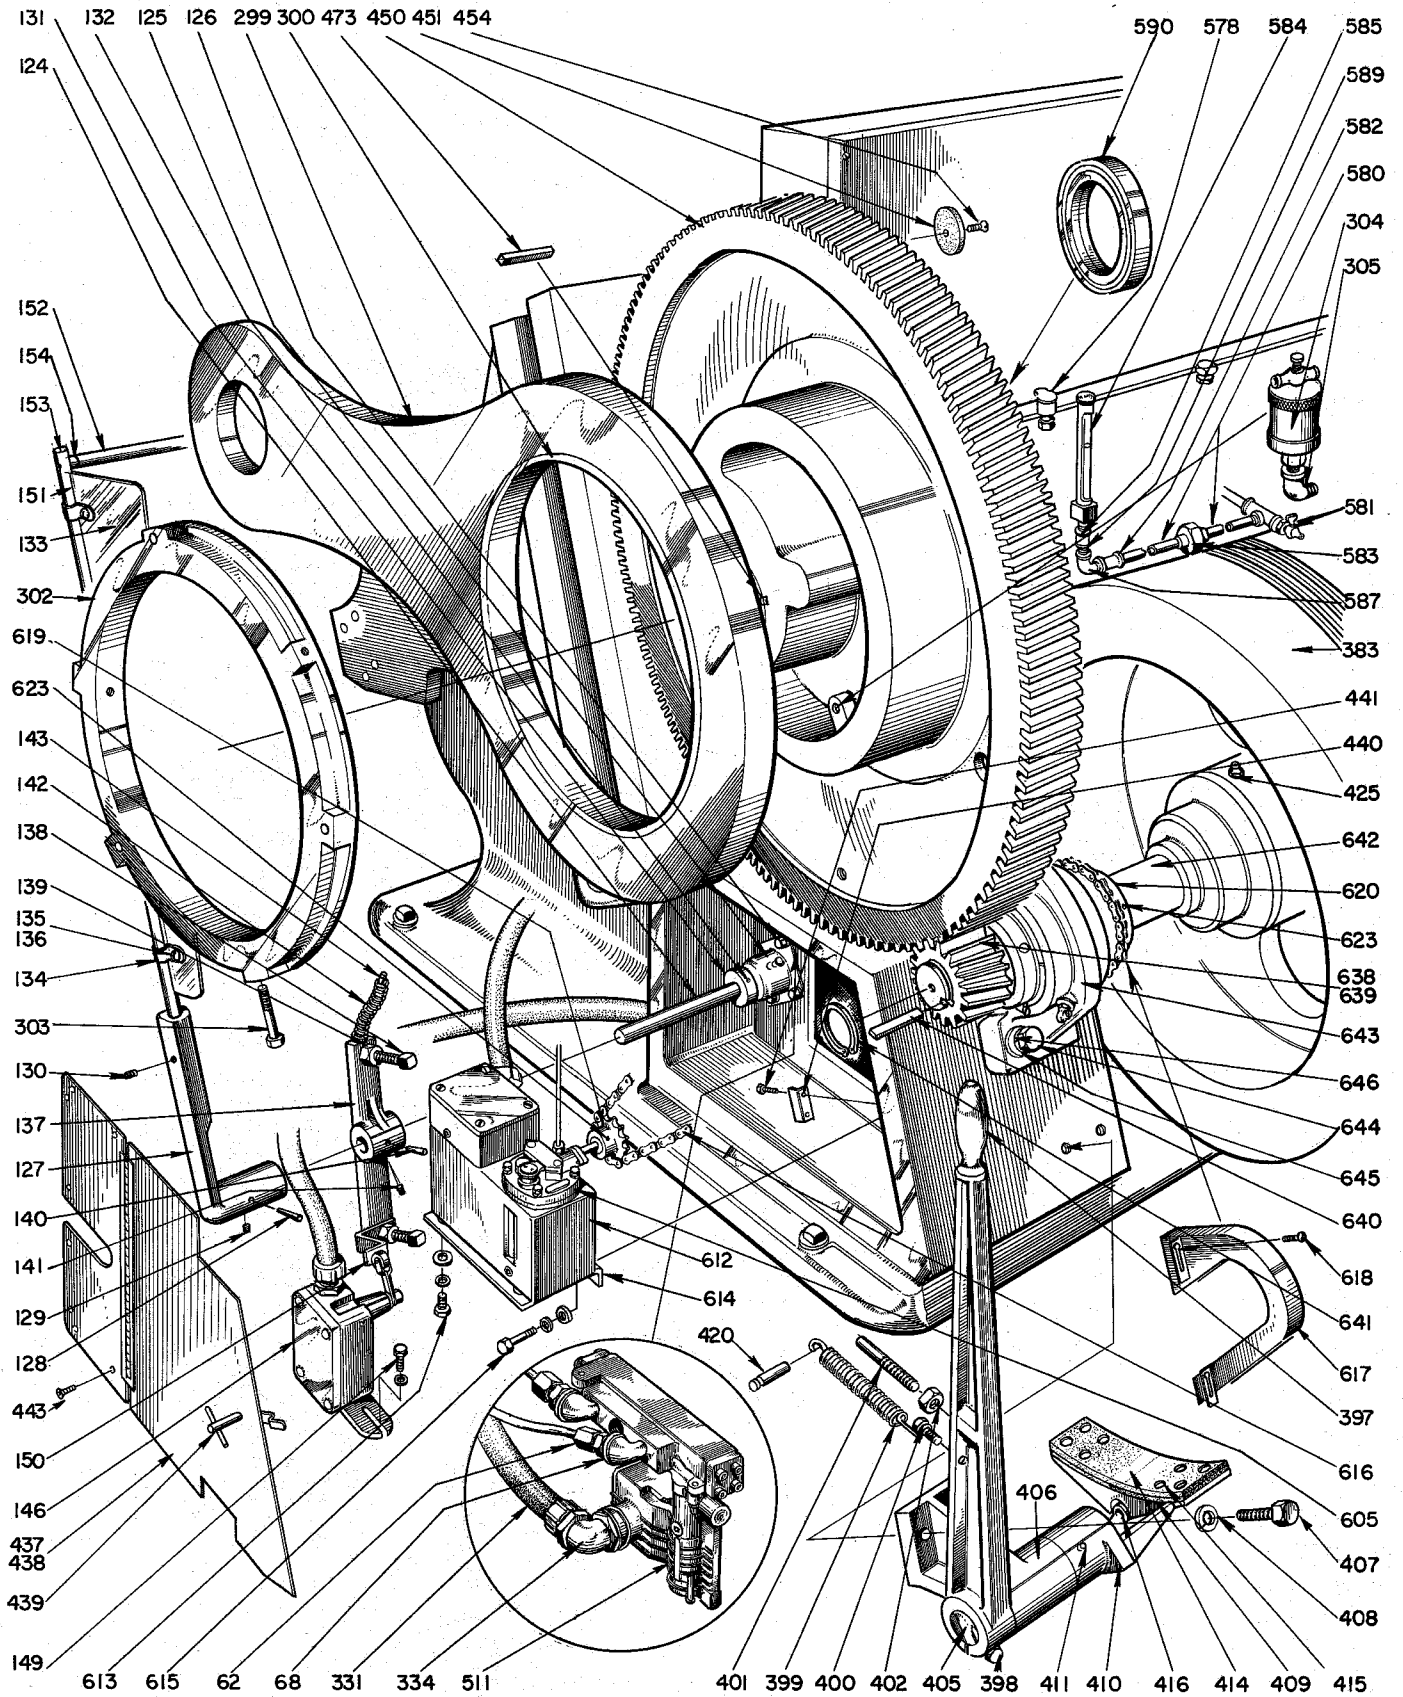


FRAME, LEFT REAR ASSEMBLY

 PLATE 5

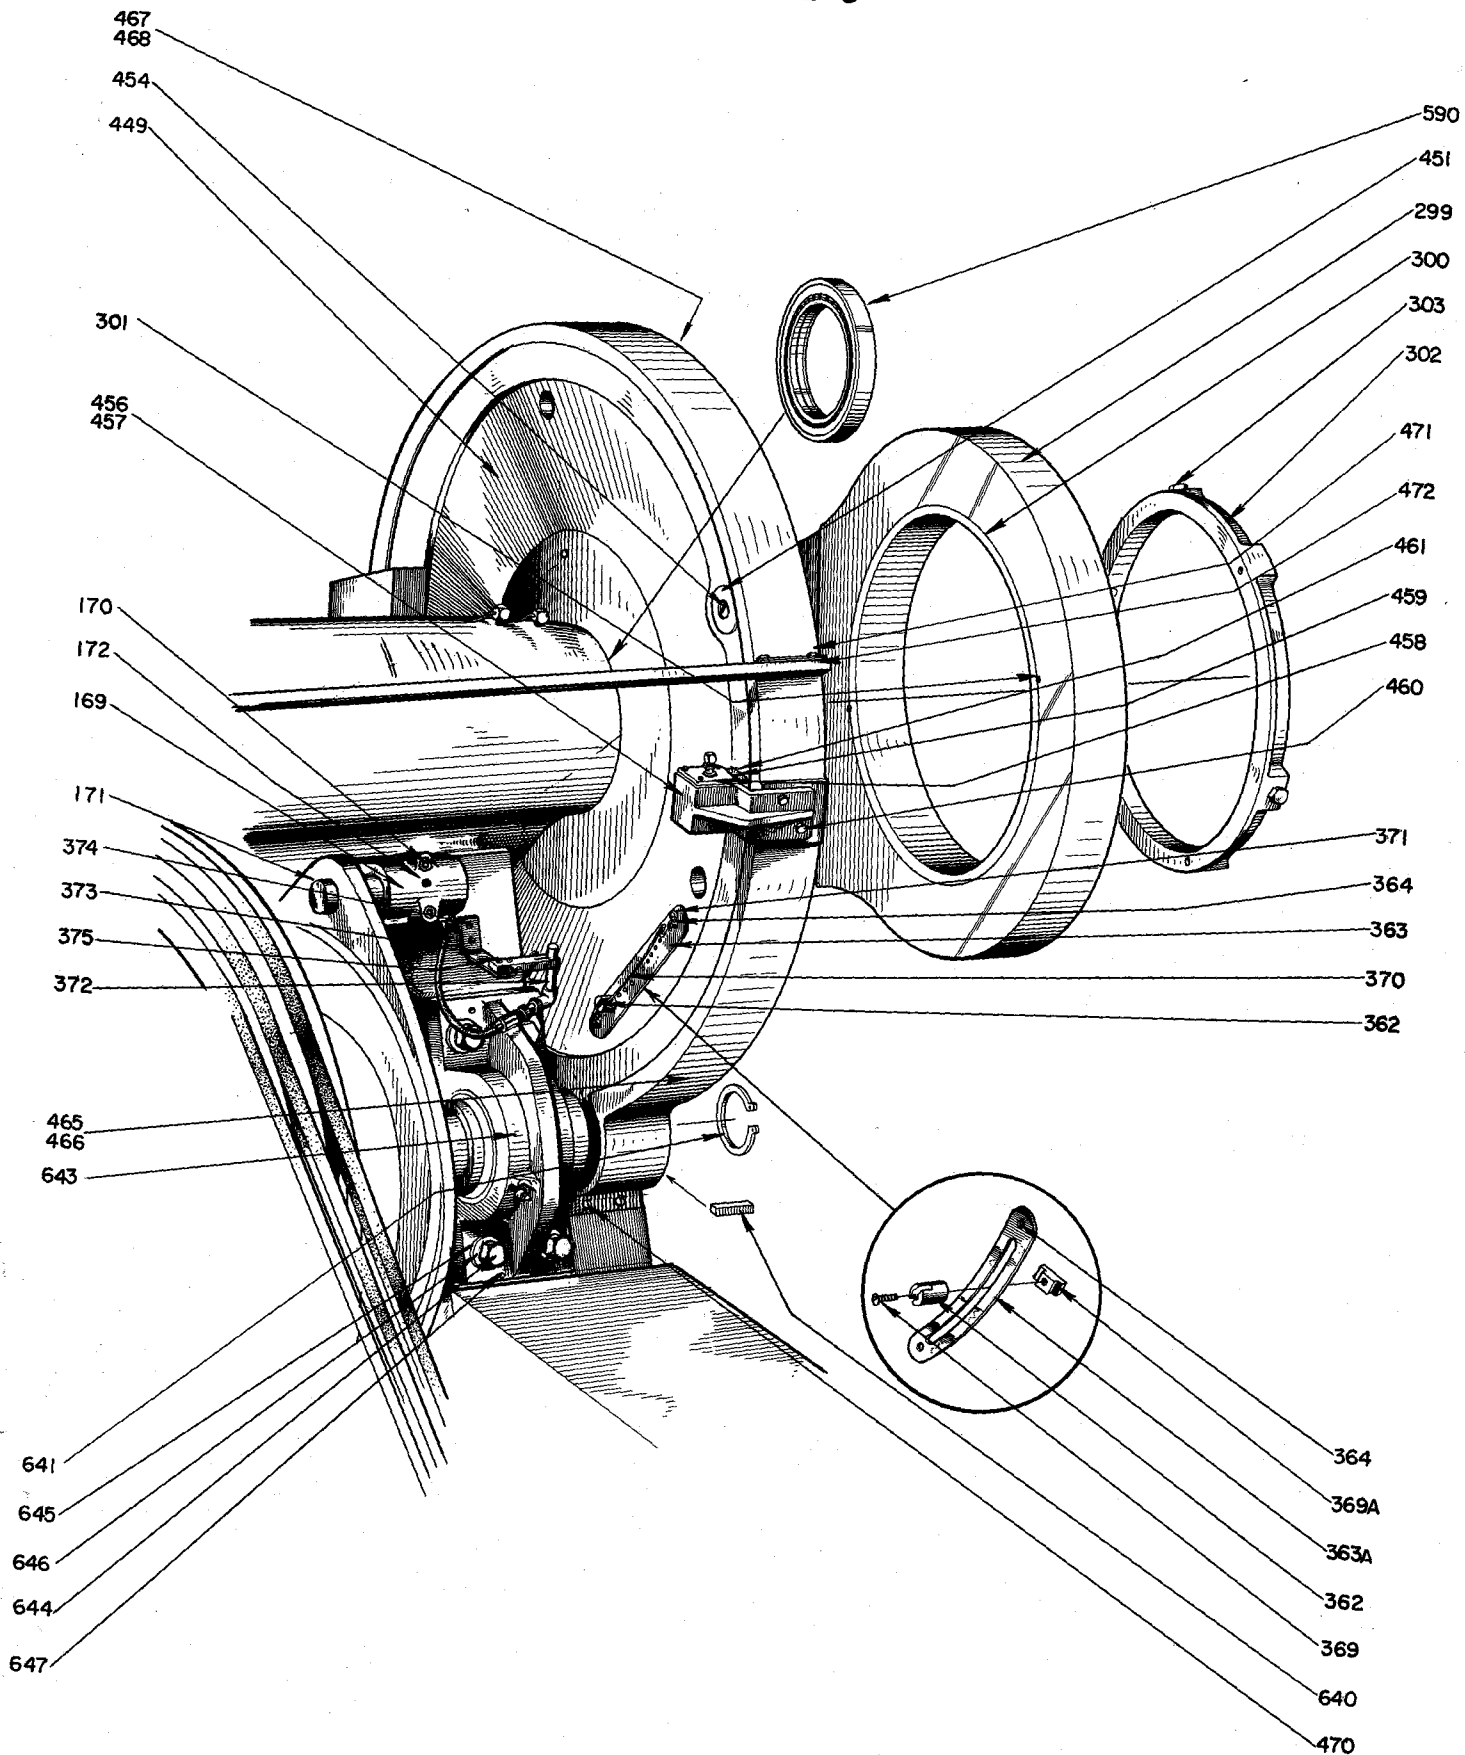


REAR RIGHT SIDE ASSEMBLY

 PLATE 6

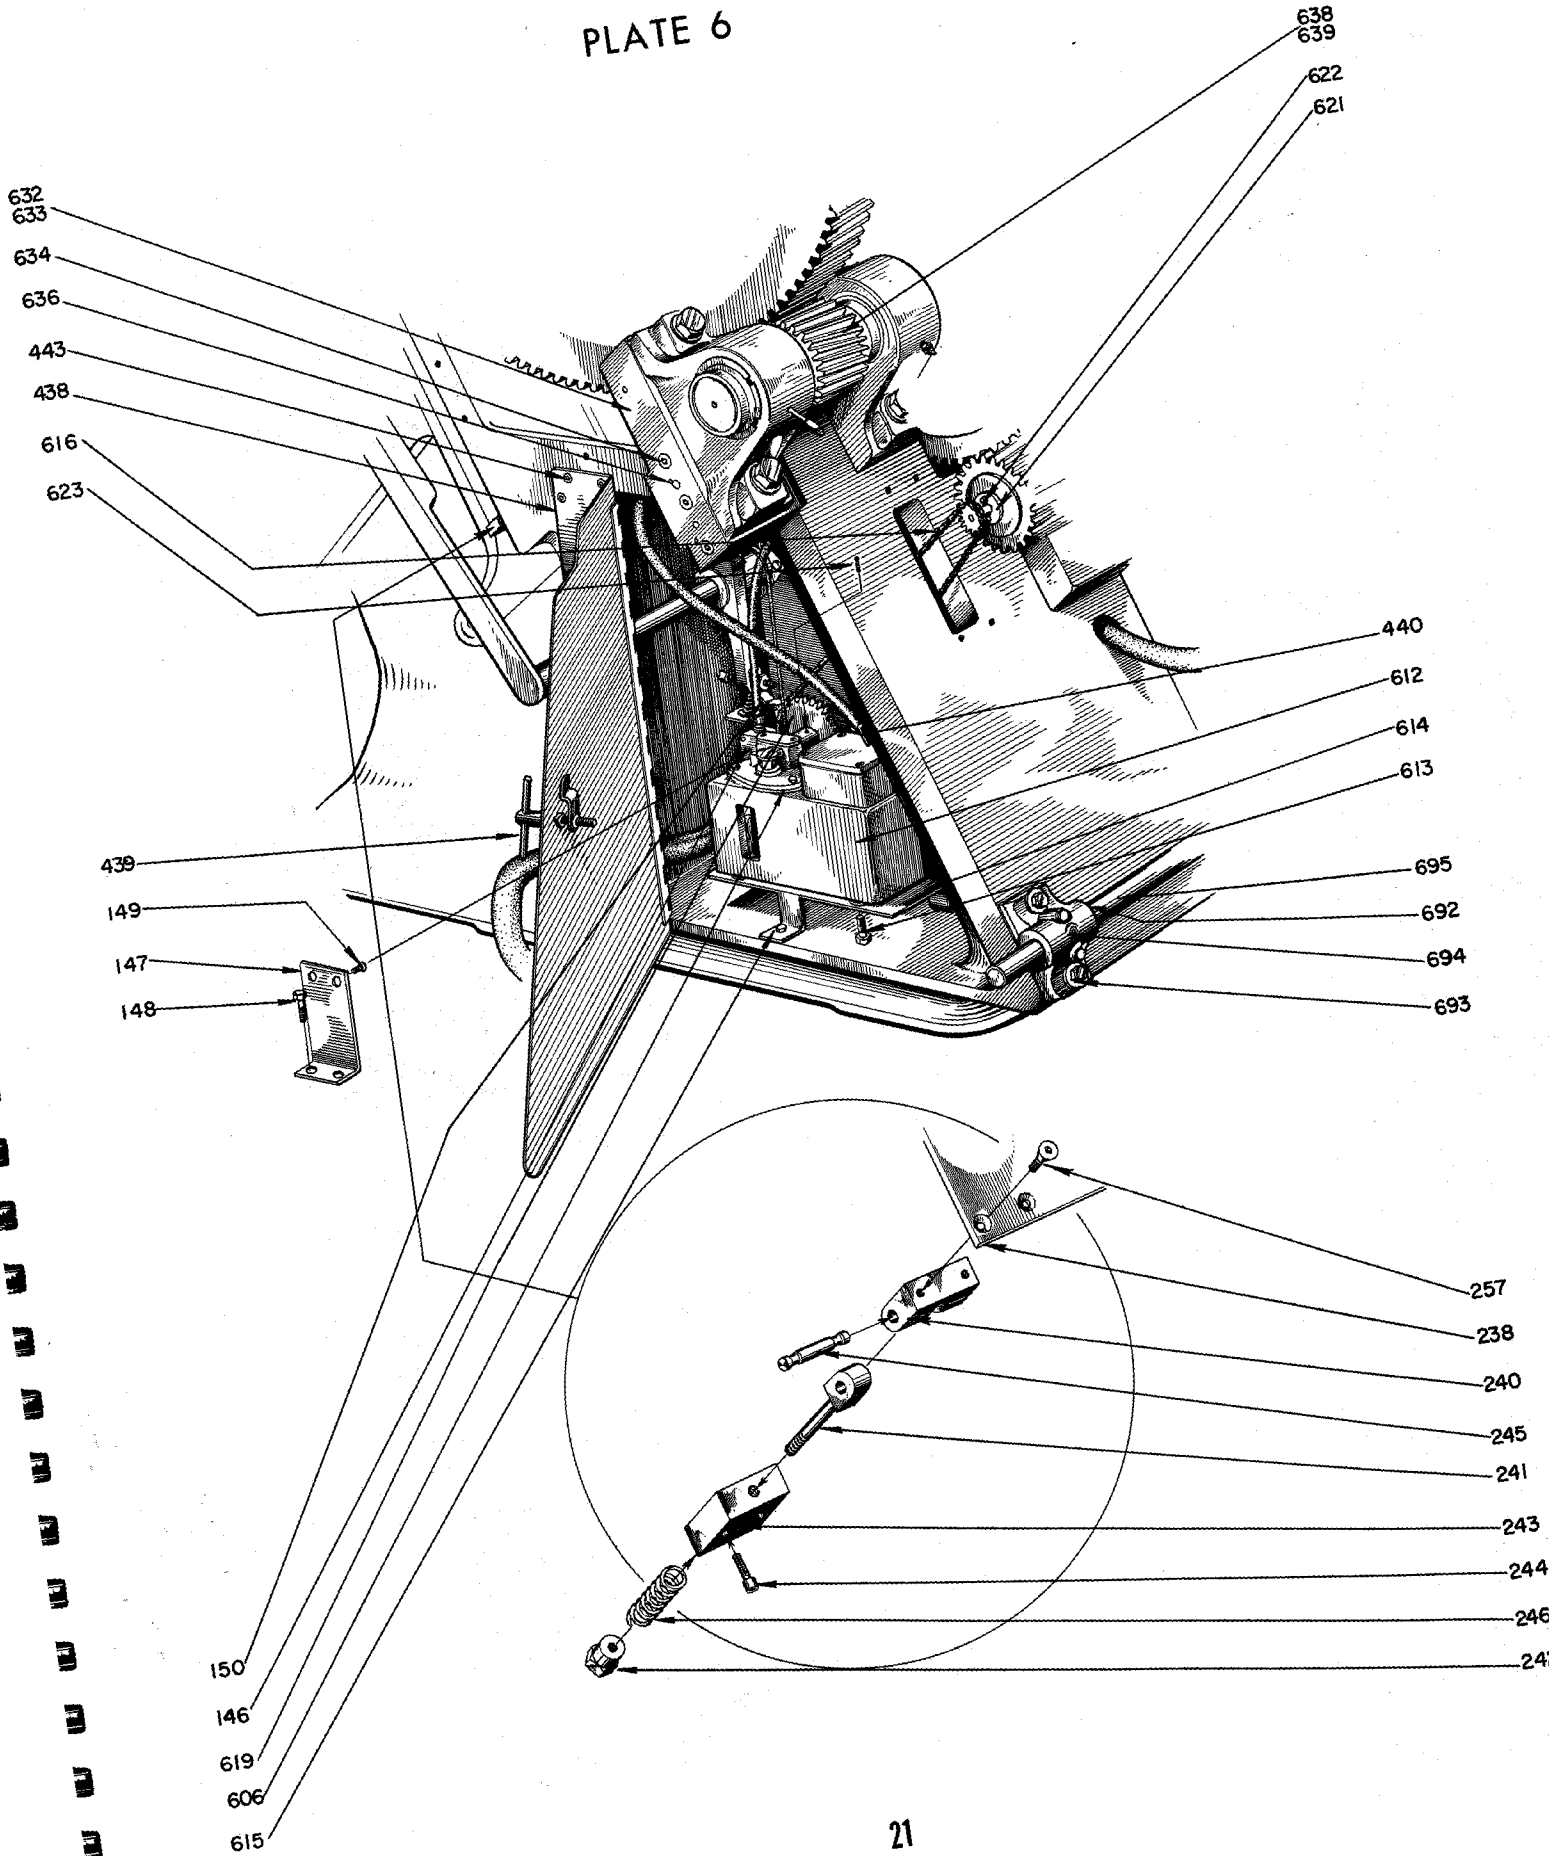


REAR LEFT SIDE ASSEMBLY

 PLATE 7

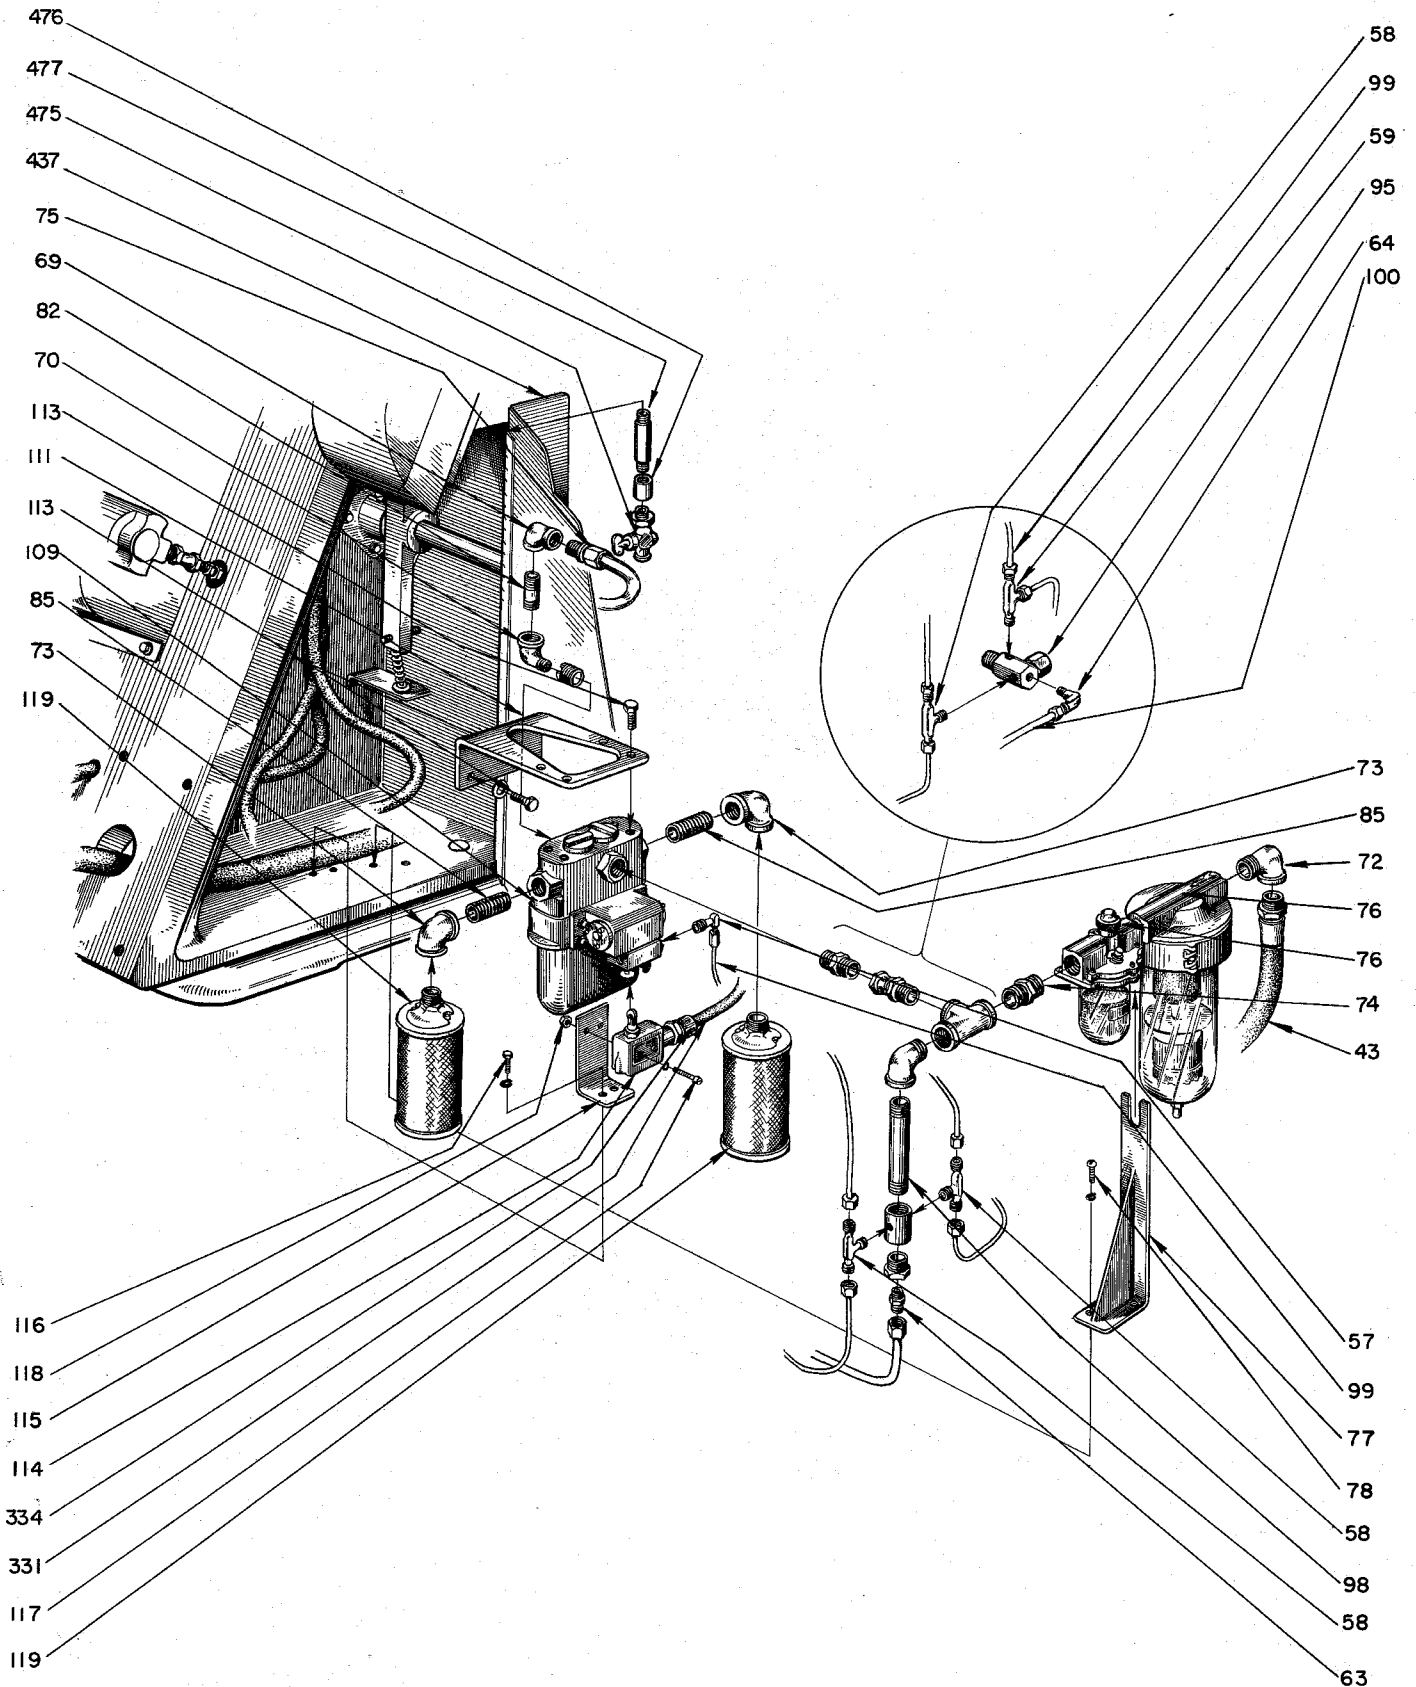


REAR LEFT SIDE ASSEMBLY

 PLATE 8

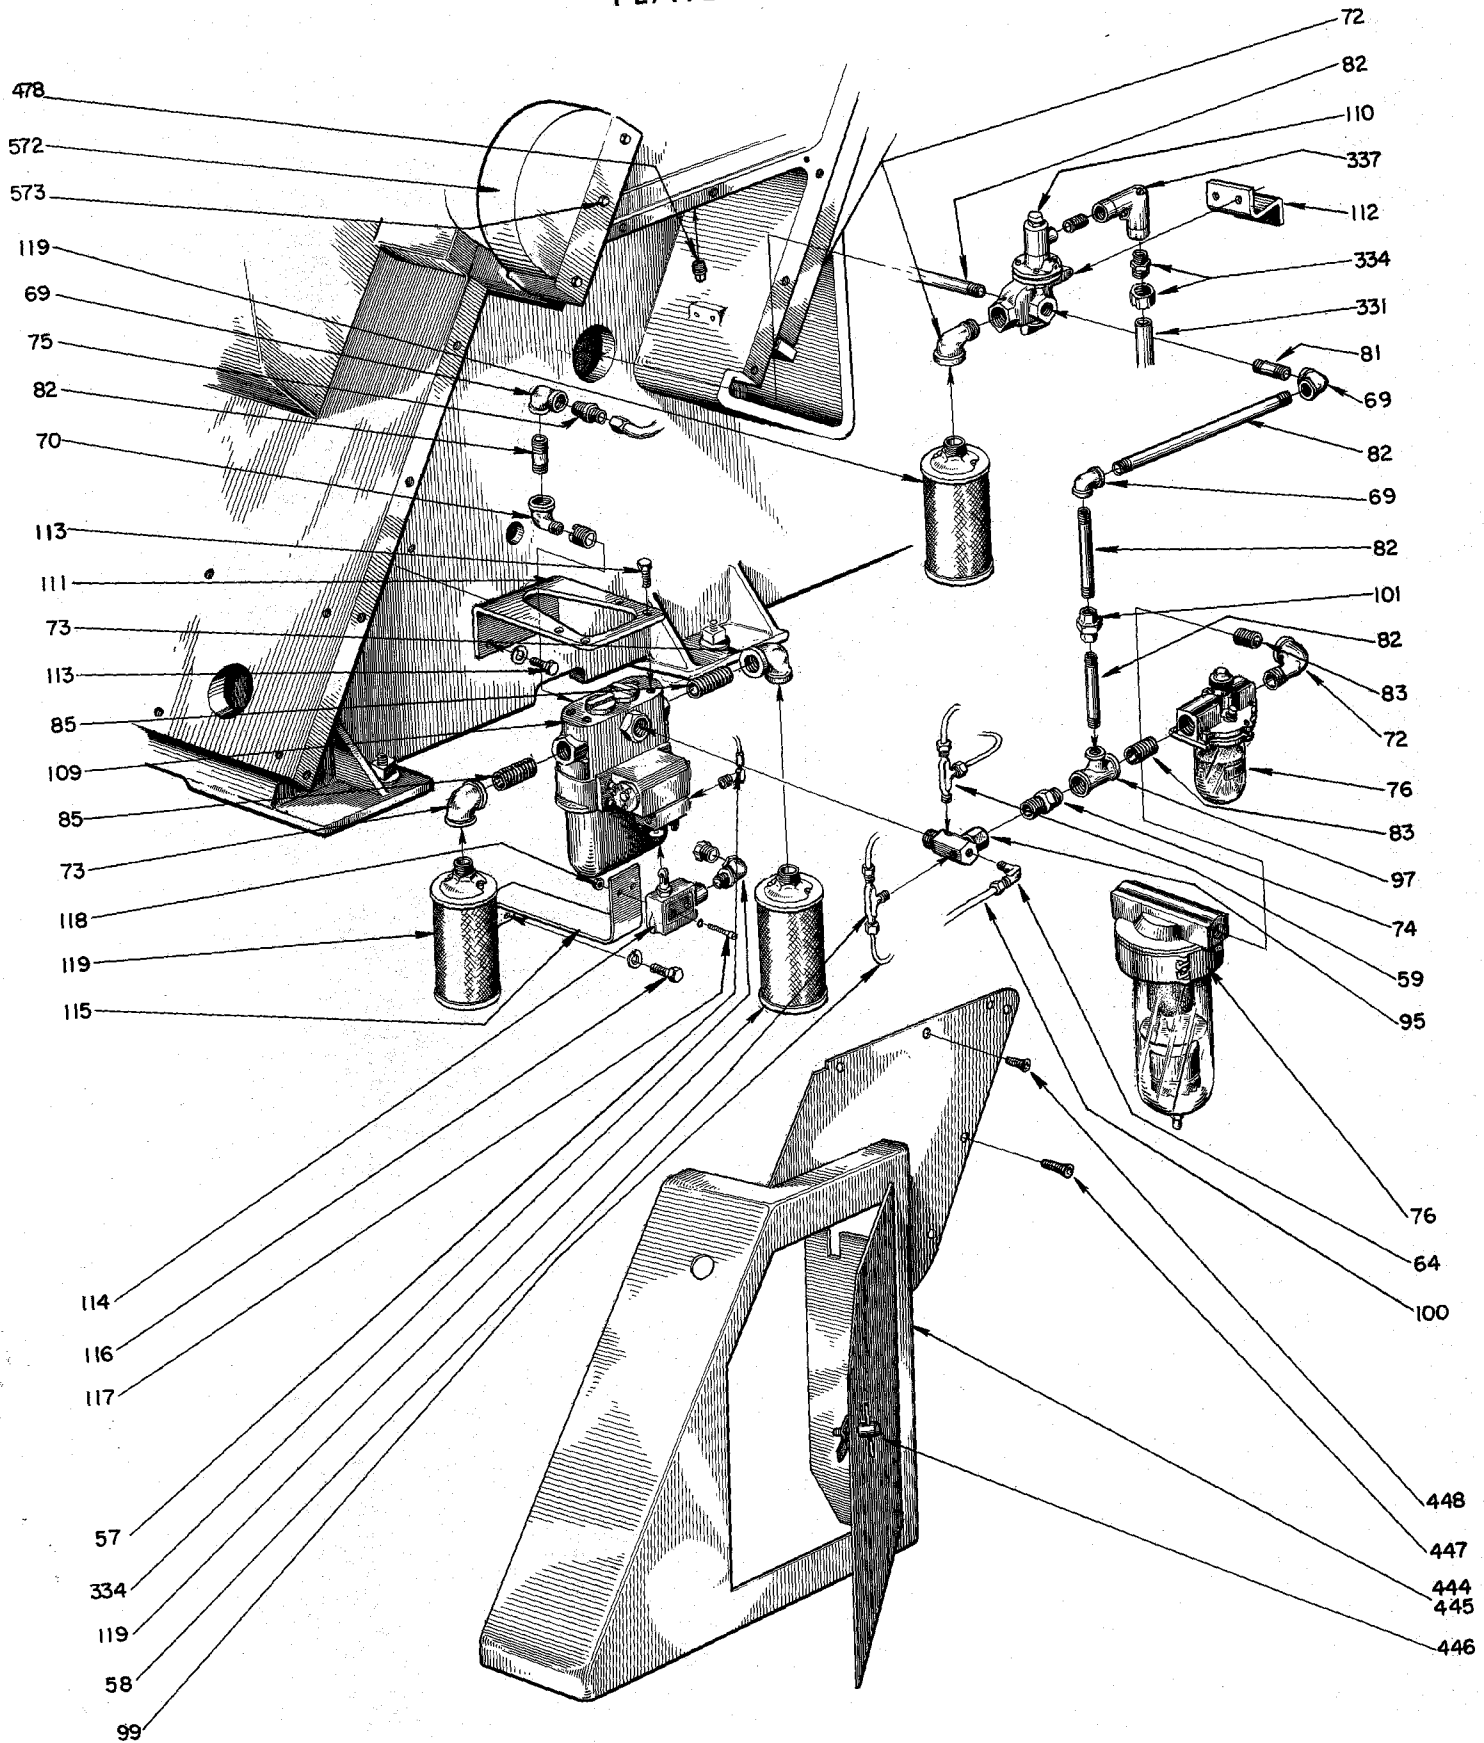


FRONT RIGHT SIDE ASSEMBLY

 PLATE 9

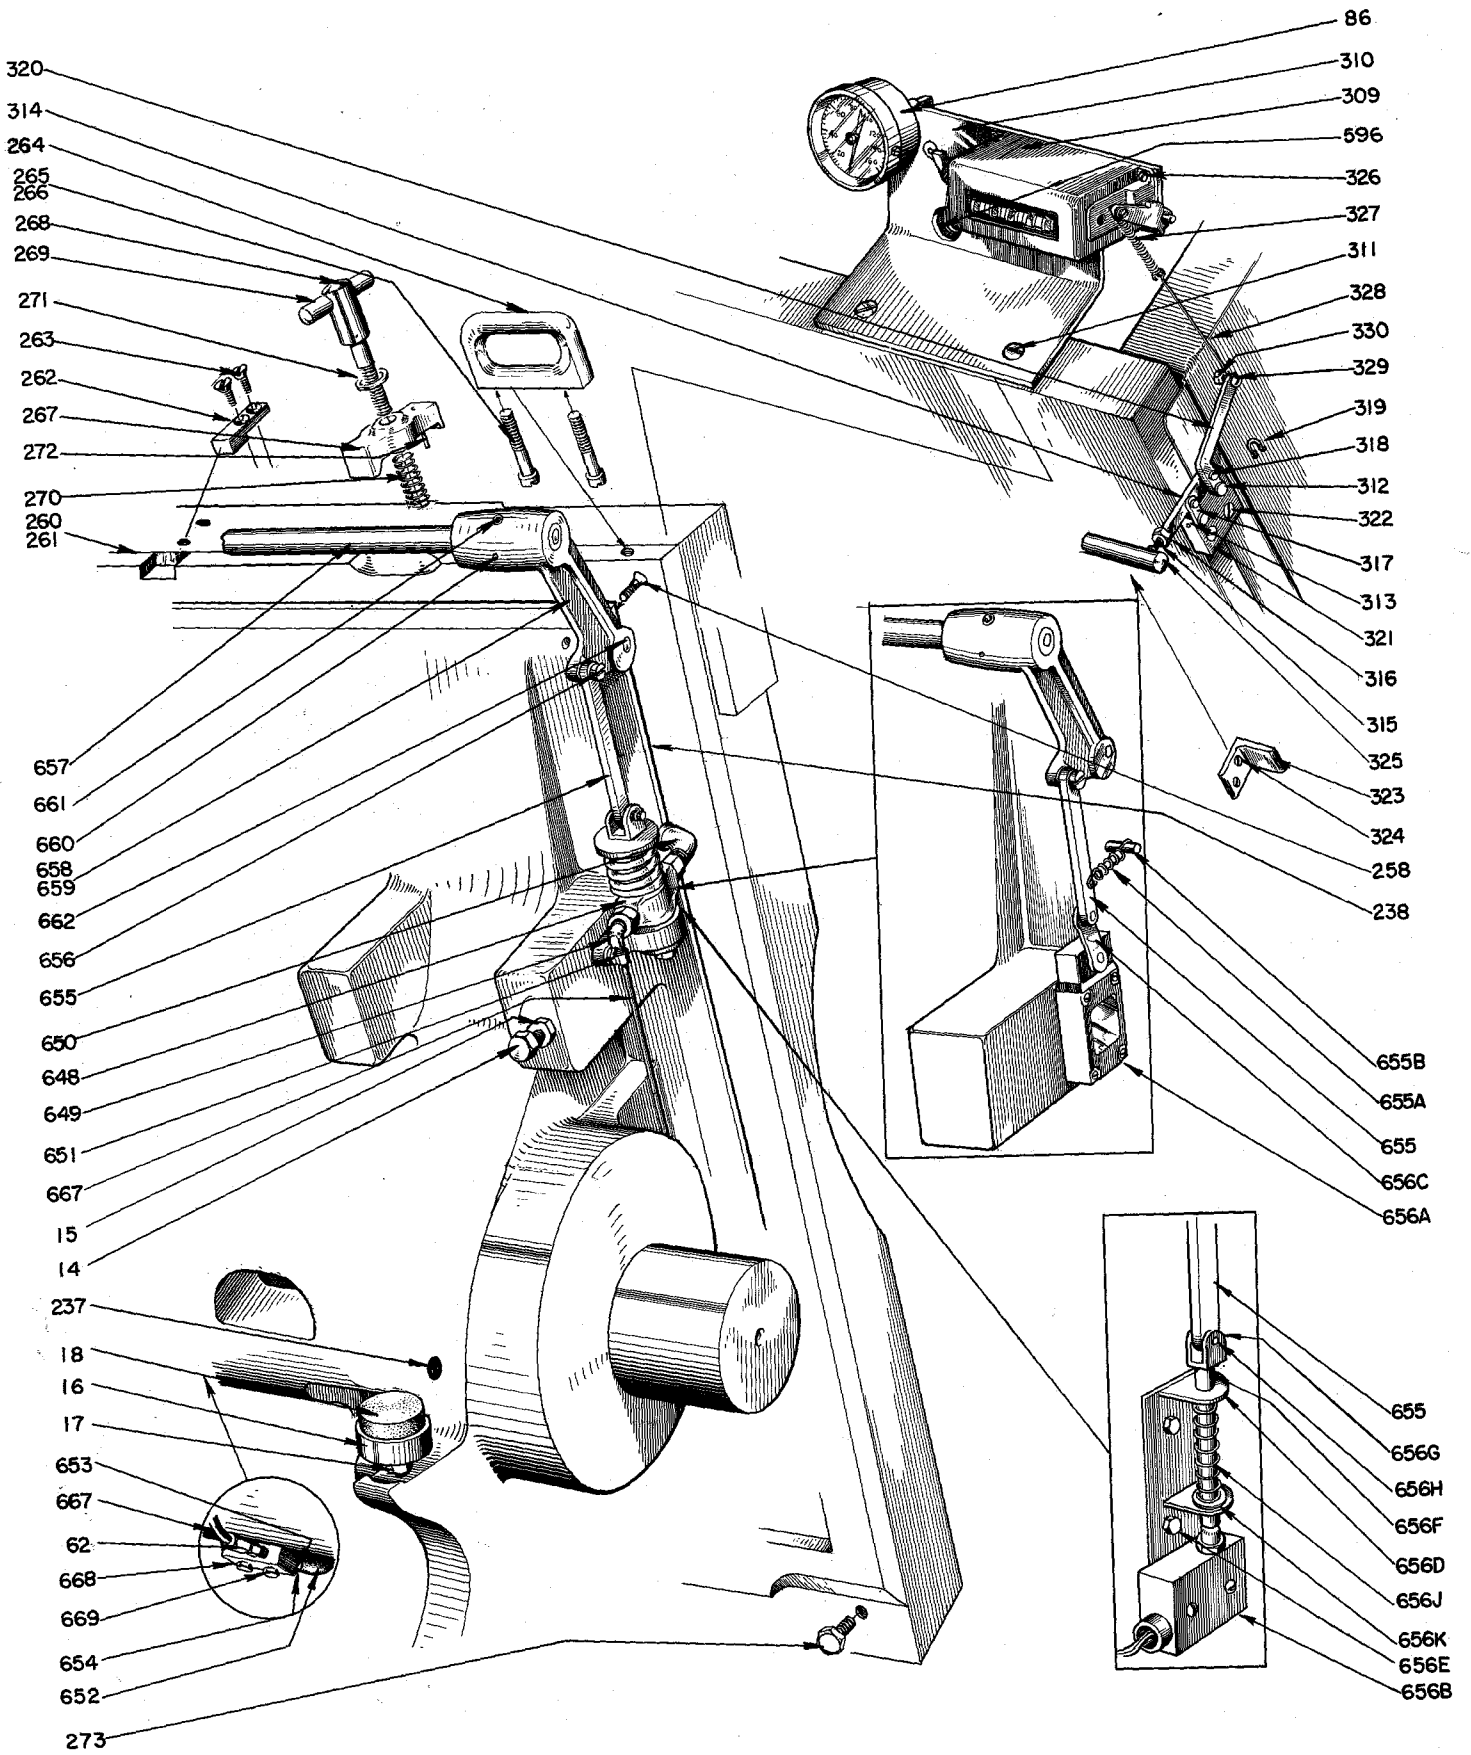


FRONT LEFT SIDE ASSEMBLY

 PLATE 10

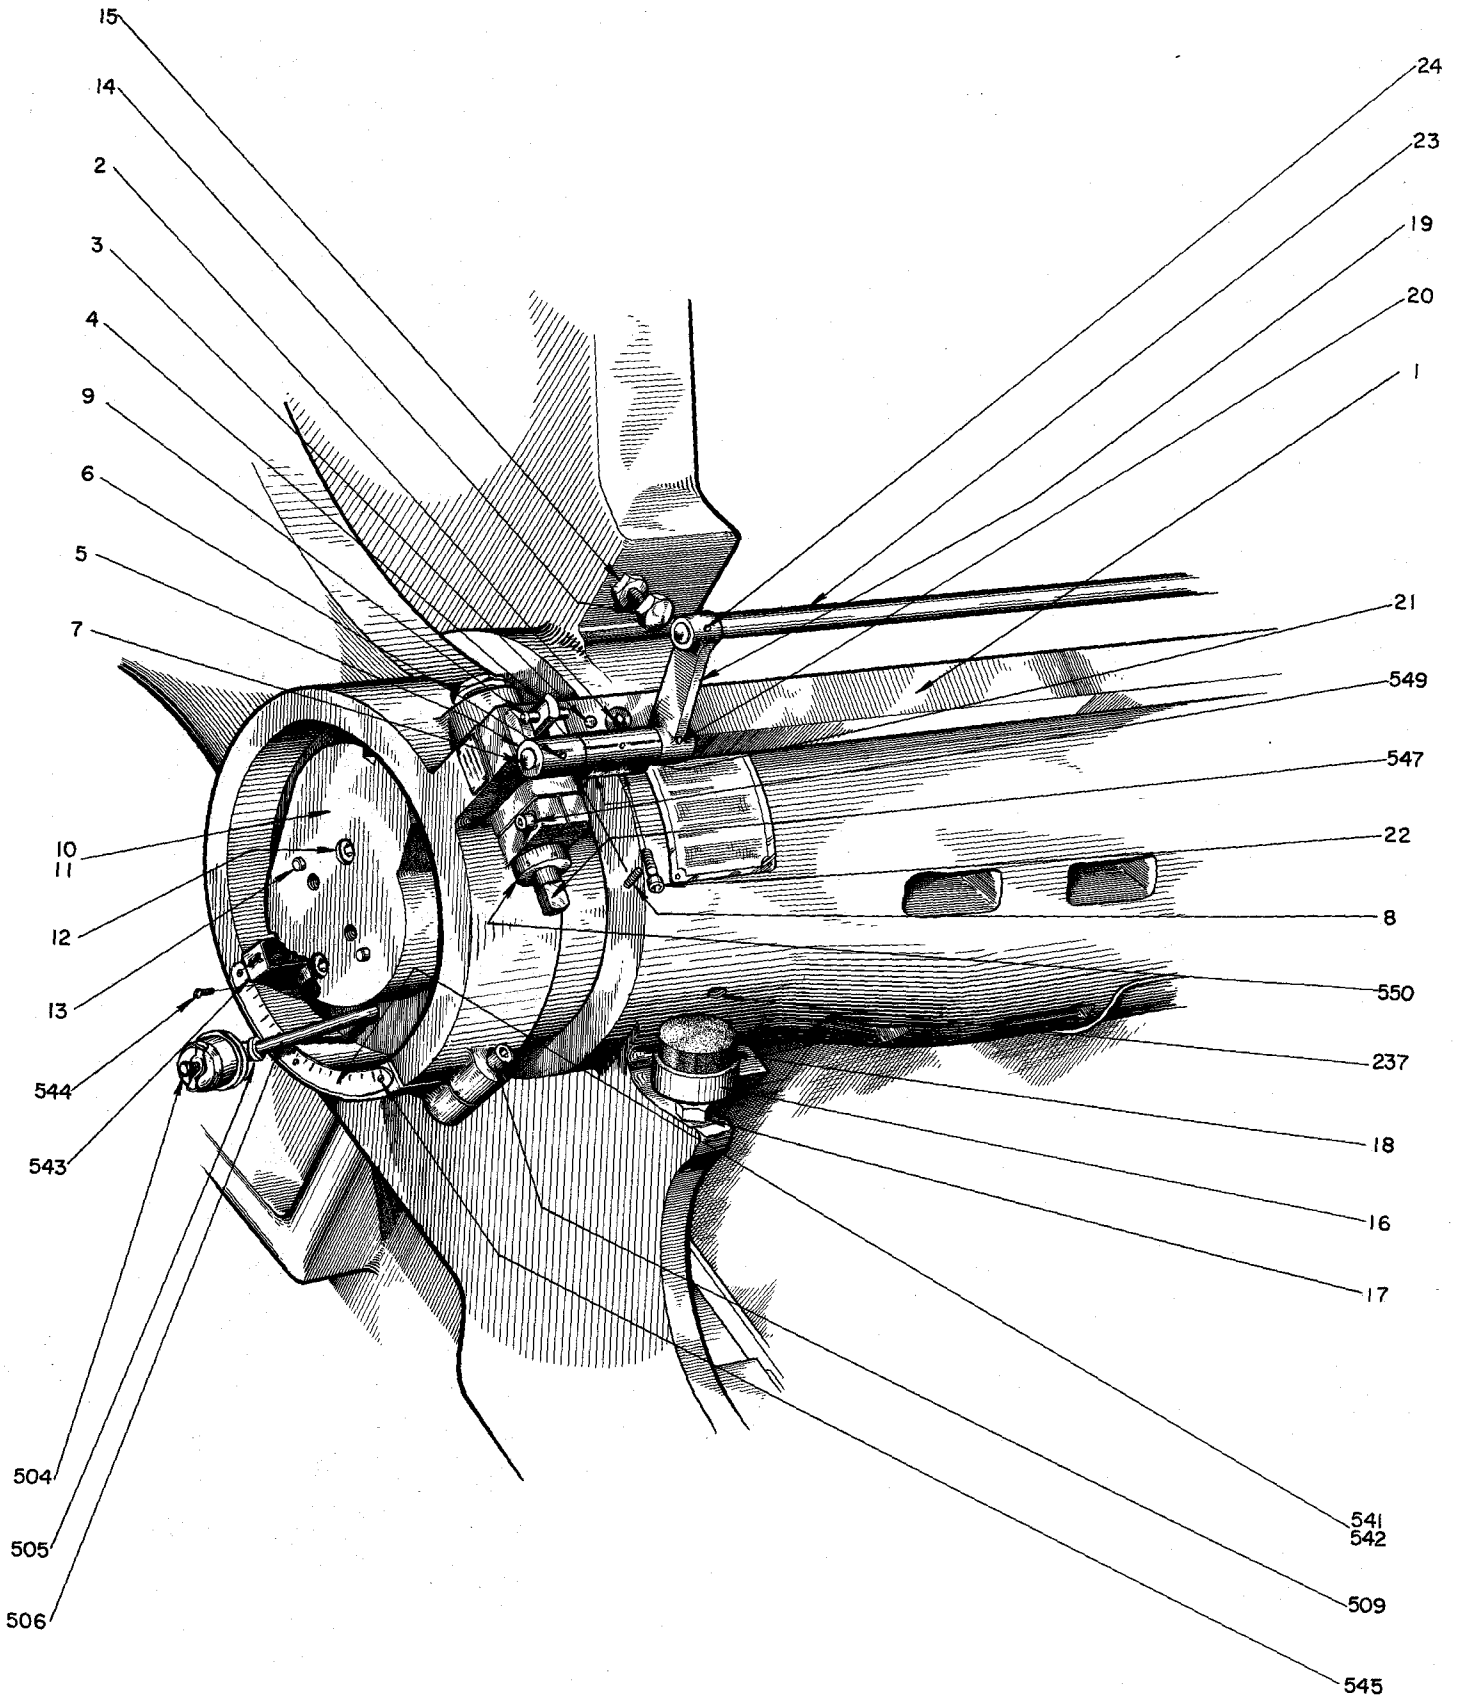


BRIDGE, RIGHT FRONT ASSEMBLY

 PLATE 11

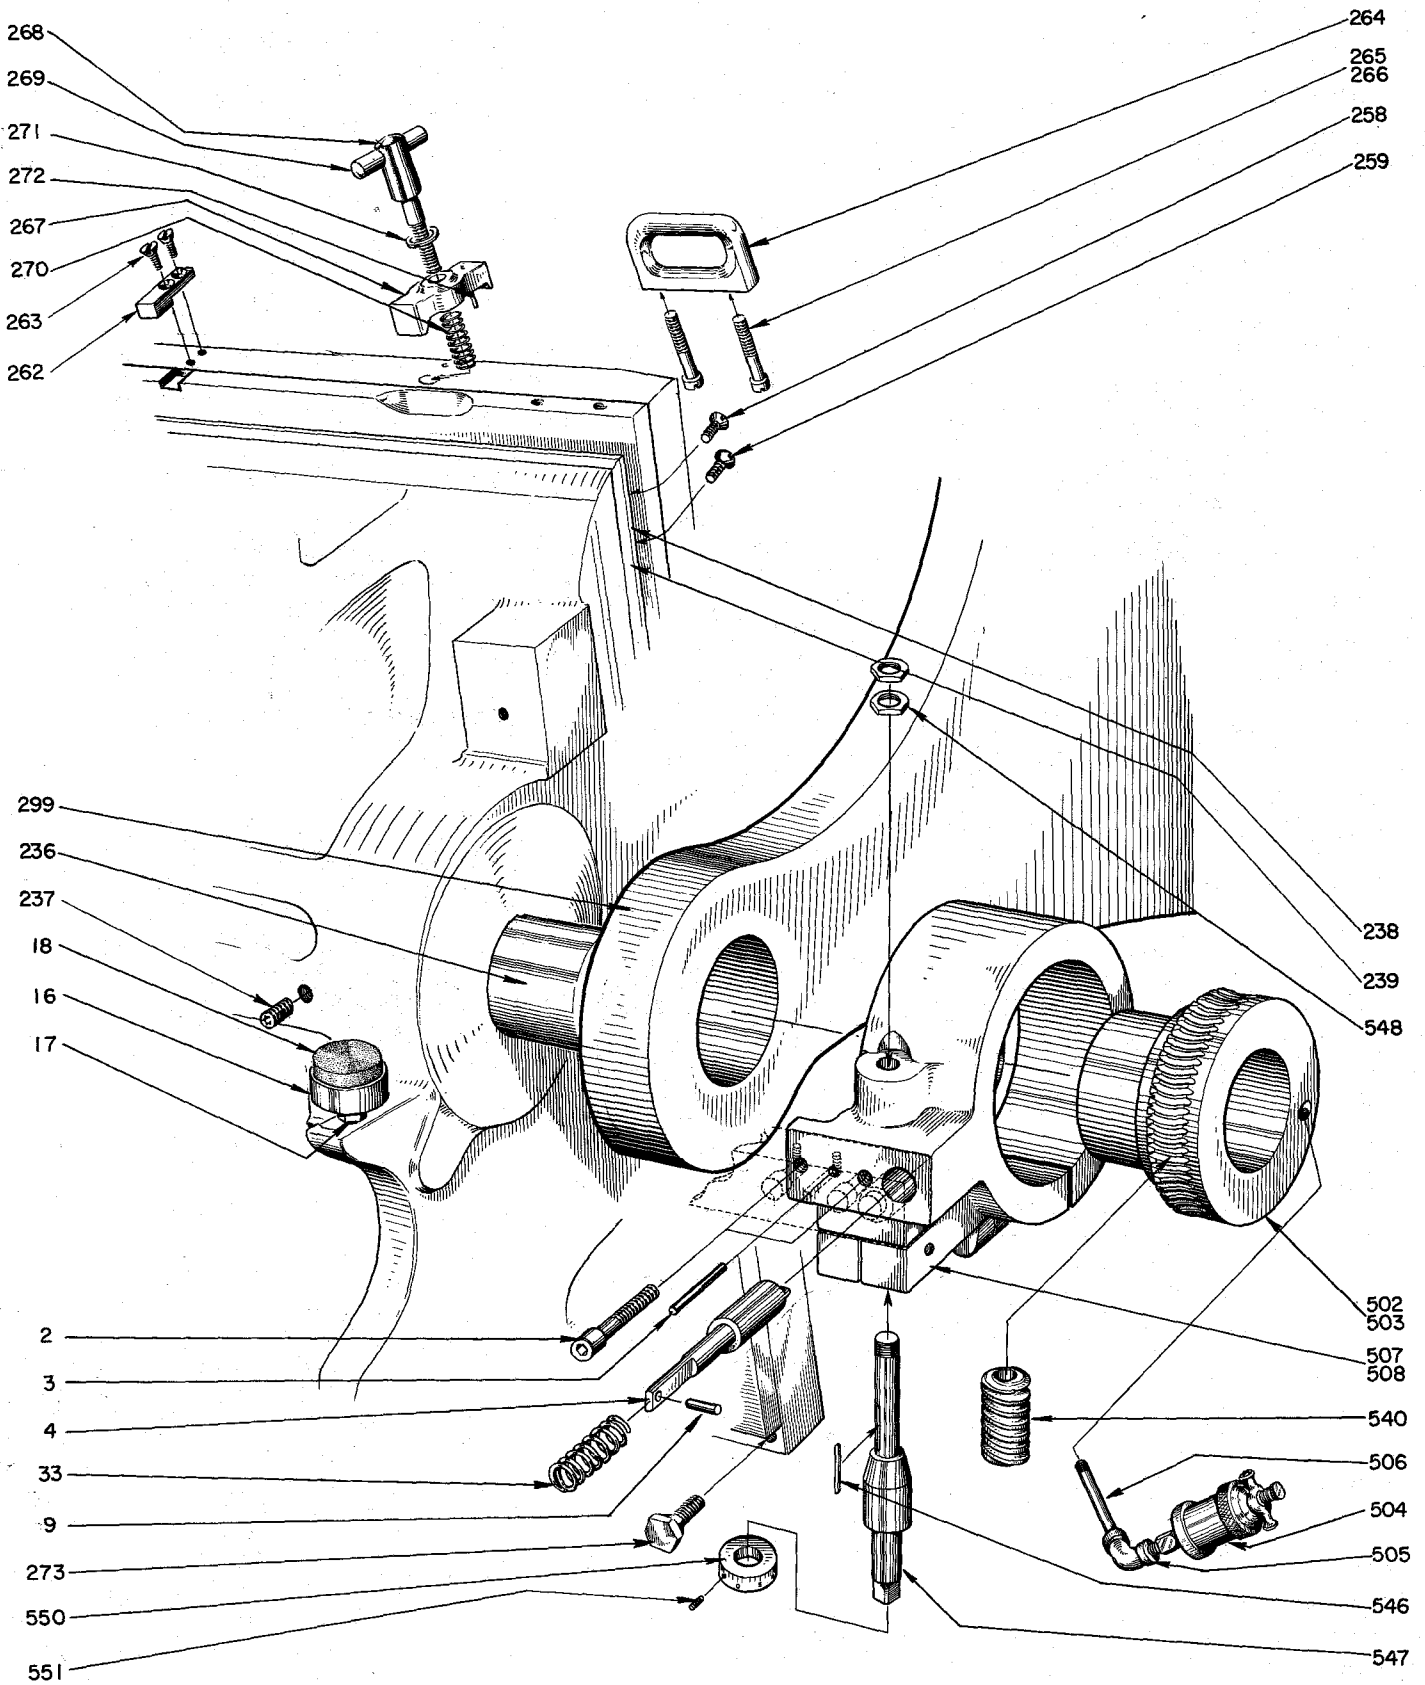


BRIDGE, LEFT FRONT ASSEMBLY

 PLATE 12

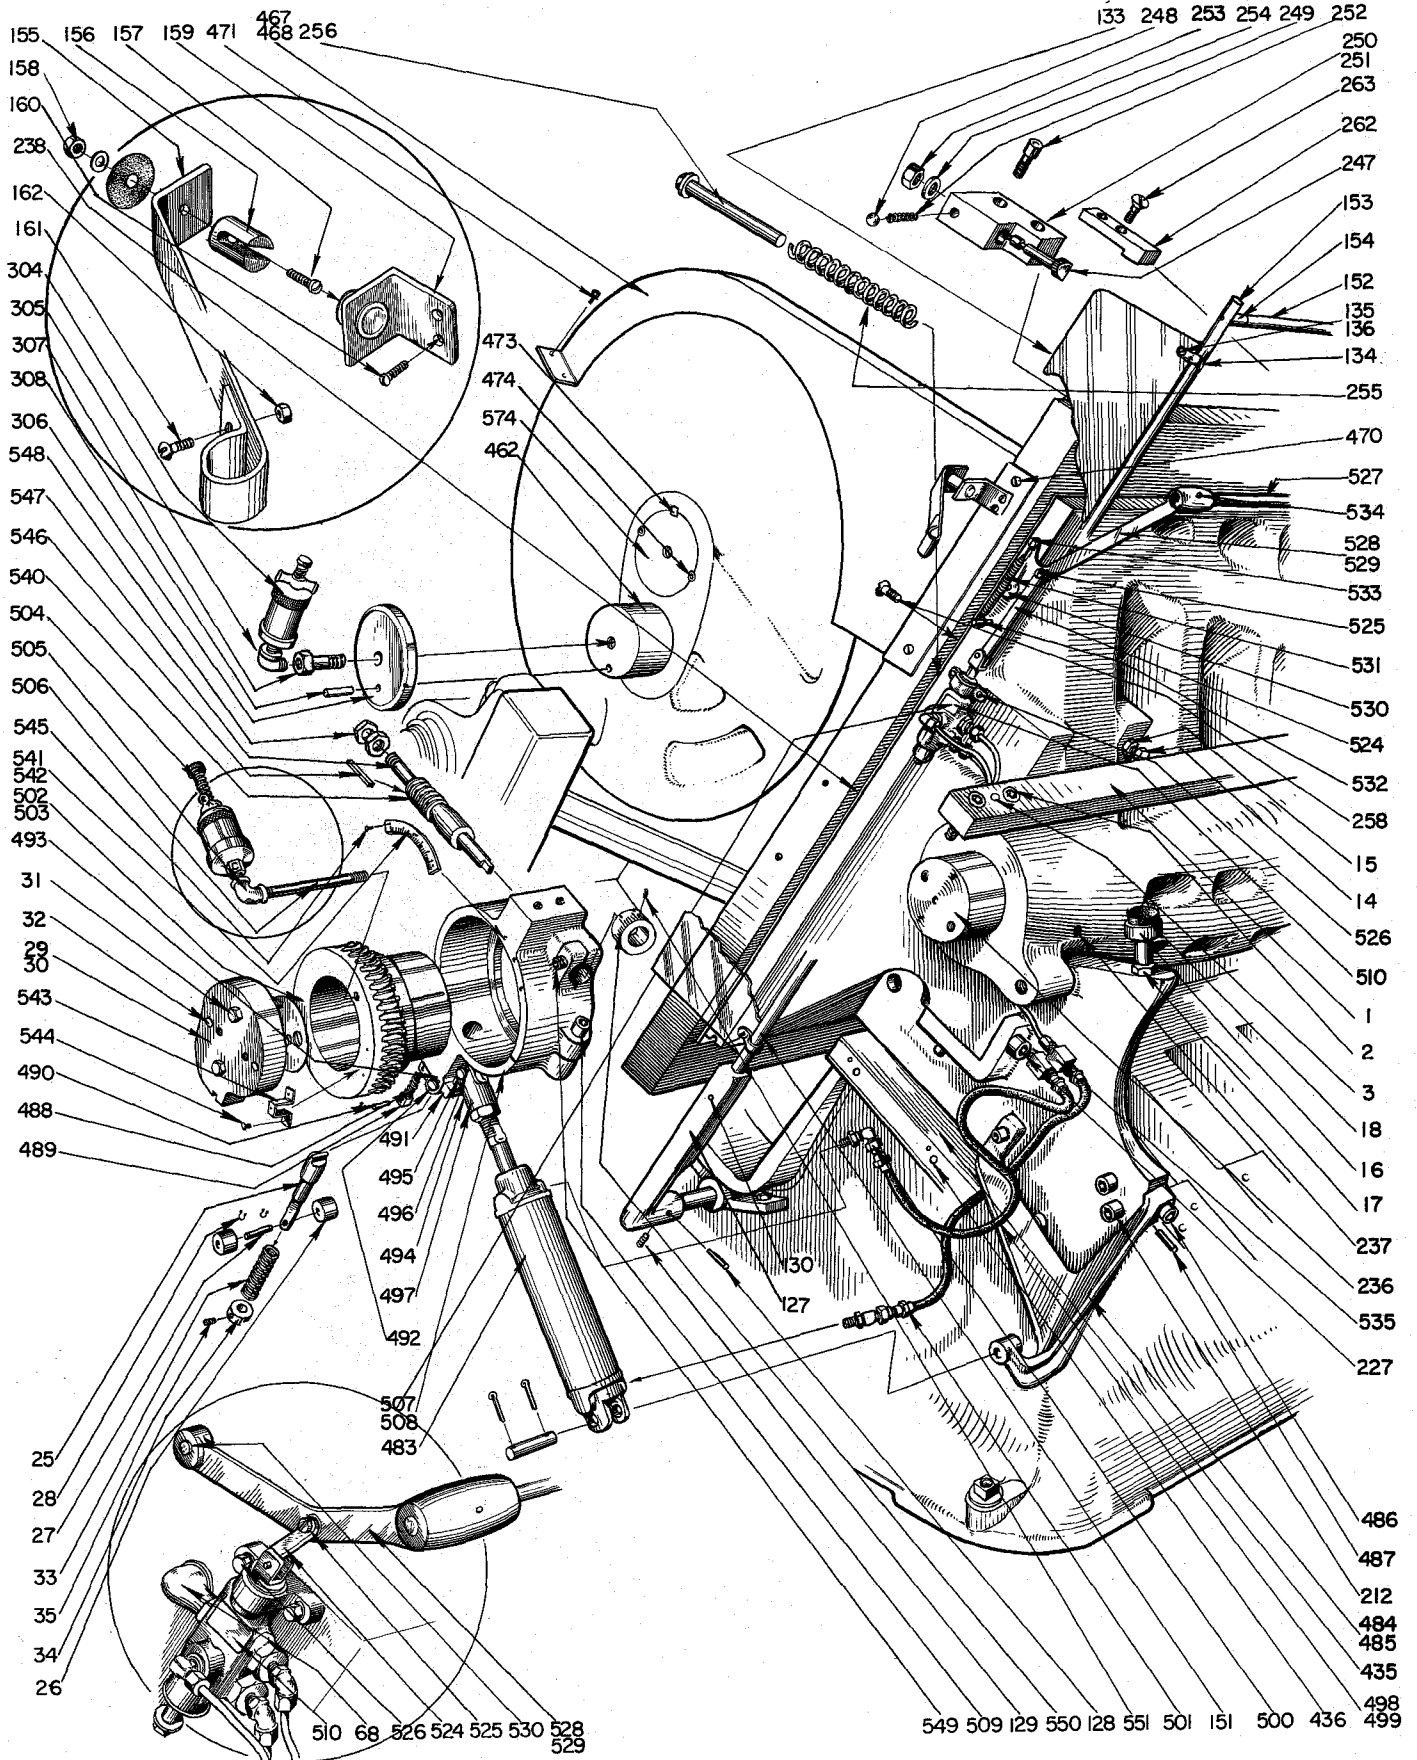


BRIDGE, LEFT FRONT AND CENTER ASSEMBLY

 PLATE 13

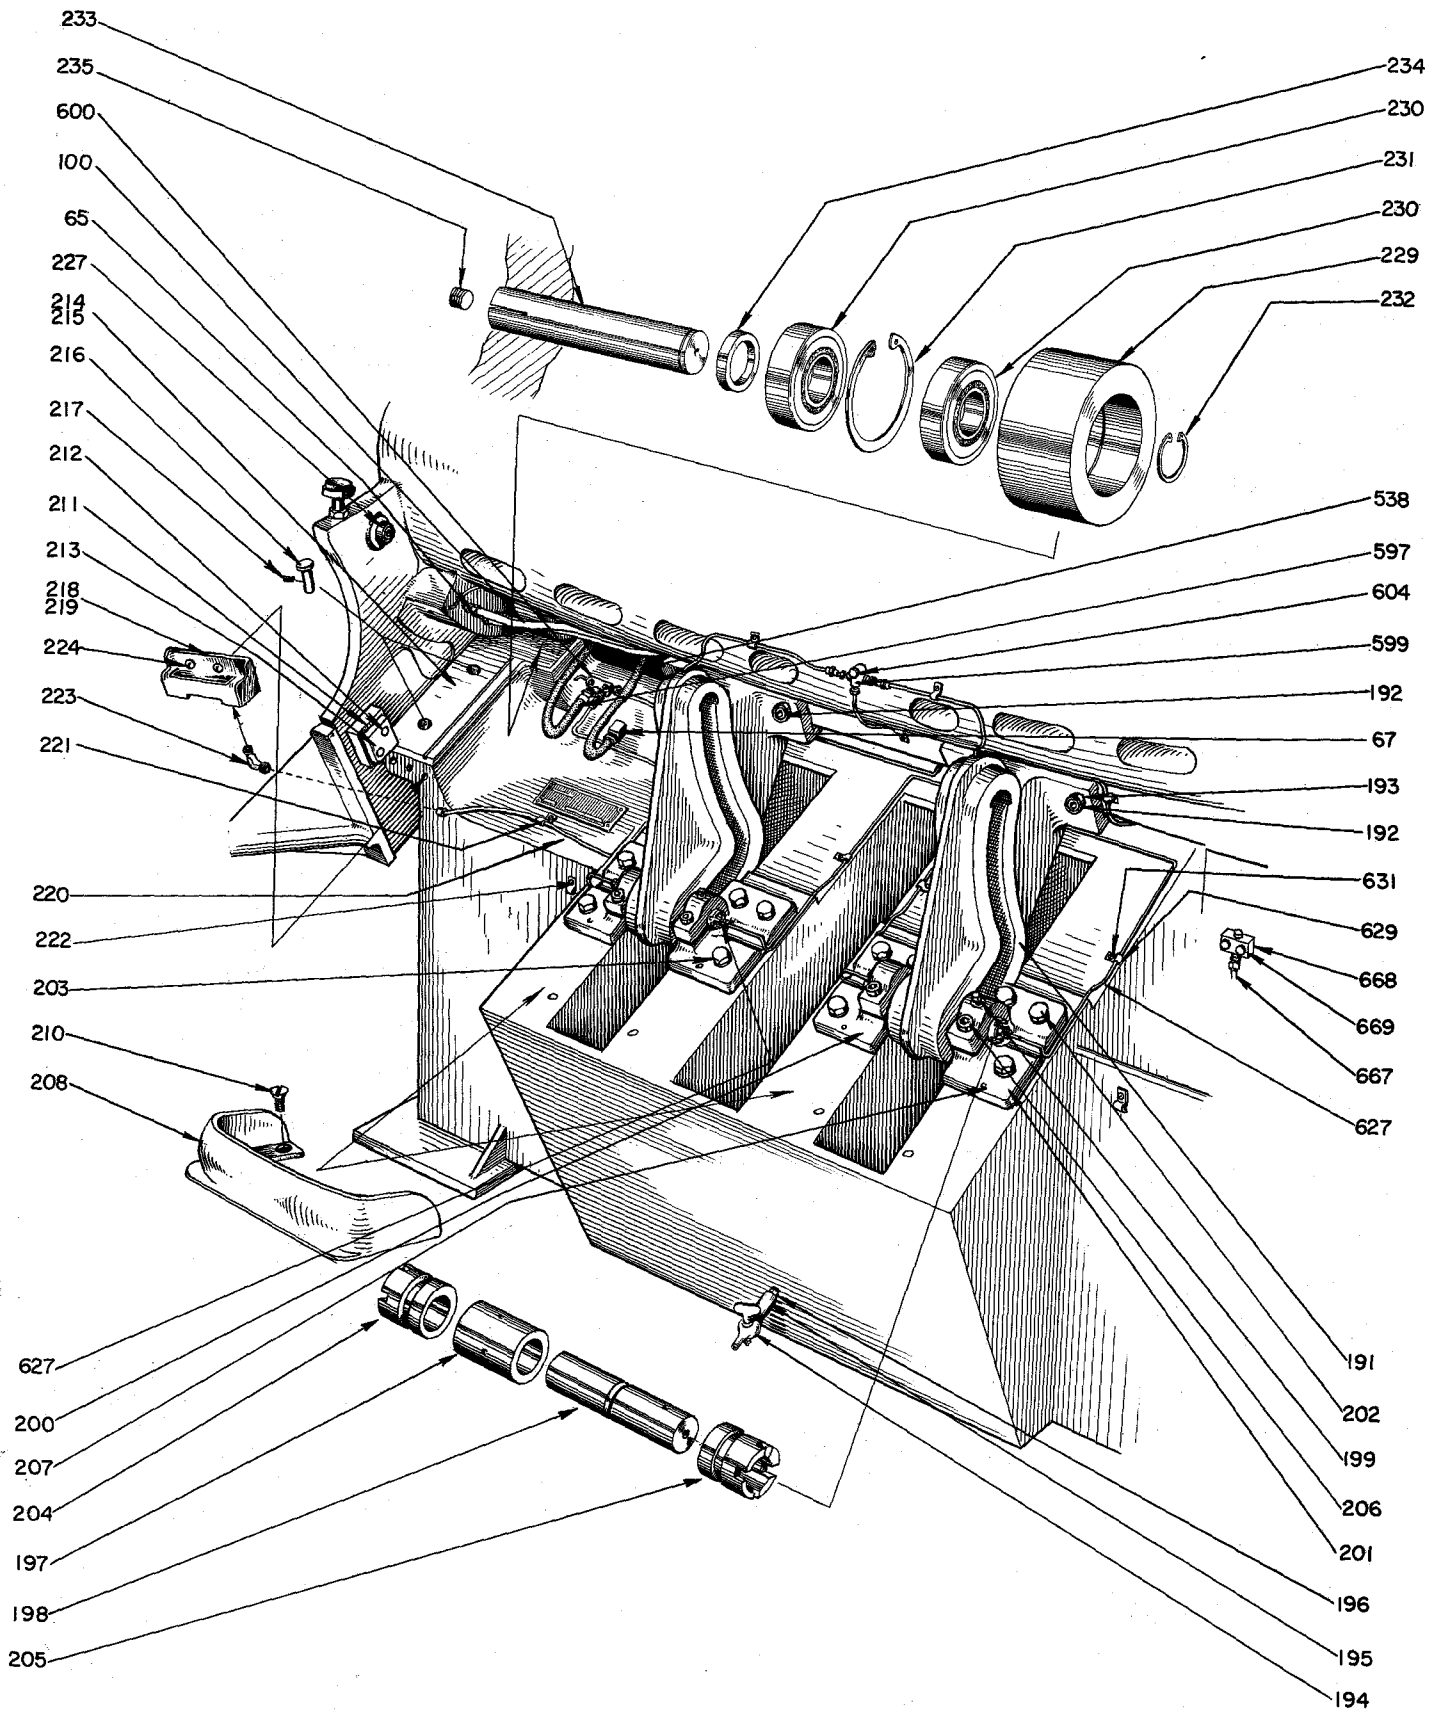


FLYWHEEL SHAFT AND AIR CLUTCH ASSEMBLY

 PLATE 14

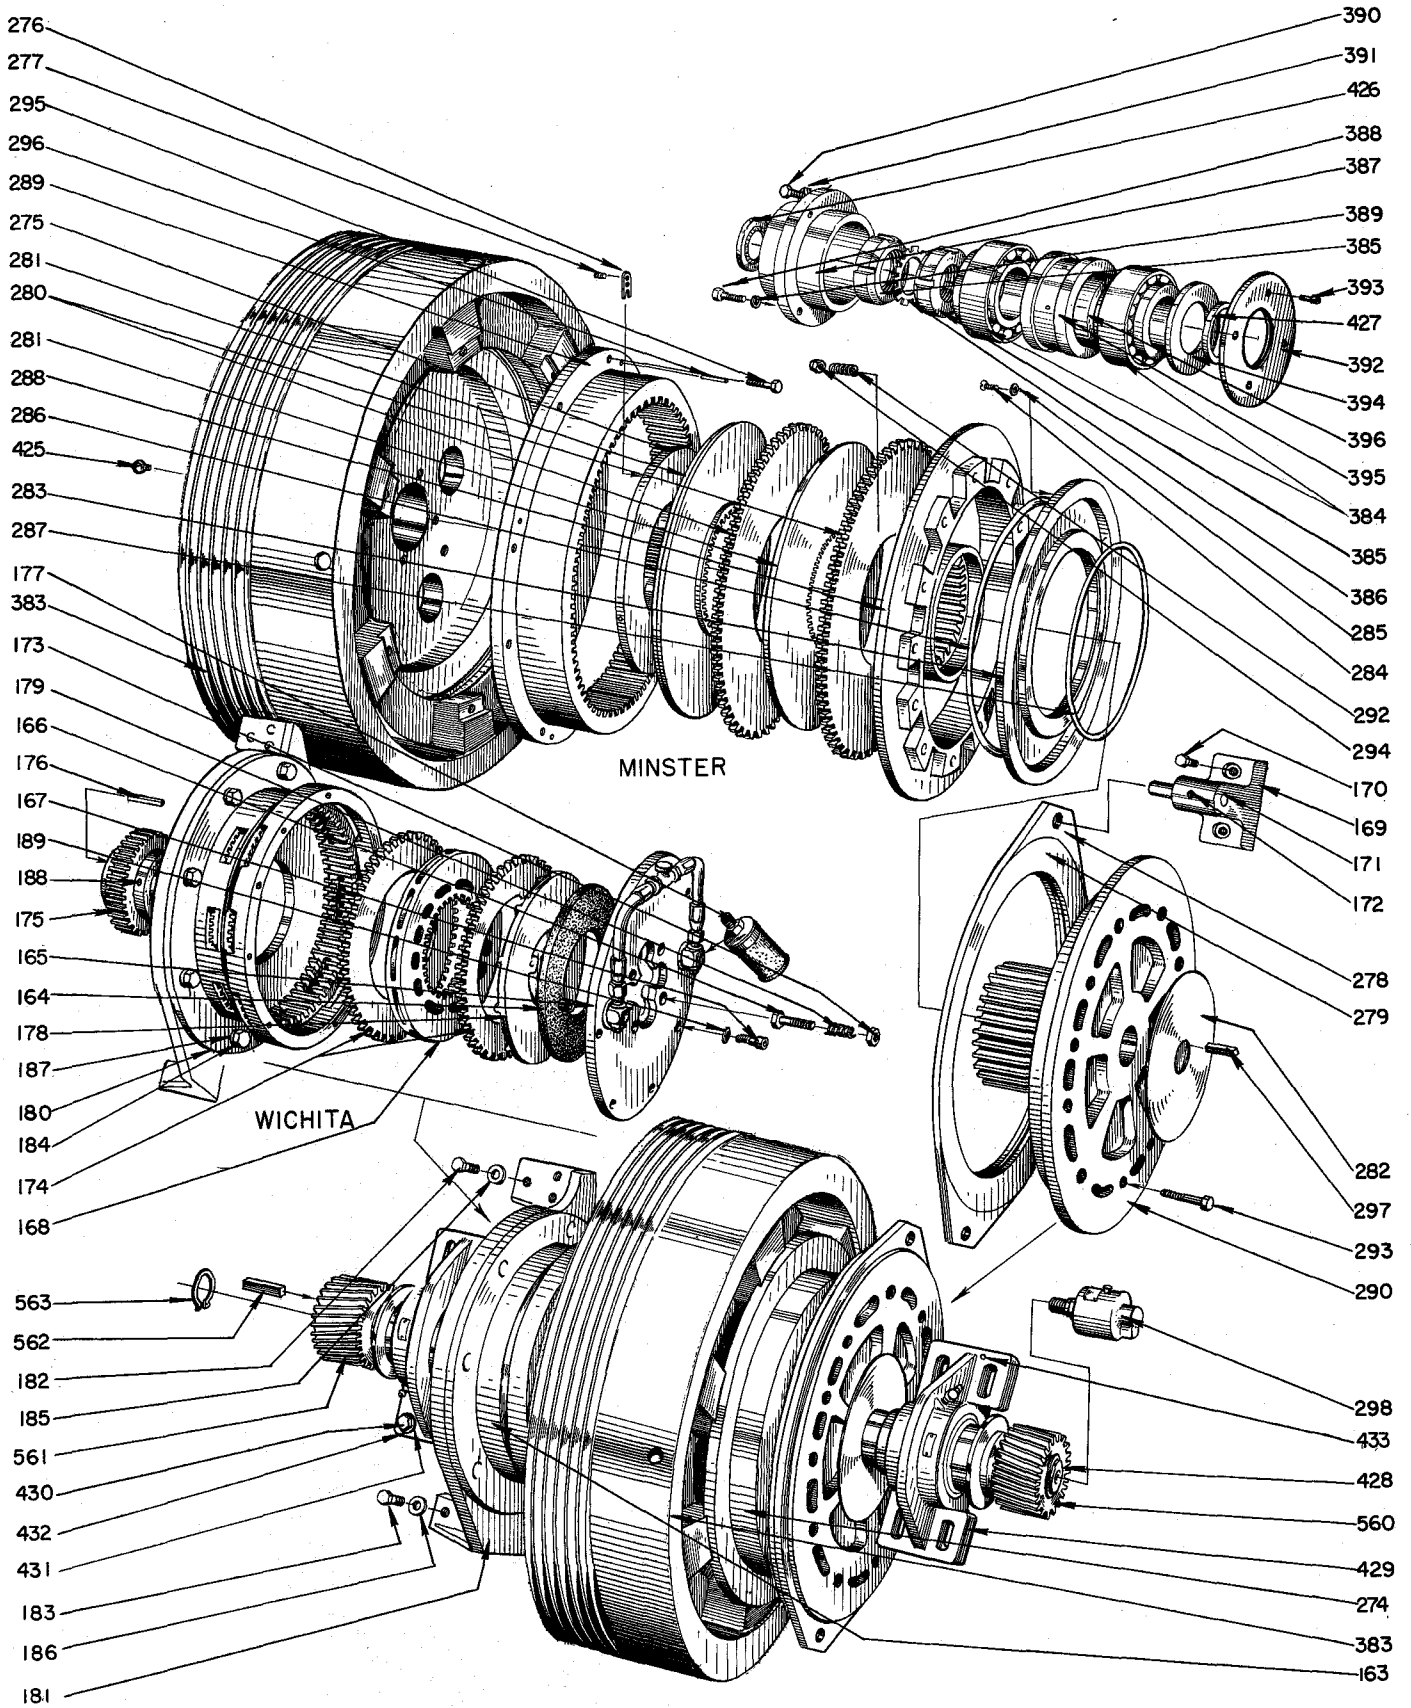

LUBRICATOR AND COMPRESSOR ASSEMBLY

 PLATE 15

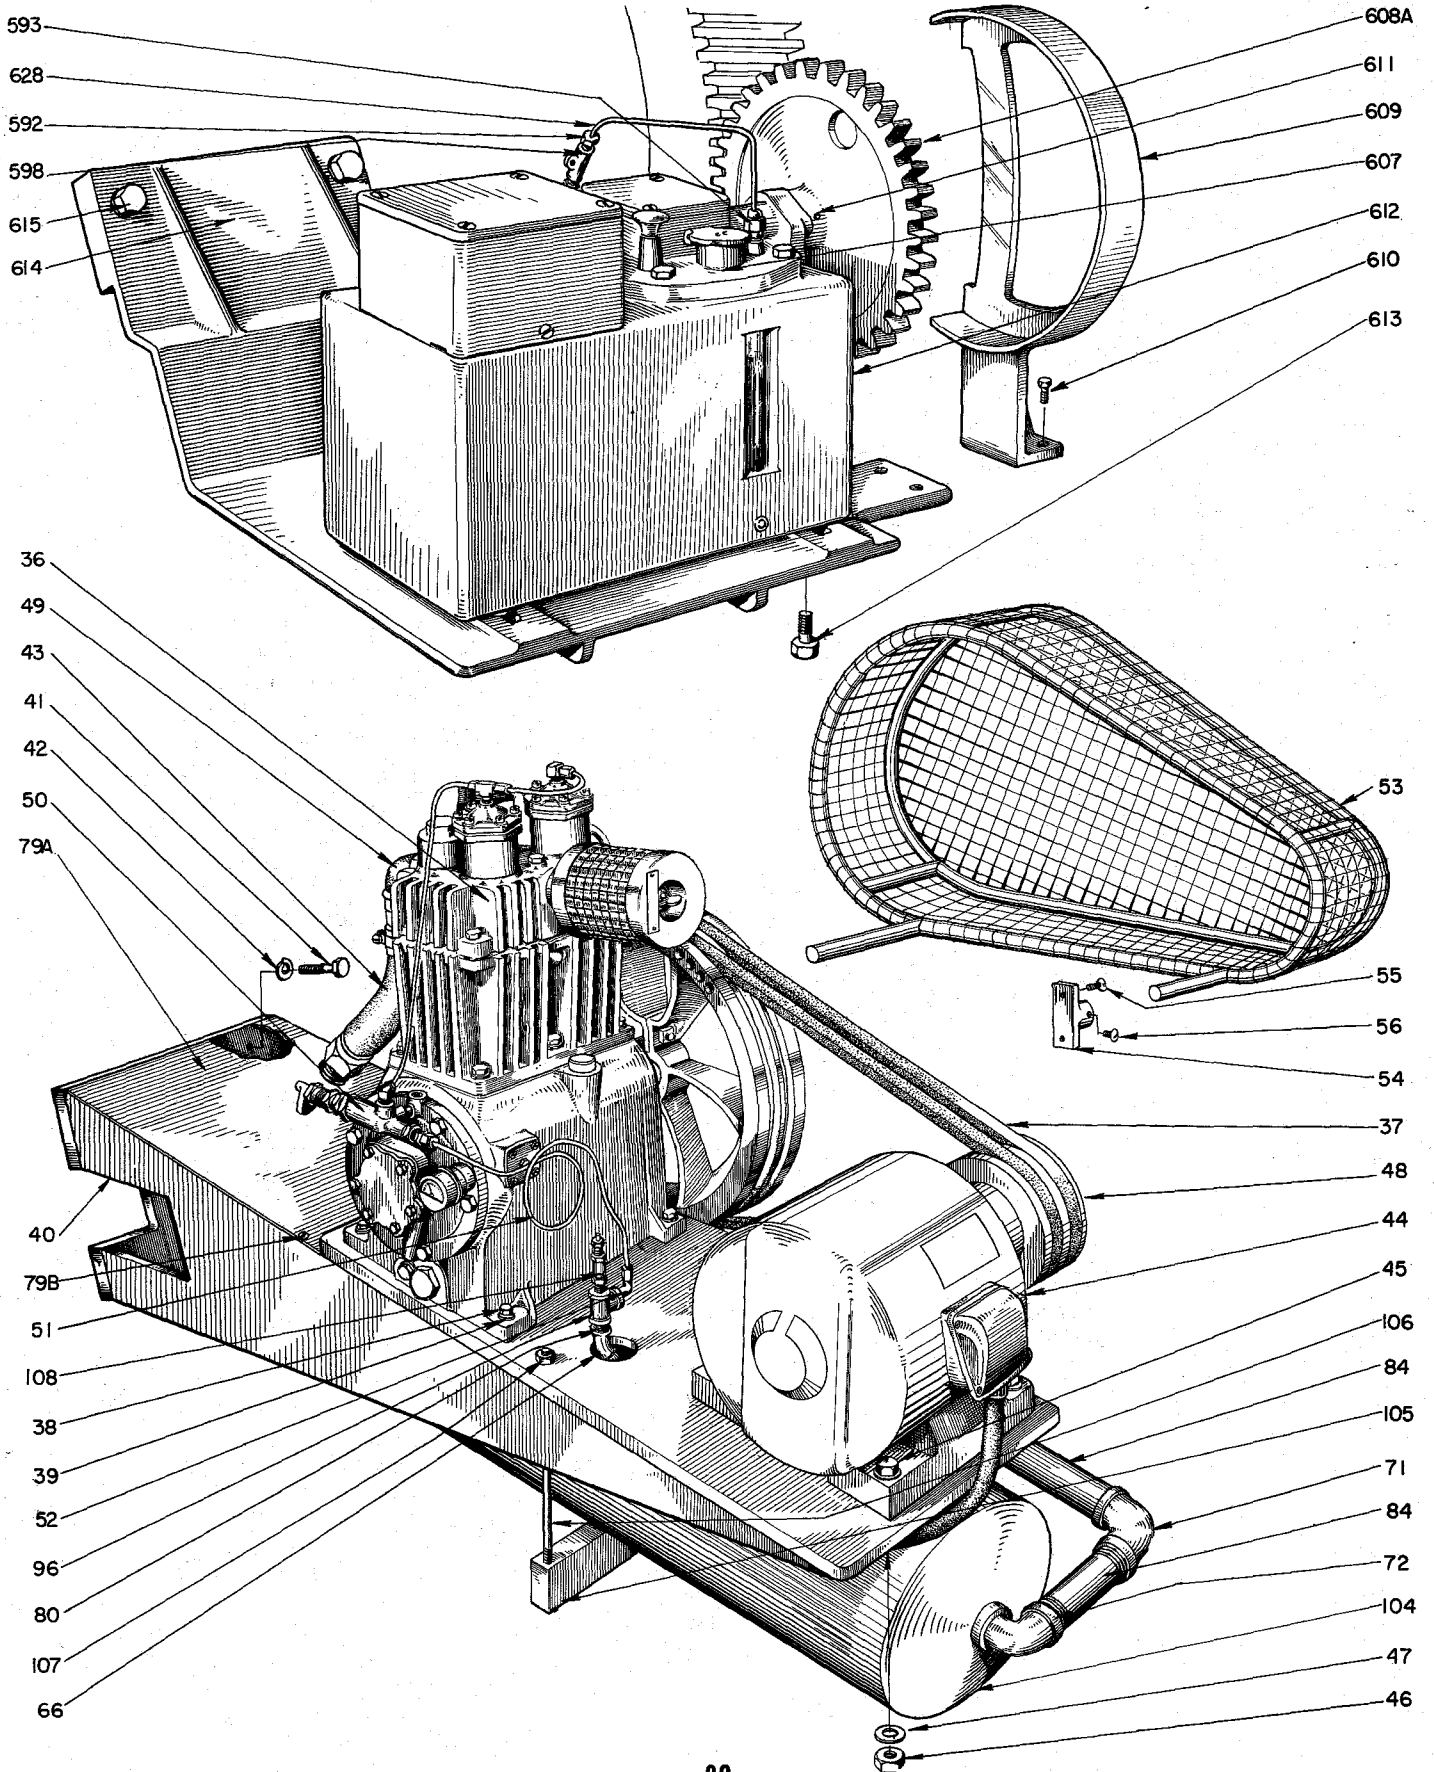

COMPRESSOR ASSEMBLY

PLATE 15A



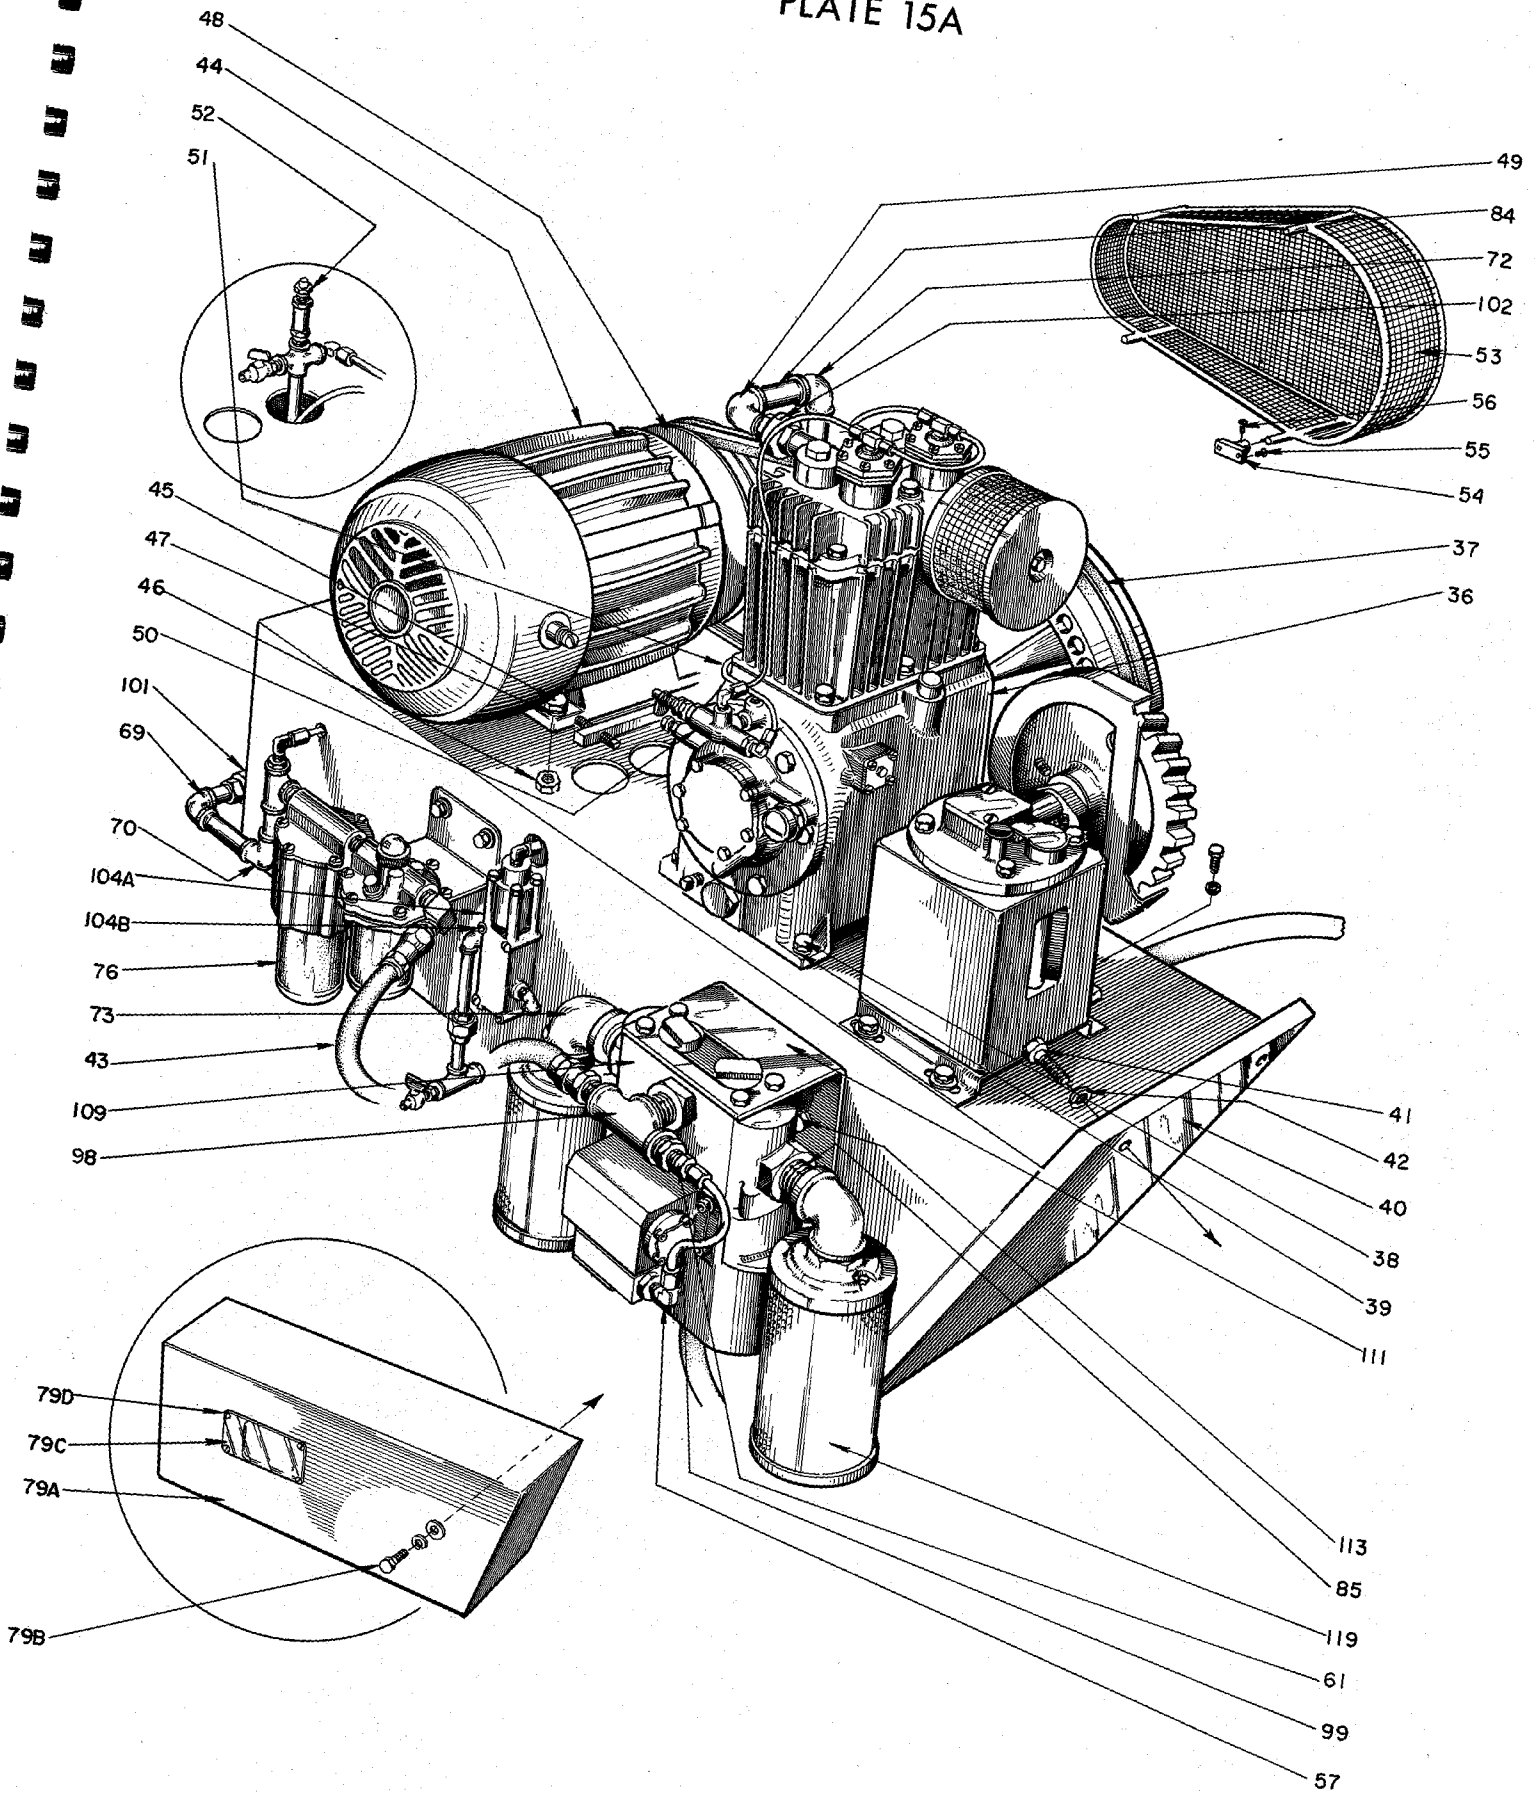 


PLATE 16

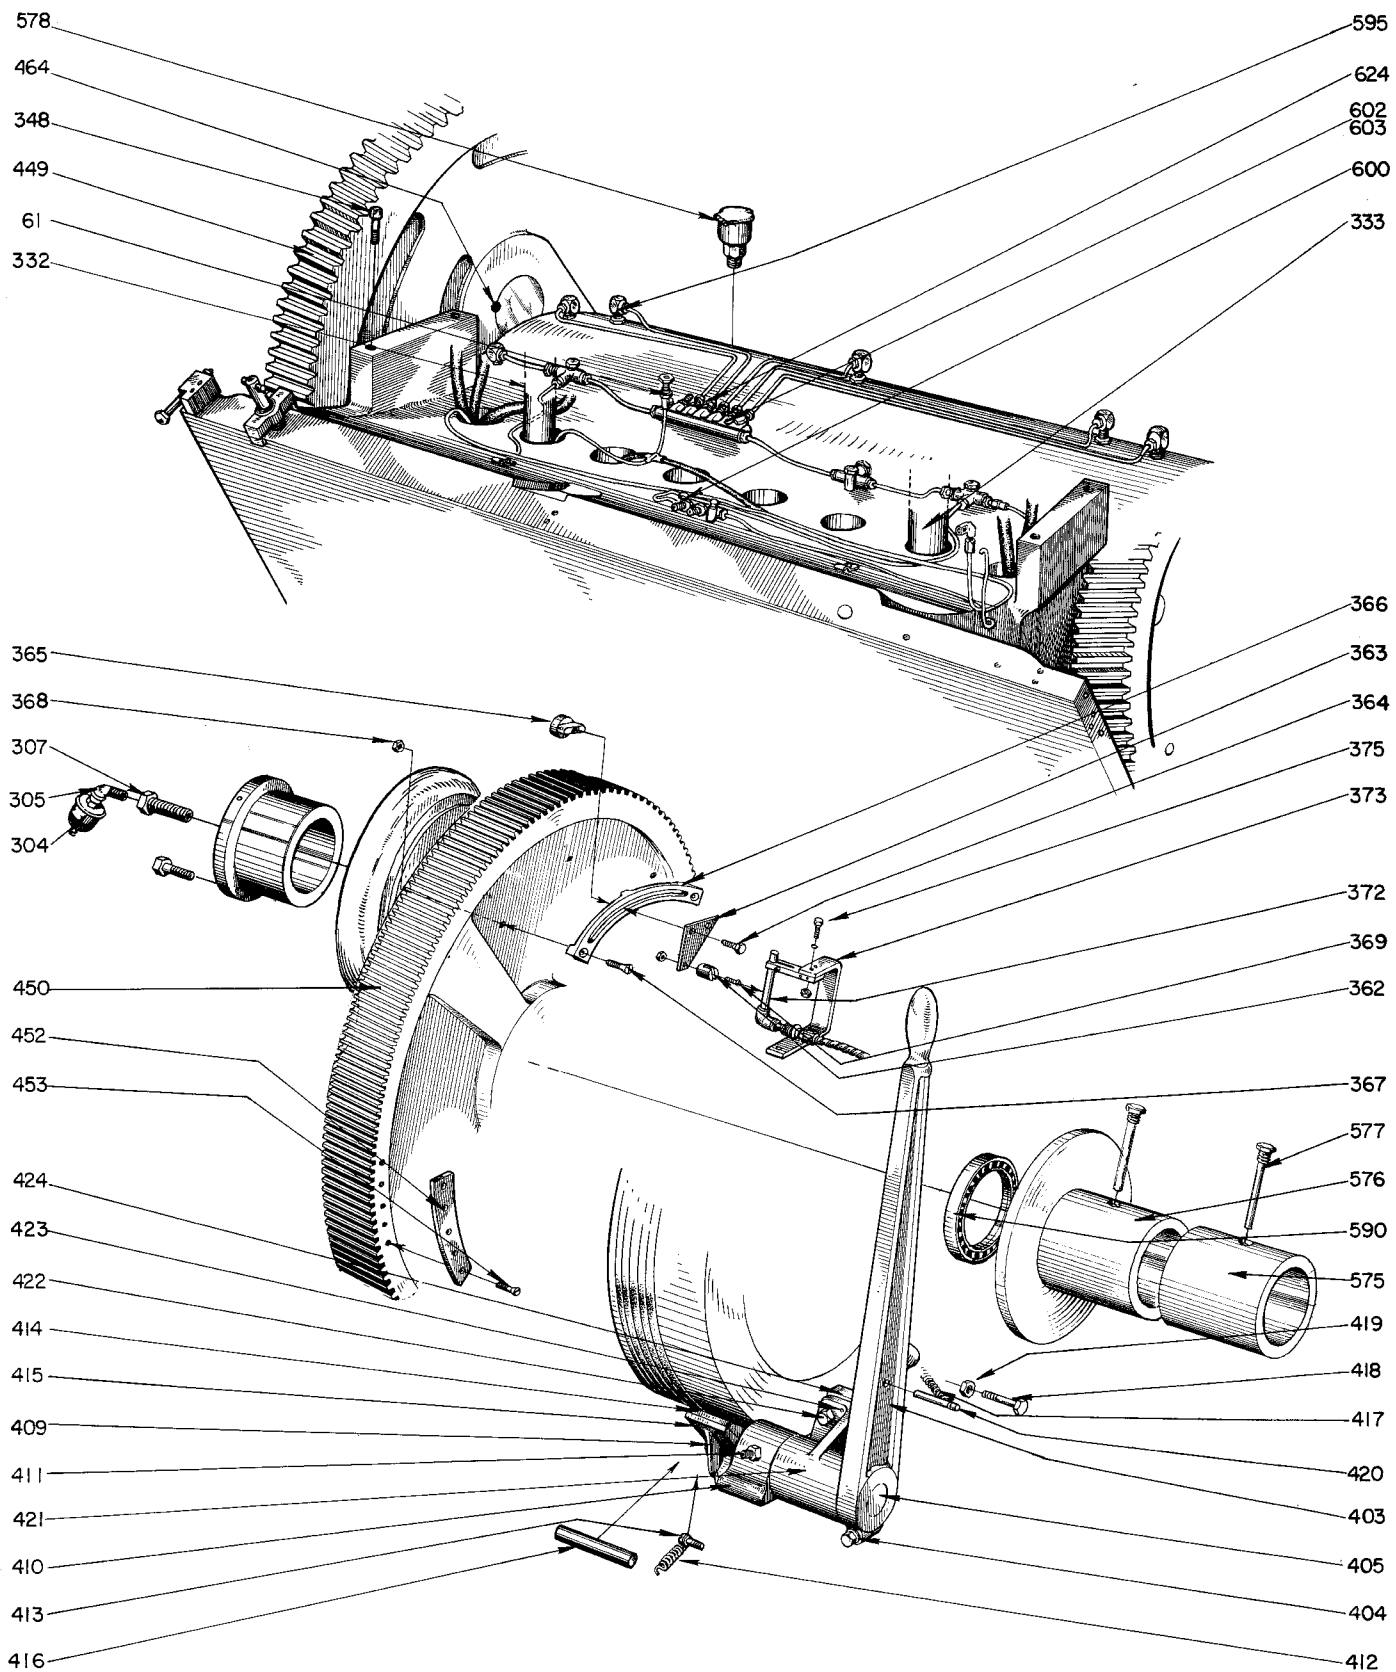 


FRAME, RIGHT REAR ASSEMBLY

 PLATE 17

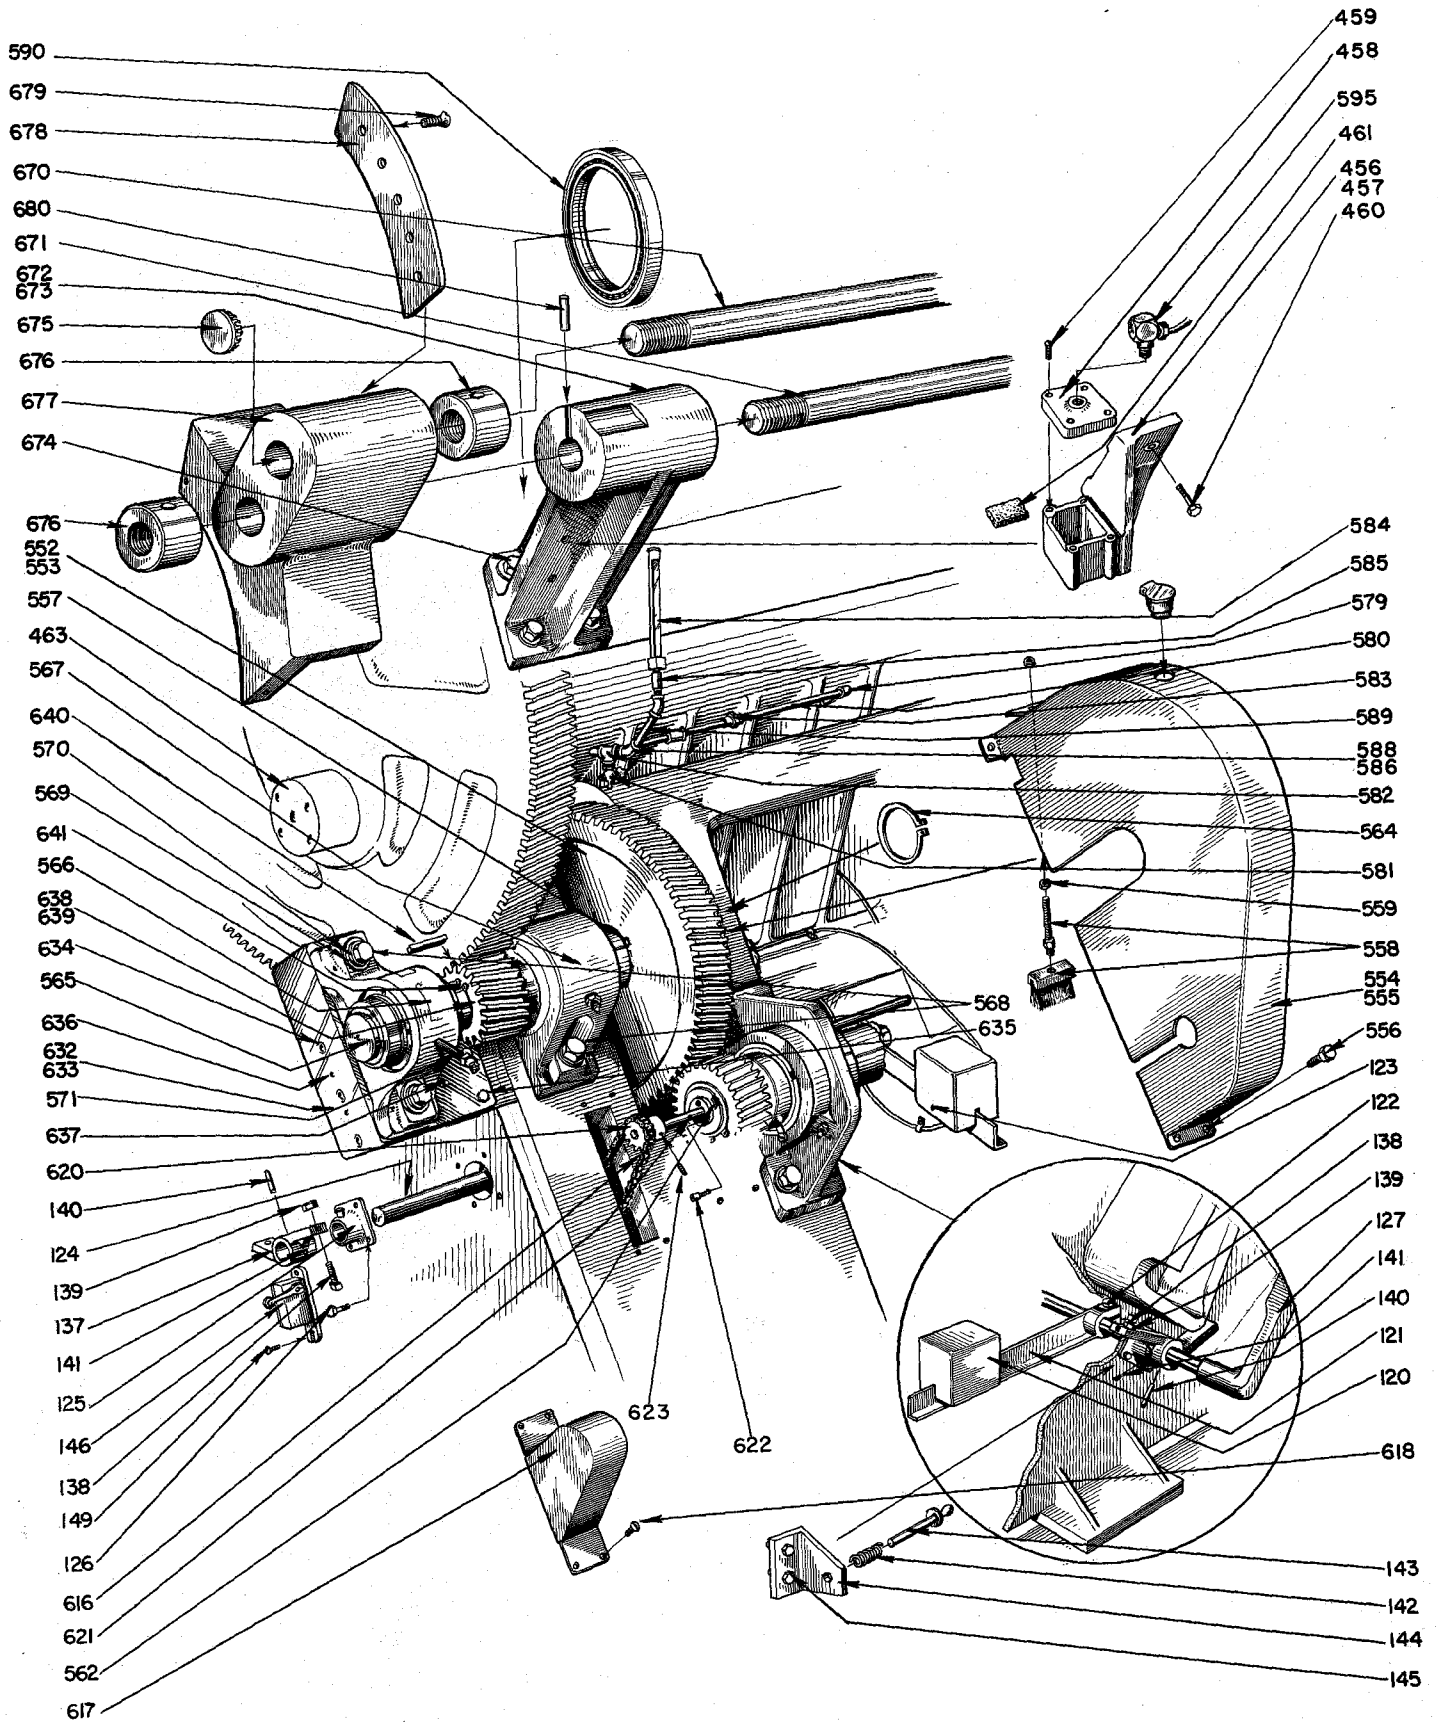


ELECTRICAL CONTROL ASSEMBLY

 PLATE 18

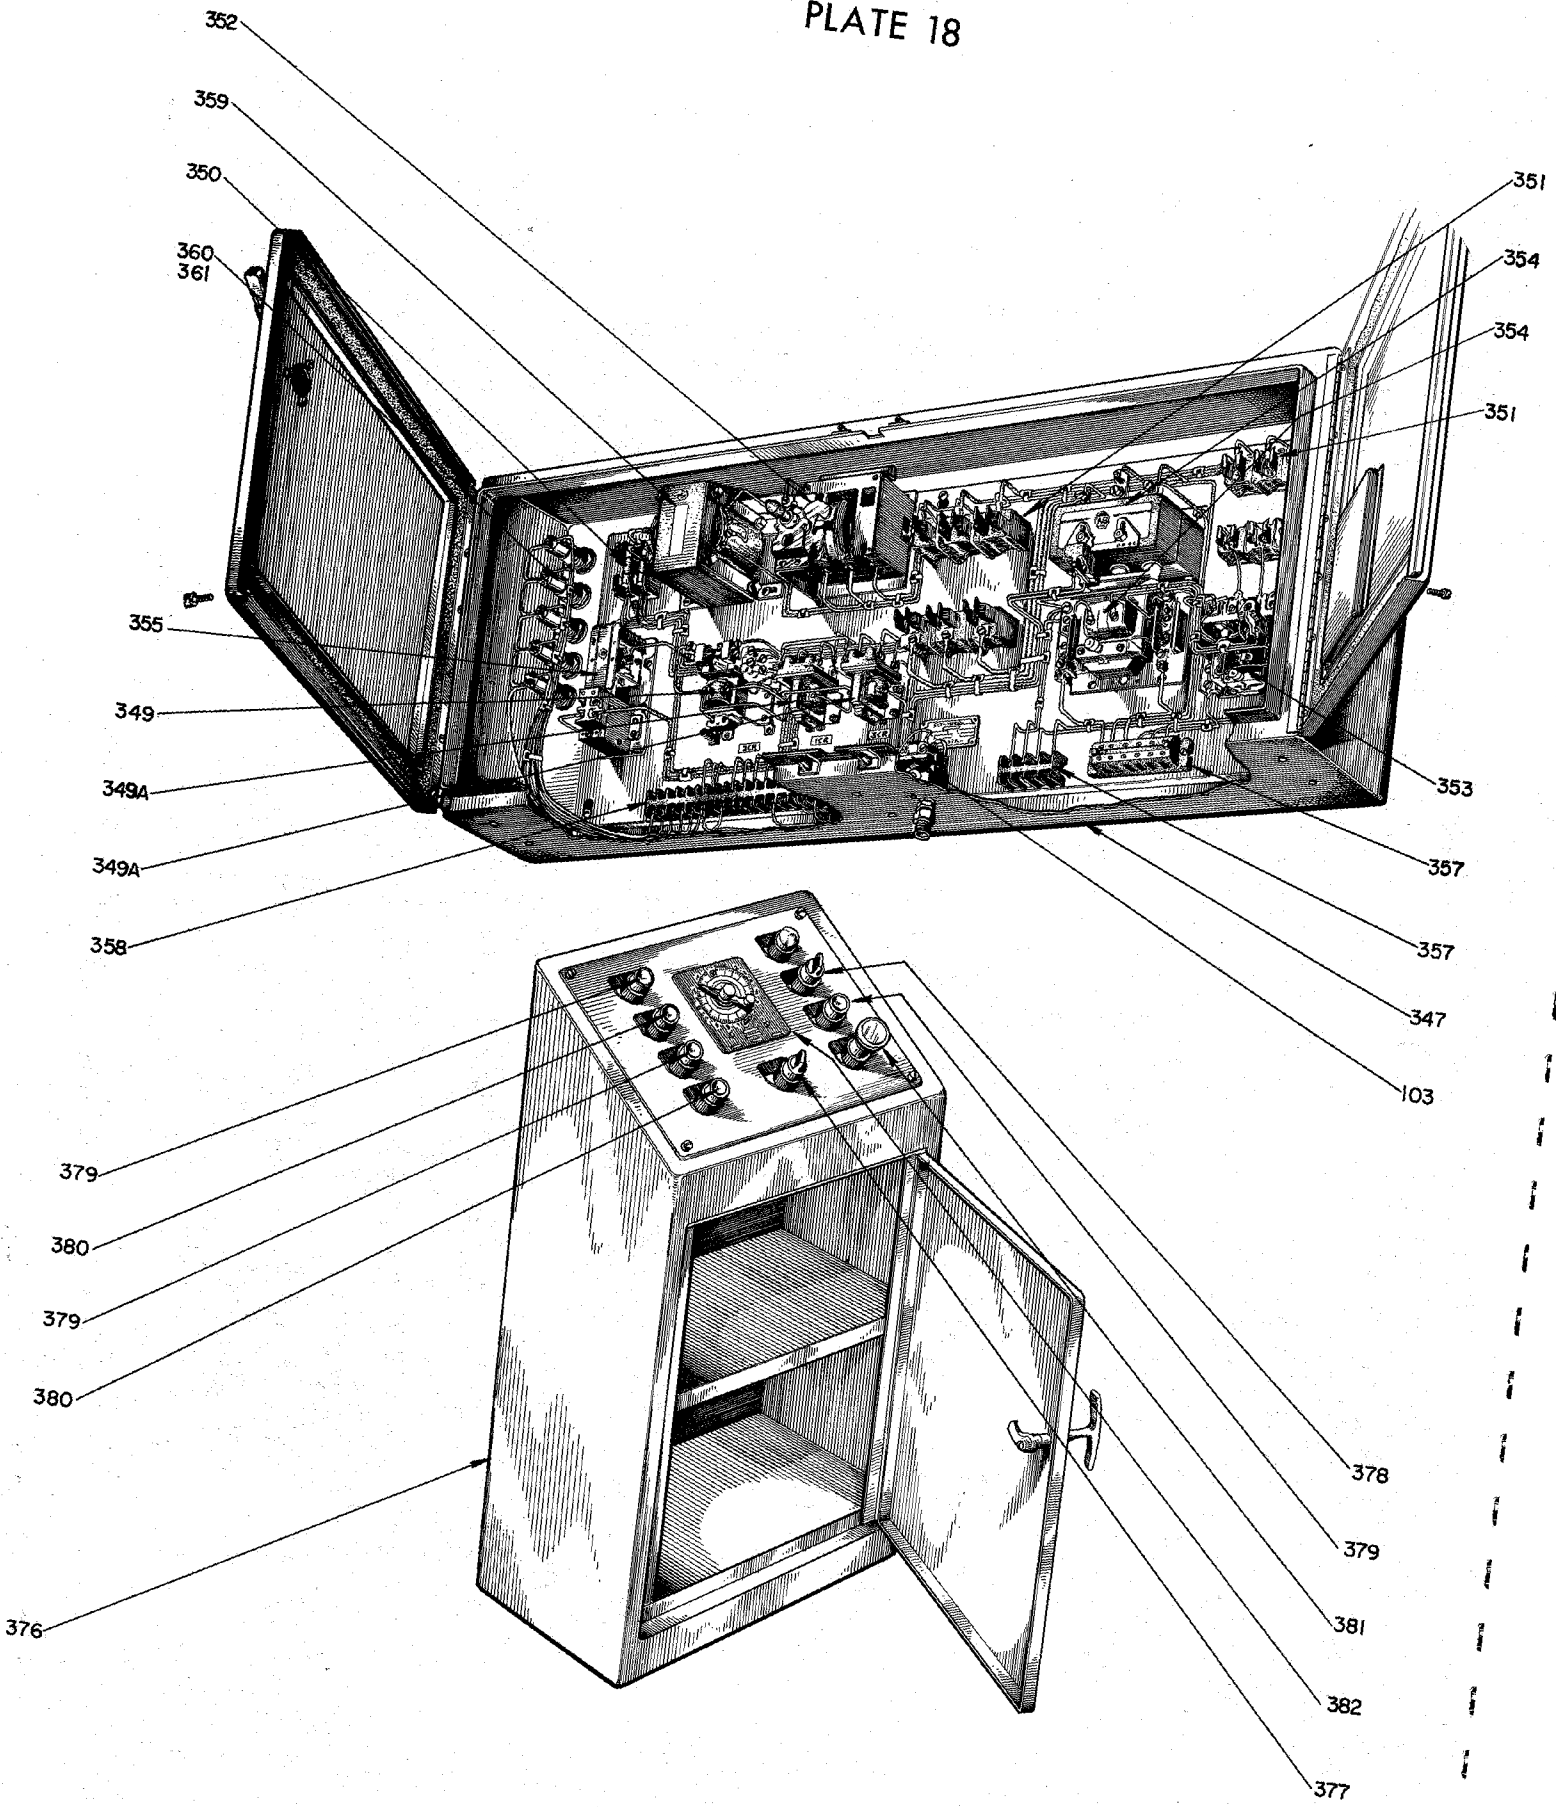

ELECTRICAL CONTROL ASSEMBLY

 PLATE 18A

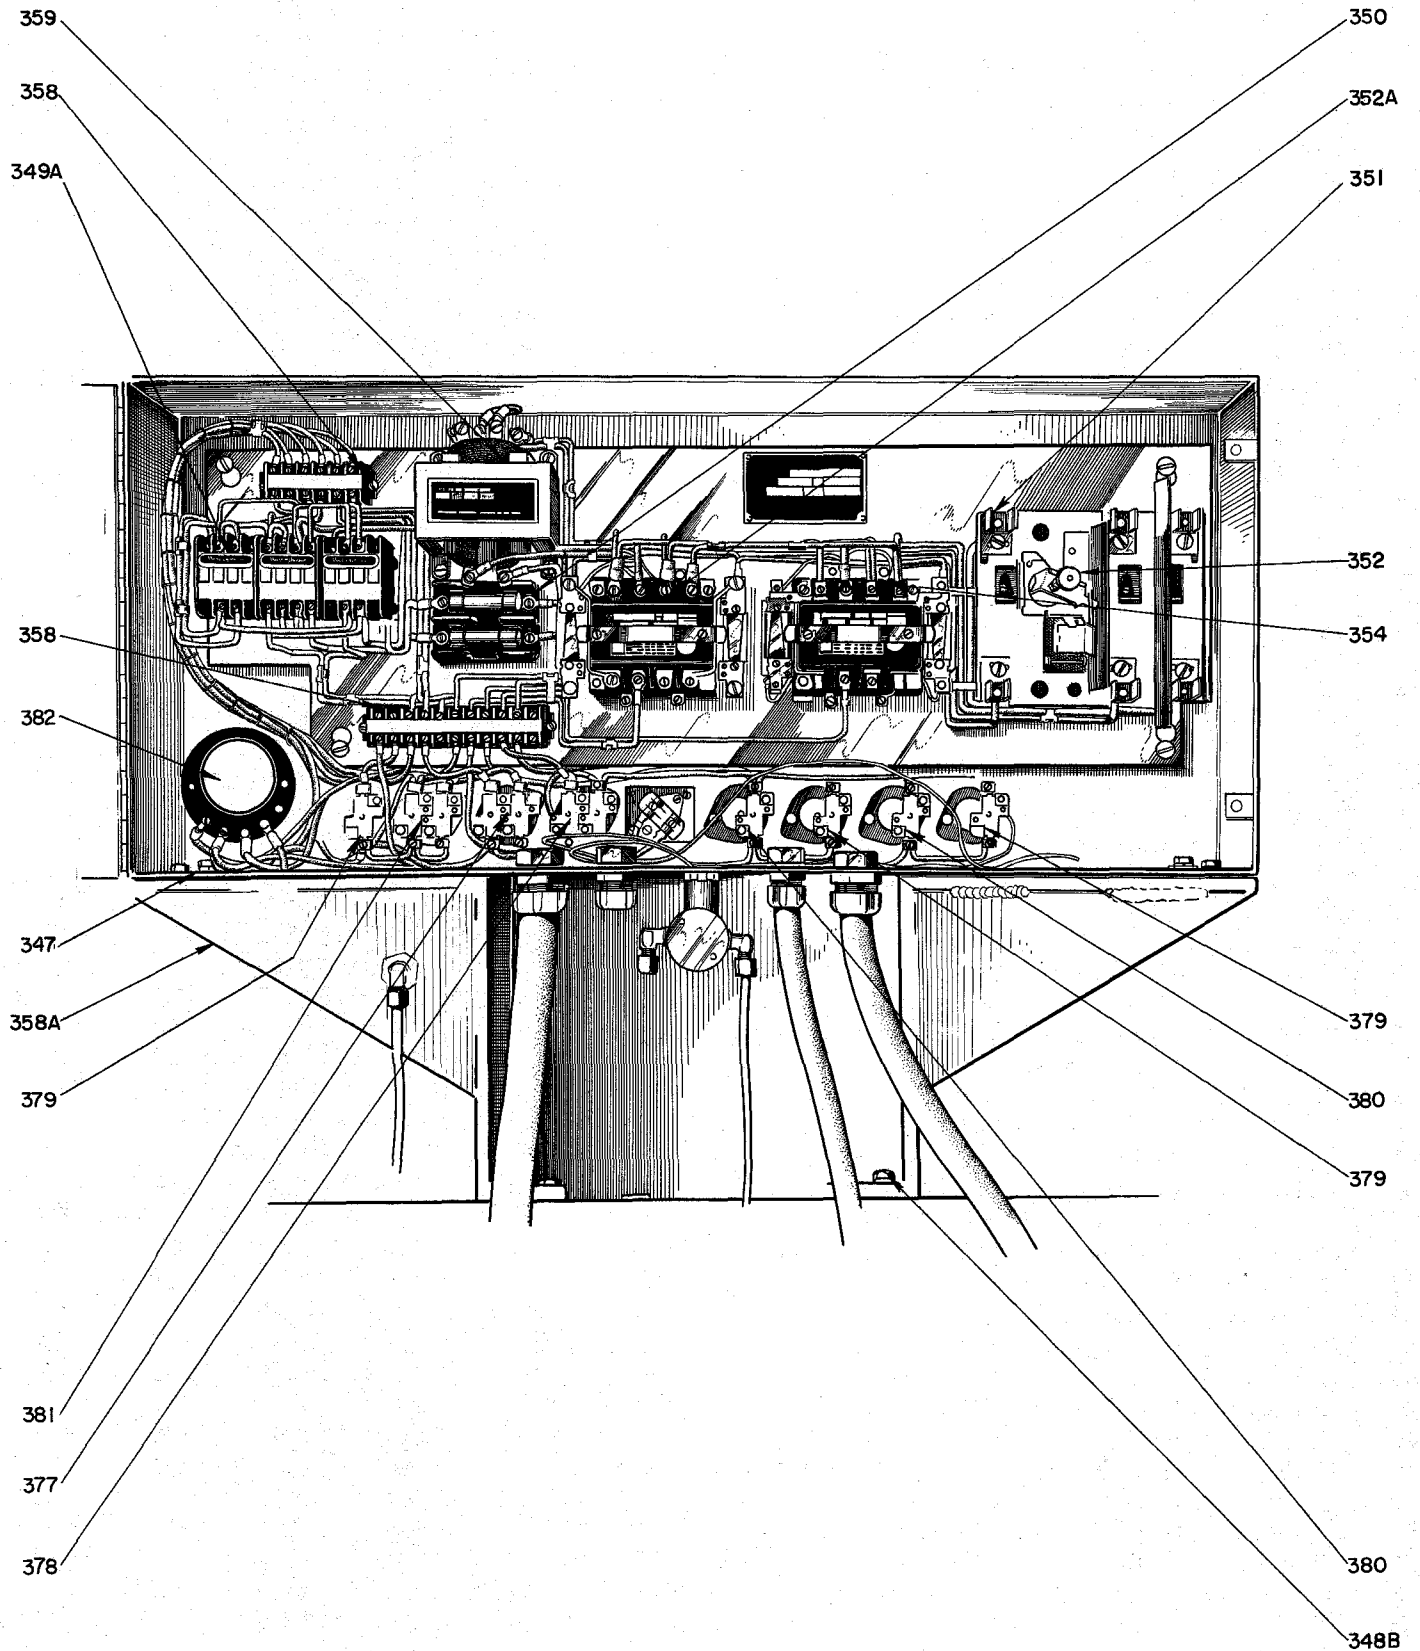

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
1	10,12	Adjuster Bar.....	730-B	1847	28328	17480	C-829	C-2041
2	10,11,12 ..	Adjuster Bar Bolt	745-1	745-1	846-1	846-1	520	520
3	10,11,12 ..	Adjuster Bar Dowel Pin	493-2	493-2	493-2	450-2	402-2	402-2
4	10,11	Adjuster Bar Latch	1844	1844				
5	10.....	Adjuster Bar Latch Cam.....	1848	1848				
6	10.....	Adjuster Bar Latch Cam Pin	481-2	481-2				
7	10.....	Adjuster Bar Latch Cam Shaft.....	1849-A	1849-A				
8	10.....	Adjuster Bar Latch Cam Shaft Stop	749-1	749-1				
9	10,11	Adjuster Bar Latch Pin	493-2	493-2				
10	10.....	Adjuster Bar Latch Slide - R.H.....	1841-R	1841-R				
11	10.....	Adjuster Bar Latch Slide - L.H.....	1841-L	1841-L				
12	10.....	Adjuster Bar Latch Slide Bolt.....	737-1	737-1				
13	10.....	Adjuster Bar Latch Slide Pin	402-2	7838				
14	9,10,12 ...	Adjuster Bar Stop Bolt.....	C-454	C-454	C-454	C-454	C-454	C-454
15	9,10,12 ...	Adjuster Bar Stop Bolt Nut.....	401	401	401	401	401	401
16	9,10,11,12	Adjuster Bar Stop Holder	5975	5975	5975	5975	C-750	C-2042
17	9,10,11,12	Adjuster Bar Stop Holder Nut	401	401	401	401	401	495
18	9,10,11,12	Adjuster Bar Stop Holder Rubber	C-276	C-276	C-276	C-276	C-276	C-276
19	10.....	Adjuster Bar Throw Off Arm	C-777	C-777				
20	10.....	Adjuster Bar Throw Off Arm Pin	481-2	481-2				
21	10.....	Adjuster Bar Throw Off Bracket	1851-A	1851-A				
22	10.....	Adjuster Bar Throw Off Bracket Bolt	1233	1233				
23	10.....	Adjuster Bar Throw Off Handle	2118	1852-A				
24	10.....	Adjuster Bar Throw Off Handle Pin	483-2	483-2				
25	12.....	Adjuster Latch.....			28329	28329	C-2043	C-2043
26	12.....	Adjuster Latch Roller.....			C-723	C-723	C-723	C-723
27	12.....	Adjuster Latch Roller Pin			C-724	C-724	C-724	C-724
28	12.....	Adjuster Latch Roller Pin Lock Ring			439-1	439-1	439-1	439-1
29	12.....	Adjuster Latch Slide - R.H.....			28335-R	17482-R	C-721-A	C-721-A
30	12.....	Adjuster Latch Slide - L.H.....			28335-L	17482-L	C-721-A	C-721-A
31	12.....	Adjuster Latch Slide Bolt			737-1	737-1	745-1	745-1
32	12.....	Adjuster Latch Slide Pin			702-2	402-2	402-2	402-2
33	11,12.....	Adjuster Latch Spring.....	C-760	C-760	C-760	C-760	C-760	C-760
34	12.....	Adjuster Latch Spring Collar.....			C-739	C-739	C-739	C-739
35	12.....	Adjuster Latch Spring Collar Screw			428	428	428	428
36	15,15A.....	Air Compressor	1053	1053	1053	1053	1053	1053
37	15,15A.....	Air Compressor Belt "V"	459-1	459-1	459-1	459-1	459-1	459-1
38	15,15A.....	Air Compressor Bolt.....	450	450	450	450	450	450
39	15,15A.....	Air Compressor Bolt Lockwasher	488	488	488	488	488	488
40	15,15A.....	Air Compressor Bracket.....	2058	2080	28297	2080	C-2031-C	C-2031-E
41	15,15A.....	Air Compressor Bracket Bolt.....	480	480	480	480	480	480
42	15,15A.....	Air Compressor Bracket Bolt Washer	5028	5028	5028	5028	5028	5028
43	15,15A,7 ..	Air Compressor Hose	457-1	457-1	457-1	457-1	457-1	610-1
44	15,15A.....	Air Compressor Motor	460-1	460-1	460-1	460-1	460-1	460-1
45	15,15A.....	Air Compressor Motor Bolt.....	433	433	433	433	433	433
46	15,15A.....	Air Compressor Motor Bolt Nut.....	406	406	406	406	406	406
47	15,15A.....	Air Compressor Motor Bolt Washer Lock..	496	496	496	496	496	496
48	15,15A.....	Air Compressor Motor Sheave	478-1	478-1	478-1	478-1	478-1	478-1
49	15,15A.....	Air Compressor Street Elbow - 90°.....	420-1	420-1	420-1	420-1	420-1	420-1
50	15,15A.....	Air Compressor Unloader	1055	1055	1055	1055	1055	1055
51	15,15A.....	Air Compressor Unloader Tubing	1244	1244	1244	1244	1244	1244
52	15,15A.....	Air Compressor Unloader Tubing Coupling	1274	1274	1274	1274	1274	1274
53	15,15A.....	Air Compressor "V" Belt Guard.....	C-2103	C-2103	C-2103	C-2103	C-2103	C-2103
54	15,15A.....	Air Compressor "V" Belt Guard Support..	5876	5876	5876	5876	5876	5876

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
55	15,15A.....	Air Compressor "V" Belt Guard Support Screw.....	890	890	890	890	890	890
56	15,15A.....	Air Compressor "V" Belt Guard Support Set Screw	1033	1033	1033	1033	1033	1033
57	7,8,15A ...	Air Line Connector (90° El. 1/8" Pipe to 1/4" Tube)	1237	1237	1237	1237
58	7,8.....	Air Line Connector (Tee 1/8" Pipe to 1/4" Tube)	802-1	802-1
59	7,8.....	Air Line Connector (Male Run Tee 1/8" Pipe to 1/4" Tube)	808-1	808-1
60	Air Line Connector (90° El. 1/4" Pipe to 1/4" Tube)	801-1	801-1	801-1
61	15A,16.....	Air Line Connector (Straight 1/8" to 1/4" Tube)	1108	1108	1108	1108
62	4,9.....	Air Line Connector (Straight 1/4" Pipe to 1/4" Tube).....	1215
63	7.....	Air Line Connector (Straight 1/4" Pipe to 3/8" Tube).....	805-1
64	7,8.....	Air Line Connector (90° El. 1/4" Pipe to 3/8" Tube)	803-1	803-1
65	13.....	Air Line Connector (45° El. 1/4" Pipe to 3/8" Tube)	804-1
66	15.....	Air Line Elbow (45° 1/4" Pipe).....	525
67	13.....	Air Line Elbow (90° 1/4" Pipe)	419-1	419
68	4,12.....	Air Line Elbow (90° Street 1/4" Pipe)	417	417
69	8,15A.....	Air Line Elbow (90° 1/2" Pipe).....	672	672	672	672	672
70	8,15A,7...	Air Line Elbow (90° Street 1/2" Pipe)	546-1	546-1	546-1
71	15.....	Air Line Elbow (90° 3/4" Pipe).....	697	697	697	697	697
72	7,8,15A,15	Air Line Elbow (90° Street 3/4" Pipe)	420-1	420-1	420-1	420-1	420-1
73	7,15A,8...	Air Line Elbow (90° 1" Pipe)	533-1	533-1	533-1	533-1	533-1
74	7,8.....	Air Line Hose Adapter.....	810-1	810-1
75	7,8.....	Air Line Hose Connector	445-1	445-1
76	7,8,15A....	Air Line Lubricator and Vitalizer Unit.....	854-1	854-1	530-1	530-1	530-1	530-1
77	7.....	Air Line Lubricator and Vitalizer Unit Bracket.....	C-2132-A
78	7.....	Air Line Lubricator and Vitalizer Unit Bracket Screw	465
79	Air Line Lubricator and Vitalizer Unit Screw.....
79A	15,15A.....	Air Line Lubricator and Vitalizer Cover....	2096	2082	28343	2082
79B	15,15A.....	Air Line Lubricator and Vitalizer Cover Bolt.....	405-2	405-2	474	405-2
79C	15A.....	Air Line Lubricator and Vitalizer Cover Window	2092	2092	2092
79D	15A.....	Air Line Lubricator and Vitalizer Cover Window Screw	711-1	711-2	711-2
80	15.....	Air Line Pipe (1/4" Pipe Close)	619
81	8.....	Air Line Pipe (1/4" Pipe x 1 1/2").....	1062
82*	8,7.....	Air Line Pipe (1/2" Pipe).....	495-1	495-1	495-1	495-1	495-1	495-1
		Air Line Pipe (1/2" Pipe Close)	426-1	426-1
83	8.....	Air Line Pipe (3/4" Pipe Close)	699	699	699
84*	15,15A	Air Line Pipe (3/4" Pipe).....	496-1	496-1	496-1	496-1	496-1
85	7,8,15A....	Air Line Pipe (1" Close).....	779-1	779-1	779-1	779-1	779-1

* Specify Length of Tubing or Pipe

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
86	9.....	Air Line Pressure Gauge	544-1	544-1	544-1	544-1	544-1	544-1
87		Air Line Pressure Gauge Bracket.....						
88		Air Line Pressure Gauge Bracket Screw ..						
95	7,8.....	Air Line Swivel Adapter - 90°					C-847	C-847
96	15.....	Air Line Tee (1/4" Pipe)					621	
97	8.....	Air Line Tee (1/2" to 3/4" Pipe).....						
98	7,15A,8 ..	Air Line Tee (3/4" Pipe)	452-1				452-1	452-1
99	7,15A.....	Air Line Tubing (1/4" Copper).....	670	670		670	670	670
100	7,13.....	Air Line Tubing (3/8" Copper).....					1244	1244
101	8,15A.....	Air Line Union (1/2" Pipe).....	799-1	799-1		1244		
102	15A.....	Air Line Union (3/4" Pipe).....	698	698		698	698	698
103	18.....	Air Pressure Switch			560-1		560-1	560-1
104	15.....	Air Pressure Tank.....	2081-A	2081-A	2081-A	2081-A	2081-A	2081-A
104A	15A.....	Air Pressure Tank Auto Drain.....	840-1	840-1	840-1	840-1	840-1	840-1
104B	15A.....	Air Pressure Tank Auto Drain Screw	459-2	459-2	459-2	459-2	459-2	459-2
105	15.....	Air Pressure Tank Clamp.....	C-2144-A	C-2144-A	C-2144-A	C-2144-A	C-2144-A	C-2144-A
106	15.....	Air Pressure Tank Clamp Stud	2070	2070	C-2145	2070	C-2145	C-2145
107	15.....	Air Pressure Tank Clamp Stud Nut.....	407	407	407	407	407	407
108	15.....	Air Pressure Tank Safety Valve	1207	1207	1207	1207	1207	1207
109	7,8,15A ..	Air Valve (Minster Clutch).....	461-1	461-1	461-1	461-1	461-1	461-1
110	8.....	Air Valve (Wichita Brake).....						502-1
111	7,8,15A ..	Air Valve Bracket (Minster Clutch)	2066	2048	28298	2048	C-2091	C-2091
112	8.....	Air Valve Bracket (Wichita Brake).....						C-2112
113	7,8,15A ..	Air Valve Bracket Bolt.....	402	413	402	413	402	402
114	7,8.....	Air Valve Micro Switch.....			775-1		775-1	775-1
115	7,8.....	Air Valve Micro Switch Bracket					C-853-A	C-853-A
116	7,8.....	Air Valve Micro Switch Bracket Screw.....					465	465
117	7,8.....	Air Valve Micro Switch Screw					776-1	776-1
118	7,8.....	Air Valve Micro Switch Screw Nut					1039	1039
119	7,8,15A ..	Air Valve Muffler.....	531-1	531-1	531-1	531-1	531-1	531-1
119A	3B.....	Auxiliary Safety Guard Balance Spring L.H.	1996	1996		17464		
119A	3B.....	Auxiliary Safety Guard Balance Spring - R.H.	1996	1996		17464		
119B	3B.....	Auxiliary Safety Guard Balance Spring Pin	1997	1997		17465		
120	17.....	Auxiliary Safety Guard Counterweight			C-2097		C-2097	C-2097
121	17.....	Auxiliary Safety Guard Counterweight Arm			C-2053		C-2053	C-2053
122	17.....	Auxiliary Safety Guard Counterweight Arm Screw.....			433		433	433
123	17.....	Auxiliary Safety Guard Counterweight Screw.....			535-1		535-1	535-1
124	4,17.....	Auxiliary Safety Guard Shaft	2071	1998-A	28299	17466	C-806-A	C-2153-A
125	4,17.....	Auxiliary Safety Guard Shaft Bearing.....	859-1	859-1	472-1	859-1	472-1	472-1
126	4,17.....	Auxiliary Safety Guard Shaft Bearing Bolt ..	402	402	402	402	402	402
127	4,12,17 ..	Auxiliary Safety Guard Shaft Bracket.....	2000	2000	28300	2000	C-2154-A	C-2154-A
128	4,12.....	Auxiliary Safety Guard Shaft Bracket Pin....			499		458-2	458-2
129	4,12.....	Auxiliary Safety Guard Shaft Bracket Screw	400-2	400-2	537	400-2	537	537
130	4,12.....	Auxiliary Safety Guard Shaft Bracket Screw			428		428	428
131	4.....	Auxiliary Safety Guard Shaft Collar			5754			
132	4.....	Auxiliary Safety Guard Shaft Collar Screw ..			445			
132A	3B.....	Auxiliary Safety Guard Shaft Support Plate - R.H.	2052	2052				
132A	3B.....	Auxiliary Safety Guard Shaft Support Plate - L.H.	2053	2053				

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
132B	3B	Auxiliary Safety Guard Shaft						
		Support Plate Bolt.....	480	480				
133	4,12	Auxiliary Safety Guard Side Shield.....	28301	28301	28301	C-805	C-805	C-2163
134	4,12	Auxiliary Safety Guard Side Shield Clip ..	2090	2090	C-2155	2090	C-2155	C-2155
135	4,12	Auxiliary Safety Guard Side Shield Clip Screw	481-1	481-1	481-1	481-1	481-1	481-1
136	4,12	Auxiliary Safety Guard Side Shield Clip Screw Nut	482-1	482-1	482-1	482-1	482-1	482-1
137	3B,4,17	Auxiliary Safety Guard Stop.....	2001	2001	C-801	2001	C-801	C-2098
137A	3B	Auxiliary Safety Guard Stop Lock Screw ..	489-1	489-1		489-1		
138	3B,4,17	Auxiliary Safety Guard Stop Adjusting Screw.....	489-1		612		612	612
139	4,17	Auxiliary Safety Guard Stop Adjusting Screw Nut.....	404-1		406		406	406
139A	3B	Auxiliary Safety Guard Stop Bar	2062					
140	4,17	Auxiliary Safety Guard Stop Pin.....			468-2		468-2	468-2
141	4,17	Auxiliary Safety Guard Stop Screw			476		476	476
142	4,17	Auxiliary Safety Guard Stop Spring.....	5936	5936	28302	5936	5936	5936
143	4,17	Auxiliary Safety Guard Stop Spring Guide...	C-2128	C-2128	28303	C-2128	C-2128	C-2128
144	17	Auxiliary Safety Guard Stop Spring Guide Bracket	2002	2002		17467	C-2129	C-2129
145	17	Auxiliary Safety Guard Stop Spring Guide Bracket Screw.....	632	632		402	512	512
146	3B,4,6,17	Auxiliary Safety Guard Switch.....	775-1	775-1	536-1	775-1	536-1	536-1
147	6	Auxiliary Safety Guard Switch Bracket ...					C-825	
148	6	Auxiliary Safety Guard Switch Bracket Screw					465	
149	4,6,17	Auxiliary Safety Guard Switch Screw			893		893	893
150	3B,4,6	Auxiliary Safety Guard Switch Trip Lever.....	2108	2108	28304	2108	C-824	
150A	3B	Auxiliary Safety Guard Switch Trip Lever Screw.....	445	445		445		
151	4,12	Auxiliary Safety Guard Tube (Side)	2060	2003	28305	17468	C-807	C-2156
152	4,12	Auxiliary Safety Guard Tube (Upper)	2061	2004	28306	17469	C-808	C-2157
153	4,12	Auxiliary Safety Guard Tube Cap	831-1	831-1	747-1	831-1	747-1	747-1
154	4,12	Auxiliary Safety Guard Tube Connector...	832-1	832-1	748-1	832-1	748-1	748-1
155	12	Auxiliary Safety Guard Upper Stop					C-809	C-809
156	12	Auxiliary Safety Guard Upper Stop Magnet ..					768-1	768-1
157	12	Auxiliary Safety Guard Upper Stop Magnet Screw.....					605	605
158	12	Auxiliary Safety Guard Upper Stop Magnet Screw Nut					442	442
159	12	Auxiliary Safety Guard Upper Stop Magnet Stop					769-1	769-1
160	12	Auxiliary Safety Guard Upper Stop Magnet Stop Screw					514	514
161	12	Auxiliary Safety Guard Upper Stop Screw ..					868	868
162	12	Auxiliary Safety Guard Upper Stop Screw Nut					1040	1040
163	14	Brake (Auxiliary - Wichita)						474-1
164	14	Brake Air Tube						547-1
165	14	Brake Air Tube Holding Plate.....						548-1
166	14	Brake Cap Screw - 1/2" - 20 x 2 3/4"						549-1
167	14	Brake Cap Screw - 5/8" - 11 x 1 3/4"						550-1
168	14	Brake Center Plate						551-1

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22x32 Part No.	Style 8-6 28x41 Part No.	Style 9-7 28x41 Part No.	Style 8-7 33x47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
169	3C,5,14	Brake Disc Anchor Bracket	2069	2006	28307	C-2021	C-2021	C-2021
169A	3C	Brake Disc Anchor Bracket	2005	2005				
169B	3C	Brake Disc Anchor Bracket Spacer	2063					
169C	3C	Brake Disc Anchor Bracket Bolt	843-1	843-1				
170	3C,5,14	Brake Disc Anchor Bracket Bolt	846-1	846-1	479-1	436	436	436
171	3C,5,14	Brake Disc Anchor Bracket Pin	2007	2007	28308	C-2022	C-2022	C-2022
172	3C,5,14	Brake Disc Anchor Bracket Set Screw	476	476	498	498	498	498
173	14	Brake Fiber Lock Nuts - 1/2" - 20						552-1
174	14	Brake Friction Disc - 4 Halves						553-1
175	14	Brake Hub						554-1
176	14	Brake Key						C-2066
177	14	Brake Muffler						532-1
177A	3B	Brake Pedal	979	944				
177B	3B	Brake Pedal Pin	470	470				
177C	3B	Brake Pedal Shaft	981	2103				
177D	3B	Brake Pedal Shaft Bearing	766-1	766-1				
177E	3B	Brake Pedal Shaft Bearing Bolt	469	469				
177F	3B	Brake Pedal Shaft Bearing Spring	P-255	P-255				
177G	3B	Brake Pedal Stop	2109	2109				
177H	3B	Brake Pedal Stop Screw	536	536				
178	14	Brake Pressure Plate						555-1
179	14	Brake Release Spring						556-1
180	14	Brake Ring and Back Plate						557-1
181	14	Brake Ring Bracket						C-2037
182	14	Brake Ring Bracket Bolt (in frame)						480
183	14	Brake Ring Bracket Bolt (in frame)						413
184	14	Brake Ring Bracket Bolt (in ring)						493
185	14	Brake Ring Bracket Bolt Washer (in frame)						5028
186	14	Brake Ring Bracket Bolt Washer (in frame)						488
187	14	Brake Ring Bracket Bolt Washer (in ring)						5028
188	14	Brake Set Screw - (5/8" Cup Point)						558-1
188A	3B	Brake Stop Switch	775-1	574				
188B	3B	Brake Stop Switch Arm	2101	2101				
188C	3B	Brake Stop Switch Arm Screw	489-1	489-1				
188D	3B	Brake Stop Switch Plate	2110	2102				
188E	3B	Brake Stop Switch Plate Screw	882					
188F	3B	Brake Stop Switch Plate Screw Nut	425					
189	14	Brake Washer - (5/8" Lock)						5028
190	2,3,3B	Bridge	990-D	1868	28349-A	17488	C-803	C-2001
191	13	Bridge Cam	7845	7845	7845	17371-A	C-338	C-2013
192	13	Bridge Cam Bolt	400	400	400	418	418	725-1
193	13	Bridge Cam Bolt Washer	5028	5028	5028	422	422	422
194	13	Bridge Cam Oil Well Petcock	543	543	543	543	543	543
195	13	Bridge Cam Oil Well Petcock Coupling	541	541	541	541	541	541
196	13	Bridge Cam Oil Well Petcock Nipple	619	619	619	619	619	619
197	13	Bridge Cam Roller	219	219	219	17153-B	17153-B	17153-B
198	13	Bridge Cam Roller Shaft	220	220	220	17212-A	17212-A	17212-A
199	13	Bridge Cam Roller Shaft Set Screw	655-1	655-1	655-1	655-1	612-1	612-1
200	13	Bridge Cam Roller Stand - L.H.	5157-A	5157-A	5157-A	17211-L	17211-L	17211-L
201	13	Bridge Cam Roller Stand - R.H.	5156-A	5156-A	5156-A	17211-R	17211-R	17211-R
202	13	Bridge Cam Roller Stand Bolt	480	480	480	480	400	400
203	13	Bridge Cam Roller Stand Bolt Washer	5028	5028	5028	5028	5028	5028
204	13	Bridge Cam Roller Stand Bushing - L.H.	5158-B	5158-B	5158-B	5158-B	5158-B	5158-B
205	13	Bridge Cam Roller Stand Bushing - R.H.	5158-A	5158-A	5158-A	5158-A	5158-A	5158-A
206	13	Bridge Cam Roller Stand Bushing Screw	644-1	644-1	644-1	644-1	644-1	644-1

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
207	13.....	Bridge Cam Roller Stand Dowel Pin.....					470-2	470-2
208	13.....	Bridge Cam Splash Guard (Front).....	5070	5070	5070	17170	C-714	C-714
209		Bridge Cam Splash Guard (Rear).....	5161	5161	5161	17213	C-220	
210	13.....	Bridge Cam Splash Guard Screw.....	8074	8074	8074	8074	8074	8074
211	13.....	Bridge Lug.....	5212-A	5212-A	5212-A	5212-A	5212-A	C-2018
212	12,13.....	Bridge Lug Bolt.....	645-1	645-1	645-1	645-1	645-1	613-1
213	13.....	Bridge Lug Locking Plate.....	C-713	C-713	C-713	C-713	C-713	C-2019
214	13.....	Bridge Rocker Seat Steel Plate - L.H.....	5063-C	5063-B	5063-B	17209-C	C-377-C	C-2020
215	13.....	Bridge Rocker Seat Steel Plate - R.H.....	5063-C	5063-B	5063-B	17209-C	C-377-C	C-2020
216	13.....	Bridge Rocker Seat Steel Plate Pin.....	C-376	C-376	C-376	C-376	C-376	C-376
217	13.....	Bridge Rocker Seat Steel Plate Pin Screw.....	410-1	410-1	410-1	410-1	410-1	410-1
218	13.....	Bridge Rocker Seat Trough - L.H.	17351	17351	17351	17351	17351	C-2047
219	13.....	Bridge Rocker Seat Trough - R.H.	17351	17351	17351	17351	17351	C-2047
220	13.....	Bridge Rocker Seat Trough Pipe.....	768	768	768	768	768	768
221	13.....	Bridge Rocker Seat Trough Pipe Clip.....	806	806	806	806	806	806
222	13.....	Bridge Rocker Seat Trough Pipe Clip Screw.....	8139	8139	8139	8139	8139	8139
223	13.....	Bridge Rocker Seat Trough Pipe Coupling.....	1237	1237	1237	1237	1237	1237
224	13.....	Bridge Rocker Seat Trough Screw.....	524	524	524	524	524	524
225	3.....	Bridge Rocker Wing - R.H.....						C-2002
226	3.....	Bridge Rocker Wing - L.H.....						C-2003
227	12,13.....	Bridge Rocker Wing Bolt.....						725-1
228		Bridge Rocker Wing Bolt Washer.....						422
229	13.....	Bridge Roller.....	1706	1706	1706	1706	1706	1706
230	13.....	Bridge Roller Bearing.....	416-1	416-1	416-1	416-1	416-1	416-1
231	13.....	Bridge Roller Bearing Retaining Ring.....	417-1	417-1	417-1	417-1	417-1	417-1
232	13.....	Bridge Roller Bearing Retaining Ring.....	418-1	418-1	418-1	418-1	418-1	418-1
233	13.....	Bridge Roller Shaft.....	1707	1707	1707	1707	1707	1707
234	13.....	Bridge Roller Shaft Collar.....	1708	1708	1708	1708	1708	1708
235	13.....	Bridge Roller Shaft Locking Screw.....	437-1	437-1	437-1	437-1	437-1	437-1
236	11,12.....	Bridge Shaft.....	73-C	46-B	28337	17463	C-438-D	C-2006
237	9,10,11,12.....	Bridge Shaft Set Screw.....	454	454	454	454	677-1	842
238	6,9,11,12.....	Bridge Steel Plate (Hard).....	217-A	5124-C	5124-C	17231-A	C-742-B	C-2033-B
239	11.....	Bridge Steel Plate (Filler).....	772-A	5880-C	5880-C	17370-A	C-743-A	C-2034
240	6.....	Bridge Steel Plate Hinge (Bridge Half) ..	1853	1853	1853	1853	1853	1853
241	6.....	Bridge Steel Plate Hinge (St. Plate Half) ..	1925	1925	1925	1925	1925	1925
242	6.....	Bridge Steel Plate Hinge Adjusting Nut.....	1854	1854	1854	1854	1854	1854
243	6.....	Bridge Steel Plate Hinge Bracket.....	1855	1855	1855	1855	1855	1855
244	6.....	Bridge Steel Plate Hinge Bracket Screw..	739-1	739-1	739-1	739-1	739-1	739-1
245	6.....	Bridge Steel Plate Hinge Pin.....	1926	1926	1926	1926	1926	1926
246	6.....	Bridge Steel Plate Hinge Spring.....	1859	1859	1859	1859	1859	1859
247	12.....	Bridge Steel Plate Latch.....	1972	1972	C-2094	1972	C-2094	C-2094
248	12.....	Bridge Steel Plate Latch Ball.....	490-1	490-1	490-1	490-1	490-1	490-1
249	12.....	Bridge Steel Plate Latch Ball Spring.....	199	199	199	199	199	199
250	12.....	Bridge Steel Plate Latch Bracket - L.H....	C-2095	C-2095	C-2095	C-2095	C-2095	C-2095
251	12.....	Bridge Steel Plate Latch Bracket - R.H....	C-2095	C-2095	C-2095	C-2095	C-2095	C-2095
252	12.....	Bridge Steel Plate Latch Bracket Bolt....	489-1	489-1	489-1	489-1	489-1	489-1
253	12.....	Bridge Steel Plate Latch Nut.....	407	407	407	407	407	407
254	12.....	Bridge Steel Plate Latch Stop.....	C-2096	C-2096	C-2096	C-2096	C-2096	C-2096
255	12.....	Bridge Steel Plate Lifting Spring.....					C-737	C-2126
256	12.....	Bridge Steel Plate Lifting Spring Guide ..					17420	17420
257	6.....	Bridge Steel Plate Screw.....	740-1	740-1	740-1	740-1	740-1	740-1
258	9,11,12.....	Bridge Steel Plate Screw.....	614-1	614-1	614-1	614-1	614-1	614-1
259	11.....	Bridge Steel Plate Screw (Filler).....	741-1	741-1	741-1	741-1	741-1	741-1
260	9.....	Chase.....	148	7869	7869	17151	C-368	C-2058
261	9.....	Chase - (Skeleton).....	245	9658	9658	17359	C-587	

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
262	9,11,12 ...	Chase Guide.....	7870	7870	7870	7870	7870	7870
263	9,11,12 ...	Chase Guide Screw	895	895	895	895	895	895
264	9,11	Chase Handle.....	12078	12078	12078	12078	12078	12078
265	9,11	Chase Handle Screw.....	481	481	481	651	651	651
266	9,11	Chase Handle Screw (Skeleton)	482	482	482	482	651	
267	9,11	Chase Latch.....	7874	7874	7874	7874	7874	7874
268	9,11	Chase Latch Binder	7875	7875	7875	17005	17005	17005
269	9,11	Chase Latch Binder Pin.....	7876	7876	7876	7876	7876	7876
270	9,11	Chase Latch Binder Spring.....	7877	7877	7877	7877	7877	7877
271	9,11	Chase Latch Binder Washer	7878	7878	7878	7878	7878	7878
272	9,11	Chase Latch Pin	7879	7879	7879	7879	7879	7879
273	9,11	Chase Support Screw.....	8100-A	8101-A	8101-A	8189-A	8189-A	8189-A
274	14.....	Clutch.....	833-1	833-1	475-1	448-2	475-1	475-1
275	14.....	Clutch and Brake Adjusting Nut.....	422-2	422-2	503-1	503-1	503-1	503-1
276	14.....	Clutch and Brake Adjusting Nut Lock.....	423-2	423-2	504-1	504-1	504-1	504-1
277	14.....	Clutch and Brake Adjusting Nut Lock Screw	424-2	424-2	505-1	505-1	505-1	505-1
278	14.....	Clutch and Brake Disc.....	425-2	425-2	506-1	506-1	506-1	506-1
279	14.....	Clutch and Brake Disc Facing.....	426-2	426-2	507-1	507-1	507-1	507-1
280	14.....	Clutch and Brake Drive Disc.....	427-2	427-2	508-1	508-1	508-1	508-1
281	14.....	Clutch and Brake Driven Disc.....	428-2	428-2	509-1	509-1	509-1	509-1
282	14.....	Clutch and Brake Oil Slinger.....	429-2	429-2	510-1	510-1	510-1	510-1
283	14.....	Clutch and Brake Packing Ring	430-2	430-2	511-1	511-1	511-1	511-1
284	14.....	Clutch and Brake Packing Ring Screw.....	431-2	431-2	512-1	512-1	512-1	512-1
285	14.....	Clutch and Brake Packing Ring Screw Washer	432-2	432-2	513-1	513-1	513-1	513-1
286	14.....	Clutch and Brake Piston "O" Ring - (Large)	895-1	895-1	514-1	514-1	514-1	514-1
287	14.....	Clutch and Brake Piston "O" Ring - (Small).....	894-1	894-1	515-1	515-1	515-1	515-1
288	14.....	Clutch and Brake Pressure Plate.....	435-2	435-2	516-1	516-1	516-1	516-1
289	14.....	Clutch and Brake Ring.....	436-2	436-2	517-1	517-1	517-1	517-1
290	14.....	Clutch and Brake Sleeve	437-2	437-2	518-1	518-1	518-1	518-1
292	14.....	Clutch and Brake Spring.....	445-2	445-2	520-1	520-1	520-1	520-1
293	14.....	Clutch and Brake Spring Bolt	439-2	439-2	521-1	521-1	521-1	521-1
294	14.....	Clutch and Brake Spring Bolt Nut.....	440-2	440-2	522-1	522-1	522-1	522-1
295	14.....	Clutch Bolt.....	845-1	845-1	757-1	757-1	757-1	757-1
296	14.....	Clutch Pin	441-2	441-2	C-822	C-822	C-822	C-822
297	14.....	Clutch Key.....	2032	2032	C-2065	17483	C-2065	C-2065
298	14.....	Clutch Rotating Union	465-1	465-1	465-1	465-1	465-1	465-1
299	4,5,11 ...	Connecting Rod.....	44-F	44-F	28324	17441	C-436	C-2004
300	4,5.....	Connecting Rod Bushing	5937-A	5937-A	28038	17006	C-48-A	C-48-A
301	5.....	Connecting Rod Bushing Screw.....	532	532	646	532	532	532
302	4,5.....	Connecting Rod Collar			28005-B			
303	4,5.....	Connecting Rod Collar Bolt.....			433			
304	4,12,16 ...	Connecting Rod Grease Cup	406-1	406-1	406-1	406-1	406-1	406-1
305	4,12,16 ...	Connecting Rod Grease Cup Elbow.....	417	417	417	417	417	417
306	12.....	Connecting Rod Washer	7891	7891		17014-A	C-50	C-50
307	12,16	Connecting Rod Washer Bolt.....	5467	5467		5467	5467	5467
308	12.....	Connecting Rod Washer Dowel Pin.....	462-2	462-2		462-2	462-2	462-2
309	9.....	Counter.....	438-1	438-1	438-1	438-1	438-1	438-1
310	9.....	Counter Bracket.....	1990	1870	28309	28309	C-830-A	C-830-A
311	9.....	Counter Bracket Screw	890	890	890	890	890	890
312	9.....	Counter Lever Pivot Stud.....	5413	5413	5413	5413	5413	5413
313	9.....	Counter Lever Pivot Stud Set Screw.....	445	445	445	445	445	445
314	9.....	Counter Operating Arm.....	5416	5416	5416	5416	5416	5416

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
315	9.....	Counter Operating Arm Adjusting Screw.....	665	665	665	665	665	665
316	9.....	Counter Operating Arm Adjusting Screw Nut	442	442	442	442	442	442
317	9.....	Counter Operating Arm Pivot Link.....	5414	5414	5414	5414	5414	5414
318	9.....	Counter Operating Arm Stud.....	5415	5415	5415	5415	5415	5415
319	9.....	Counter Operating Arm Stud Ring.....	1253	1253	1253	1253	1253	1253
320	9.....	Counter Operating Lever	5417	5417	5417	5417	5430	5430
321	9.....	Counter Operating Lever Base Block.....	5412	5412	5412	5412	5412	5412
322	9.....	Counter Operating Lever Base Block Screw	895	895	895	895	444	444
323	9.....	Counter Operating Trip Block.....	115-A	115-A	115-A	108-A		
324	9.....	Counter Operating Trip Block Screw	491	491	491	491		
325	9.....	Counter Operating Trip Stud					C-836	C-836
326	9.....	Counter Screw	506	506	506	506	506	506
327	9.....	Counter Spring.....	7198	7198	7198	7198	7198	7198
328	9.....	Counter Wire.....	1779	1779	1779	1779	1779	1779
329	9.....	Counter Wire Screw	605	605	605	605	605	605
330	9.....	Counter Wire Screw Nut	442	442	442	442	442	442
331	4,7,8.....	Electrical Conduit - 3/8" (Sealtite).....						
332	16.....	Electrical Conduit - 1".....						
333	16.....	Electrical Conduit - 1 1/4".....						
334	4,7,8.....	Electrical Conduit Connector (Type TB 3/8")						
335		Electrical Conduit Connector (Type TB 1")						
336		Electrical Conduit Connector (Type TB 1 1/4")						
337	8.....	Electrical Conduit Connector (Type TBEL 3/8")						
338		Electrical Conduit Connector (Type TBEL 1 1/4")						
339		Electrical Conduit Strap - 7/8"						
340		Electrical Conduit Strap - 1 1/2"						
341		Electrical Conduit Strap - 1 3/4"						
342		Electrical Conduit Strap Screw						
343		Electrical Wire - #6						
344		Electrical Wire - #10 Green (Ground).....						
345		Electrical Wire - #14						
346		Electrical Wire - #16						
347	18.....	Electrical Control Panel	876-1	876-1	591-1	539-1	539-1	539-1
348	16.....	Electrical Control Panel Bolts	413	413	413	413	413	413
348A	18A.....	Electrical Control Panel Bracket.....	2057	2057-A				
348B	18A.....	Electrical Control Panel Bracket Bolt.....	413	413				
349	18.....	Electrical Control Panel Control Relay....	452-2	452-2	571-1	571-1	571-1	571-1
349A	18,18A.....	Electrical Control Panel Control Relay....	456-2	456-2	455-2	455-2	455-2	455-2
350	18.....	Electrical Control Fusible Blocks (110V.) (220V.)	572-1	572-1	572-1	572-1	572-1	572-1
351	18.....	Electrical Control Fusible Blocks (220V.) (600V.)			573-1	573-1	573-1	573-1
352	18.....	Electrical Control Fusible Disconnect Switch.....	454-2	454-2	574-1	574-1	574-1	574-1
352A	18A.....	Electrical Control Magnetic Starter - Size 0.....	442-2	442-2				
353	18,18A.....	Electrical Control Magnetic Starter - Size 1.....	444-2	442-2	575-1	575-1	575-1	575-1
354	18,18A.....	Electrical Control Magnetic Starter - Size 2.....			576-1	576-1	576-1	576-1
355	18.....	Electrical Control Pneumatic Timing Relay.....						586-1
356		Electrical Control Receptacle (110V.).....			579-1		579-1	579-1
357	18.....	Electrical Control Terminal Block - 50 Amp			582-1	582-1	582-1	582-1
358	18,18A.....	Electrical Control Terminal Block - 15 Amp	583-1	583-1	583-1	583-1	583-1	583-1

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
359	18.....	Electrical Control Transformer (Specify Voltage).....	453-2	453-2	584-1	584-1	584-1	584-1
360	18.....	Electrical Control Trouble Light Bulb.....						
361	18.....	Electrical Control Trouble Light Receptacle.....						
362	5,16.....	Electronic Stop Start Magnet.....	768-1	768-1	768-1	768-1	768-1	768-1
363	5,16.....	Electronic Stop Start Magnet Bracket.....	2038	2038	28341	17494	C-854	C-854
363A	5.....	Electronic Stop Start Magnet Bracket.....			28350			
364	5,16.....	Electronic Stop Start Magnet Bracket Screw.....	657-1	657-1	514	475-2	465	465
365	16.....	Electronic Stop Start Magnet Bracket Screw Nut.....	442	442		442	C-859	C-859
366	16.....	Electronic Stop Start Magnet Bracket Seat.....					C-273-A	C-273-A
367	16.....	Electronic Stop Start Magnet Bracket Seat Screw.....					801	801
368	16.....	Electronic Stop Start Magnet Bracket Seat Screw Nut.....					560	560
369	16,5.....	Electronic Stop Start Magnet Screw.....	857-1	857-1		477-2	1279	1279
369A	5.....	Electronic Stop Start Magnet Screw Nut...	28352	28352	28352	28352		
370	5.....	Electronic Stop Start Magnet Spring.....			28342			
371	5.....	Electronic Stop Start Magnet Spring Screw.....			514			
372	5,16.....	Electronic Stop Start Magnet Switch.....	800-1	800-1	800-1	800-1	800-1	800-1
373	5,16.....	Electronic Stop Start Magnet Switch Bracket.....	2039	2039	28344	2039	C-858	C-858
374	5.....	Electronic Stop Start Magnet Switch Bracket Screw.....	881	881	881	628-1	881	881
375	5,16.....	Electronic Stop Start Magnet Switch Screw.....	512	512	512	512	512	512
376	18.....	Floor Stand Control Console.....			760-1	760-1	760-1	760-1
377	18,18A.....	Floor Stand Control Selector Switch.....	562-1	562-1	562-1	562-1	562-1	562-1
378	18,18A.....	Floor Stand Control Selector Switch.....	563-1	563-1	563-1	563-1	563-1	563-1
379	18,18A.....	Floor Stand Control Start Switch.....	564-1	564-1	564-1	564-1	564-1	564-1
380	18,18A.....	Floor Stand Control Stop Switch.....	566-1	566-1	566-1	566-1	566-1	566-1
381	18,18A.....	Floor Stand Control Stop Switch.....	567-1	567-1	567-1	567-1	567-1	567-1
382	18,18A.....	Floor Stand Control Timer.....	761-1	761-1	761-1	761-1	761-1	761-1
383	3C,4,14.....	Flywheel.....	2008	2008	28296	17459	C-775-A	C-2012-B
384	14.....	Flywheel Bearing.....	834-1	834-1	1059	1059	1059	1059
385	14.....	Flywheel Bearing Nut.....	835-1	835-1	463	451-1	463	463
386	14.....	Flywheel Bearing Nut Washer.....			1061		1061	1061
387	14.....	Flywheel Bearing Retainer.....	2009-A	2009-A	C-791	C-791	C-791	C-791
388	14.....	Flywheel Bearing Retainer Bolt.....	632	632	505	505	505	505
389	14.....	Flywheel Bearing Retainer Bolt Washer ..	1050	1050	488	469	488	488
390	14.....	Flywheel Bearing Retainer Clamp Bolt....			404		404	404
391	14.....	Flywheel Bearing Retainer Clamp Bolt Washer.....			496		496	496
392	14.....	Flywheel Bearing and Seal Retainer.....	2010	2010	C-793	C-793	C-793	C-793
393	14.....	Flywheel Bearing and Seal Retainer Bolt..	625-1	625-1	752-1	752-1	752-1	752-1
394	14.....	Flywheel Bearing Shoulder Washer.....			C-593	C-593	C-593	C-593
395	14.....	Flywheel Bearing Spacer.....	2011	2047	C-2015	17460	C-2015	C-2015
396	14.....	Flywheel Bearing Inner Spacer.....	2097	2097	C-846	17461	C-846	C-846
397	4.....	Flywheel Brake Handle.....			28310			
398	4.....	Flywheel Brake Handle Bolt.....			451			
399	4.....	Flywheel Brake Handle Spring.....			5513			
400	4.....	Flywheel Brake Handle Spring Screw.....			514			
401	4.....	Flywheel Brake Handle Stop.....			535-1			

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22x32 Part No.	Style 8-6 28x41 Part No.	Style 9-7 28x41 Part No.	Style 8-7 33x47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
402	4.....	Flywheel Brake Handle Stop Nut			407			
403	16.....	Flywheel Brake Hand Lever					C-492	C-492
404	16.....	Flywheel Brake Hand Lever Bolt					451	451
405	4,16.....	Flywheel Brake Shaft.....			28311		C-489	C-489
406	4.....	Flywheel Brake Shaft Bearing.....			28312			
407	4.....	Flywheel Brake Shaft Bearing Bolt			400			
408	4.....	Flywheel Brake Shaft Bearing Bolt Washer			5028			
409	4,16.....	Flywheel Brake Shoe			28313		C-2107	C-2107
410	4,16.....	Flywheel Brake Shoe Arm.....			28314		C-463-R	C-463-R
411	4,16.....	Flywheel Brake Shoe Arm Pin.....			470		5970	5970
412	16.....	Flywheel Brake Shoe Arm Spring.....			5980		5980	5980
413	16.....	Flywheel Brake Shoe Arm Spring Screw....			503		503	503
414	4,16.....	Flywheel Brake Shoe Lining			28315		C-469	C-469
415	4,16.....	Flywheel Brake Shoe Lining Rivet.....			8417		8417	8417
416	4,16.....	Flywheel Brake Shoe Pin.....			28316		C-464	C-464
417	16.....	Flywheel Brake Spring.....			5513		5513	5513
418	16.....	Flywheel Brake Spring Bolt.....			437		437	437
419	16.....	Flywheel Brake Spring Bolt Nut.....			407		407	407
420	4,16.....	Flywheel Brake Spring Pin			9081		9081	9081
421	16.....	Flywheel Brake Support					C-662	C-662
422	16.....	Flywheel Brake Support Bolt.....					404	404
423	16.....	Flywheel Brake Support Dowel Pin					493-2	493-2
424	16.....	Flywheel Brake Support Spacer.....					C-2125	C-2125
425	4,14.....	Flywheel Grease Fitting	598	598	598	598	598	598
426	14.....	Flywheel Grease Seal - Small	836-1	836-1	1251	1251	1251	1251
427	14.....	Flywheel Grease Seal - Large	837-1	837-1	476-1	476-1	476-1	476-1
428	14.....	Flywheel Shaft.....	2051	2012		17458	C-790-C	C-2007-C
429	3C,14.....	Flywheel Shaft Bearing	838-1	838-1		601	601	601
429A	3C.....	Flywheel Shaft Bearing (Sm)	452	452				
430	3C,14.....	Flywheel Shaft Bearing Bolt.....	533	533		533	533	533
430A	3C.....	Flywheel Shaft Bearing Bolt.....	844-1	844-1				
431	3C,14.....	Flywheel Shaft Bearing Bolt Washer	534	534		534	534	534
432	3C,14.....	Flywheel Shaft Bearing Bolt Washer - Lock	422	422		422	422	422
433	14.....	Flywheel Shaft Bearing Dowel Pin.....	492-2	492-2		450-2	450-2	450-2
434	1,2,3,3B ..	Frame	2114	2014	28195-A	17471	C-475-D	C-2000
435	12.....	Frame Rocker Seat Side Plate.....						C-2092
436	12.....	Frame Rocker Seat Side Plate Bolt						1765
437	4,7.....	Frame Side Door - L.H.			28317		C-789-A	
438	4,6.....	Frame Side Door - R.H.			28317		C-789-A	
439	4,6.....	Frame Side Door Handle.....			806-1		806-1	
440	4,6.....	Frame Side Door Handle Latch Catch			C-857		C-857	
441	4.....	Frame Side Door Handle Latch Catch Screw			409		409	
442	1,2A.....	Frame Side Door Handle Screw			8074		8074	
443	4,6.....	Frame Side Door Screw.....			767-1		767-1	
444	8.....	Frame Side Panel - L.H.						C-2171
445	8.....	Frame Side Panel - R.H.						C-2172
446	8.....	Frame Side Panel Door Handle						806-1
447	8.....	Frame Side Panel Screw.....						628
448	8.....	Frame Side Panel Screw.....						890
449	5,16.....	Gear Wheel - L.H.	5915E	5915E	28295	17386-B	C-45	C-2005
450	4,16.....	Gear Wheel - R.H.	5915E	5915E	28295	17386-B	C-45	C-2005
451	4,5.....	Gear Wheel Bearer.....	1860	1860	1860	1860		
452	16.....	Gear Wheel Bearer Pads.....					C-2063	C-2063
453	16.....	Gear Wheel Bearer Pad Screw					464	464

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
454	4,5	Gear Wheel Bearer Screw	464	464	464	464		
456	5,17	Gear Wheel Bearer Wiper - L.H.	1871	1871	C-192	17442-A	C-2089	C-2089
457	5,17	Gear Wheel Bearer Wiper - R.H.	1871	1871	C-191	17442-A	C-2089	C-2089
458	5,17	Gear Wheel Bearer Wiper Cover	1872	1872	C-193	1872	C-2090	C-2090
459	5,17	Gear Wheel Bearer Wiper Cover Screw	868	868	503	868	503	503
460	5,17	Gear Wheel Bearer Wiper Screw	413	413	881	413	632	632
461	5,17	Gear Wheel Bearer Wiper Wick	1873	1873	C-2093	1873	C-2093	C-2093
462	12	Gear Wheel Crank Pin - L.H.	5916	5916		17052	C-49	C-49
463	17	Gear Wheel Crank Pin - R.H.	336	336		17052	C-546	C-546
464	16	Gear Wheel Crank Pin Lock Screw	431	431		677-1	602	602
464A	3E	Gear Wheel Lubricator Brush				718-1		
464B	3E	Gear Wheel Lubricator Brush						
		Adjusting Nut				407		
464C	3B	Gear Wheel Guard	2084-L	2049-L		17474		
464D	3C	Gear Wheel Guard	2084-R	2049-R		17474		
465	5	Gear Wheel Guard (Lower) - L.H.			28318		C-816	C-2087
466	5	Gear Wheel Guard (Lower) - R.H.			28318		C-816	C-2087
467	5,12	Gear Wheel Guard (Upper) - L.H.			28319		C-815	C-2086
468	5,12	Gear Wheel Guard (Upper) - R.H.			28319		C-815	C-2086
469	2,3	Gear Wheel Guard Grease Cup					468-1	468-1
470	3B,5,12	Gear Wheel Guard Screw	491	491	491	480-2	491	628
471	3C,5,12	Gear Wheel Guard Screw	413	624-1	881		514	517
472	3C,5	Gear Wheel Guard Support Bar	2117	2093	28320	17477		
472A	3C	Gear Wheel Guard Support Bar Bolt	505	505		491		
473	4,12	Gear Wheel Key	7930	7930	28034	7930	C-101	C-101
474	12	Gear Wheel Lock Screw	677-1	677-1	842	677-1	497-1	497-1
475	7	Gear Wheel Oil Drain Petcock					543	
476	7	Gear Wheel Oil Drain Petcock Coupling					541	
477	7	Gear Wheel Oil Drain Petcock Nipple					619	
478	8	Gear Wheel Oil Drain Plug						1103
479	2A	Gear Wheel Well Guard - L.H.					C-817	
480	2A	Gear Wheel Well Guard - R.H.					C-817	
481	2A	Gear Wheel Well Guard Screw					890	
482	2A	Gear Wheel Well Guard Screw					491	
483	12	Impression Air Cylinder			777-1	441-1	441-1	466-1
484	12	Impression Air Cylinder Brackets - L.H.			28330-L	17481-L	C-727-B	C-2040
485	12	Impression Air Cylinder Brackets - R.H.			28330-R	17481-R	C-727-B	C-2040
486	12	Impression Air Cylinder Bracket Bolt			778-1	778-1	757-1	757-1
487	12	Impression Air Cylinder Bracket						
		Dowel Pin			402-2	402-2		402-2
488	12	Impression Air Cylinder Cushion Spring			C-753	C-753	C-753	C-753
489	12	Impression Air Cylinder Cushion						
		Spring Guide			C-754	C-754	C-754	C-754
490	12	Impression Air Cylinder Cushion						
		Spring Guide Pin			C-755	C-755	C-755	C-755
491	12	Impression Air Cylinder Latch Cam			C-729-A	C-729-A	C-729-A	C-729-A
492	12	Impression Air Cylinder Latch Cam Pin			C-730	C-730	C-730	C-730
493	12	Impression Air Cylinder Latch						
		Cam Pin Lock Ring			438-2	438-2	438-2	438-2
494	12	Impression Air Cylinder Yoke			28339	C-731-B	C-731-B	C-2045
495	12	Impression Air Cylinder Yoke Pin			C-732-A	C-732-A	C-732-A	C-2123
496	12	Impression Air Cylinder Yoke						
		Pin Lock Ring			438-2	438-2	438-2	438-2
497	12	Impression Air Cylinder Yoke Set Screw			445	445	445	445
498	12	Impression Air Cylinder Hose			447-3	447-6	447-3	447-3

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22x32 Part No.	Style 8-6 28x41 Part No.	Style 9-7 28x41 Part No.	Style 8-7 33x47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
499	12.....	Impression Air Cylinder Hose			447-4	447-4	447-4	447-4
500	12.....	Impression Air Cylinder Hose Elbow Connector			423-1	423-1	423-1	423-1
501	12.....	Impression Air Cylinder Hose Straight Connector			498-1		498-1	498-1
502	11,12	Impression Sleeve - L.H.	1842-L	1842-L	28331-L	17435-L	C-733	C-733
503	11,12	Impression Sleeve - R.H.	1842-R	1842-R	28331-R	17435-R	C-733	C-733
504	10,11,12 ..	Impression Sleeve Grease Cup	406-1	406-1	406-1	406-1	406-1	406-1
505	10,11,12 ..	Impression Sleeve Grease Cup Elbow	542-1	542-1	542-1	542-1	542-1	542-1
506	10,11,12 ..	Impression Sleeve Grease Cup Pipe.....	1269	1269	1269	1269	1269	1269
507	11,12.....	Impression Sleeve Housing - L.H.	1840-L	1840-L	28332-L	28332-AL	C-2039-L	C-2039-L
508	11,12.....	Impression Sleeve Housing - R.H.	1840-R	1840-R	28332-R	28332-AR	C-2039-R	C-2039-R
509	10,12.....	Impression Sleeve Lock Bolt.....	742-1	742-1	742-1	742-1	742-1	742-1
510	12.....	Impression Valve.....			841-1	440-1	440-1	440-1
511	4.....	Impression Valve (Solenoid Operate)			821-1			
512	1.....	Impression Valve Foot Pedal			5788			
513	1.....	Impression Valve Foot Pedal Bearing.....			17355			
514	1.....	Impression Valve Foot Pedal Bearing Bolt			484			
515	1.....	Impression Valve Foot Pedal Bearing Bolt Washer			5028			
516	1.....	Impression Valve Foot Pedal Set Screw ..			428			
517	1.....	Impression Valve Foot Pedal Shaft			28355			
518	1.....	Impression Valve Foot Pedal Shaft Stop ..			28348			
519	1.....	Impression Valve Foot Pedal Switch.....			822-1			
520	1.....	Impression Valve Foot Pedal Switch Arm			28346			
521	1.....	Impression Valve Foot Pedal Switch Arm Roller			716			
522	1.....	Impression Valve Foot Pedal Switch Arm Roller Pin			712			
523	1.....	Impression Valve Foot Pedal Switch Arm Screw			532			
524	12.....	Impression Valve Operating Link.....			28333	28268	C-735-A	C-2085
525	12.....	Impression Valve Operating Link Screw ..			C-187	C-187	C-187	C-187
526	12.....	Impression Valve Screw			881	881	881	881
527	12.....	Impression Valve Tie Rod			28085-A	17486	C-834	C-2071
528	12.....	Impression Valve Tie Rod End - L.H.			28334-L	C-736-B	C-736-B	C-736-B
529	12.....	Impression Valve Tie Rod End - R.H.			28334-R	C-737-B	C-737-B	C-737-B
530	12.....	Impression Valve Tie Rod End Pin			C-278	C-278	C-278	C-278
531	12.....	Impression Valve Tie Rod End Spring.....				5802	5802	5802
532	12.....	Impression Valve Tie Rod End Spring Pin				9081	9081	9081
533	12.....	Impression Valve Tie Rod End Spring Screw				17497	17497	17497
534	12.....	Impression Valve Tie Rod Pin			481-2	481-2	463-2	463-2
535	12.....	Impression Valve Tubing Branch Tee			C-2162	C-2162	C-2162	C-2162
536		Impression Valve Tubing Junction.....				C-2110	C-2110	C-2110
537		Impression Valve Tubing Junction (Long)						C-2111
538	13.....	Impression Valve Tubing Junction Hose ..			447-5	447-6	447-5	447-5
539		Impression Valve Tubing Junction Screw..				880	880	880
540	11,12.....	Impression Worm	489	489	489	489	489	489
541	10,12.....	Impression Worm Dial Plate - L.H.....	1875	1875	1875	1875	C-761	C-761
542	10,12.....	Impression Worm Dial Plate - R.H.....	1875	1875	1875	1875	C-761	C-761
543	10,12.....	Impression Worm Dial Plate Indicator	1874	1874	C-2138	1874	C-2138	C-2138
544	10,12.....	Impression Worm Dial Plate Indicator Screw	715-1	715-1	715-1	715-1	715-1	715-1
545	10,12.....	Impression Worm Dial Plate Screw	715-1	715-1	715-1	715-1	715-1	715-1
546	11,12.....	Impression Worm Key	5764	5764	5764	5764	5764	5764
547	10,11,12 ..	Impression Worm Shaft	1843	1843	1843	1843	C-780	C-780

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
548	11,12	Impression Worm Shaft Collar Nut	1861	1861	1861	1861	1861	1861
549	10,12	Impression Worm Shaft Lock Bolt	742-1	742-1	742-1	742-1	742-1	742-1
550	10,11,12	Impression Worm Shaft Micrometer Collar	17416	17416	17416	17416	17416	17416
551	11,12	Impression Worm Shaft Micrometer Collar Screw	428	428	428	428	428	428
551A	3C	Intermediate Gear	2015-A	2015-A				
552	17	Intermediate Gear - L.H.				17456	C-2008	C-2008
553	17	Intermediate Gear - R.H.				17456	C-2008	C-2008
554	17	Intermediate Gear Guard - L.H.	2086	2086		17476-L	C-828	C-828
555	17	Intermediate Gear Guard - R.H.				17476-R	C-828	C-828
556	17	Intermediate Gear Guard Bolt	517	517		881	505	505
557	17	Intermediate Gear Key	2068	2068		17484	C-2067	C-2067
558	17	Intermediate Gear Lubricator Brush				718-1	718-1	718-1
559	17	Intermediate Gear Lubricator Brush Check Nut				407	407	407
560	14	Intermediate Gear Pinion - L.H.				17455	C-2010-B	C-2010-B
561	14	Intermediate Gear Pinion - R.H.				17455	C-2010-B	C-2010-B
562	14,17	Intermediate Gear Pinion Key				17484	C-2067	C-2067
563	14	Intermediate Gear Pinion Retaining Ring				1290	1290	1290
564	17	Intermediate Gear Retaining Ring				1290	1290	1290
565	17	Intermediate Gear Shaft				17457	C-788	C-2011
566	17	Intermediate Gear Shaft Bearing				879-1	477-1	477-1
567	17	Intermediate Gear Shaft Bearing				850-1	765-1	452
568	17	Intermediate Gear Shaft Bearing Bolt				533	671-1	671-1
569	17	Intermediate Gear Shaft Bearing Bolt Washer				534	527-1	527-1
570	17	Intermediate Gear Shaft Bearing Bolt Washer Lock				422	528-1	528-1
571	17	Intermediate Gear Shaft Bearing Grease Fitting				726-1	726-1	726-1
572	8	Intermediate Gear Shaft Bearing Guard				17479	C-827	C-2109
573	8	Intermediate Gear Shaft Bearing Guard Screw				482-2	890	890
574	12	Main Shaft	72	5119	28003	17462	C-823	C-2009
575	16	Main Shaft Bushing (Center)						C-2017
576	16	Main Shaft Bushing (End)						C-2016
577	16	Main Shaft Bushing Lock Screw						C-2038
578	4,16	Main Shaft Oil Cup	599	599	599	599	599	599
579	17	Main Shaft Oil Drain Elbow	419	419	419	419	419	419
580*	4,17	Main Shaft Oil Drain Nipple	529-1	529-1	529-1	529-1	529-1	529-1
581	4,17	Main Shaft Oil Drain Petcock	543	543	543	543	543	543
582	4,17	Main Shaft Oil Drain Tee	621	621	621	621	621	621
583	4,17	Main Shaft Oil Drain Union	696	696	696	696	696	696
584	4,17	Main Shaft Oil Gauge	600	600	600	600	600	600
585	4,17	Main Shaft Oil Gauge Coupling	541	541	541	541	541	541
586	17	Main Shaft Oil Gauge Elbow				419	419	419
587	4	Main Shaft Oil Gauge Elbow Street	417	417	417	417		
588	17	Main Shaft Oil Gauge Elbow 45°	525	525				525
589*	4,17	Main Shaft Oil Gauge Nipple	529-1	529-1	529-1	529-1	529-1	529-1
590	4,5,16,17	Main Shaft Oil Seal	1281	1281	1281	1281	1289	471-1
591		Oiling System Compression Bushing	846	846	846	846	846	846
592	15	Oiling System Compression Nut	847	847	847	847	847	847
593	15	Oiling System Compression Sleeve	848	848	848	848	848	848
594		Oiling System Closure Plug	845	845	845	845	845	845
595	16,17	Oiling System Elbow Adapter	849	849	849	849	849	849

* Specify Length of Tubing or Pipe

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN.

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
596	9.....	Oiling System Flow Indicator	1243	1243	1243	1243	1243	1243
597	13.....	Oiling System Hose Assembly.....	854	854	854	854	854	854
598	15.....	Oiling System Junction 2 Way	1133	1133	1133	1133	1133	1133
599	13.....	Oiling System Junction 3 Way	856	856	856	856	856	856
600	13,16.....	Oiling System Junction 4 Way Single	857	857	857	857	857	857
601		Oiling System Junction 5 Way Single	858	858		858	858	858
602	16.....	Oiling System Junction 7 Way Single	401-1	401-1	401-1	401-1	401-1	
603	16.....	Oiling System Junction 8 Way Single					860	860
604	13.....	Oiling System Junction Bolt	512	512	512	512	512	512
605	4.....	Oiling System Lubricator - AAD-R3.....			816-1			
606	6.....	Oiling System Lubricator - AAB-L3.....					758-1	758-1
607	15.....	Oiling System Lubricator - PJD-R						1256
607A	3B	Oiling System Lubricator - PJC-R	746-1	746-1		746-1		
608	3B	Oiling System Lubricator Gear	1525-D	1525-D		17500		
608A	15.....	Oiling System Lubricator Gear						C-682
609	3B,15.....	Oiling System Lubricator Gear Guard.....	2126	2115		17473-A		C-684-A
610	15.....	Oiling System Lubricator Gear Guard Screw						465
611	15.....	Oiling System Lubricator Gear Set Screw.....	536	536		536		536
612	4,6,15	Oiling System Lubricator Reservoir	1246	1246	817-1	819-1	819-1	817-1
613	4,6,15	Oiling System Lubricator Reservoir Bolt..	643-1	643-1	632	881	632	882
614	3B,4,6,15	Oiling System Lubricator Reservoir Bracket.....	2085	2085	28325	17478	C-804-A	C-2064
615	3B,4,6,15	Oiling System Lubricator Reservoir Bracket Bolt.....	643-1	643-1	505	447	881	447
616	4,6,17	Oiling System Lubricator Sprocket Chain..			820-1		755-1	820-1
617	4,17.....	Oiling System Lubricator Sprocket Chain Guard			28327		C-798	C-798
618	4,17.....	Oiling System Lubricator Sprocket Chain Guard Screw			889		517	517
619	4,6	Oiling System Lubricator Sprocket - Driven			818-1		753-1	753-1
620	4,17.....	Oiling System Lubricator Sprocket-Driving			28326		754-1	754-1
621	6,17.....	Oiling System Lubricator Sprocket Drive Shaft.....					C-797	C-2179
622	6,17.....	Oiling System Lubricator Sprocket Drive Shaft Bolt.....					512	739-1
623	4,6,17.....	Oiling System Lubricator Sprocket Set Screw			428		428	428
624	16.....	Oiling System Meter Units - FJB - #0.....	1241	1241	1241	1241	1241	1241
625		Oiling System Meter Units - FJB - #1.....	1282	1282	1282	1282	1282	1282
626		Oiling System Straight Adapter	866	866	866	866	866	866
627	13	Oiling System Tubing - Brass - $\frac{5}{32}$ "	1101	1101	1101	1101	1101	1101
628	15.....	Oiling System Tubing - Copper - $\frac{5}{32}$ "	1102	1102	1102	1102	1102	1102
629	13.....	Oiling System Tubing Clip - Single	867	867	867	867	867	867
630		Oiling System Tubing Clip - Double.....	1063	1063	1063	1063	1063	1063
631	13.....	Oiling System Tubing Clip Screw.....	409	409	409	409	409	409
632	6,17.....	Outboard Bearing Support - L.H.....				17470-L	C-814	C-2023
633	6,17.....	Outboard Bearing Support - R.H.....				17470-R	C-814	C-2024
634	6,17.....	Outboard Bearing Support Bolt				449-2	479-1	479-1
635	17.....	Outboard Bearing Support Bolt						404
636	6,17.....	Outboard Bearing Support Pin				C-2134	C-826	C-2134
637	17.....	Outboard Bearing Support Pin						1072
638	4,6,17	Pinion - L.H.	1863-A-L	1863-A-L	28321	17475	C-74-B	C-74-B
639	4,6,17	Pinion - R.H.	1863-A-R	1863-A-R	28321	17475	C-74-B	C-74-B

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
640	4,5,17	Pinion Key	151	151	28322	17485	C-97	C-97
641	4,5,17	Pinion Retaining Ring	743-1	743-1	400-1	1290	1290	1290
642	4	Pinion Shaft	2055	2017	28323			
643	4,5	Pinion Shaft Bearing	850-1	850-1	601			
644	4,5	Pinion Shaft Bearing Bolt	670-1	670-1	533			
645	4,5	Pinion Shaft Bearing Bolt Washer	527-1	527-1	534			
646	4,5	Pinion Shaft Bearing Bolt Washer Lock	528-1	528-1	422			
647	5	Pinion Shaft Bearing Dowel Pin	492-2	492-2	17214			
648	9	Safety Guard Air Valve			1285		1285	1285
649	9	Safety Guard Air Valve Angle Fitting			1295		1295	1295
650	9	Safety Guard Air Valve Elbow			417		417	417
651	9	Safety Guard Air Valve Screw			881		881	881
652	9	Safety Guard Flexible Hose			450-1		450-1	450-1
653	9	Safety Guard Hose Male End			448-1		448-1	448-1
654	9	Safety Guard Hose Swivel Adapter			449-1		449-1	449-1
655	9	Safety Guard Operating Link	28333	2123	28268	17489	C-381-C	C-2084
655A	9	Safety Guard Operating Link Spring	5980					
655B	9	Safety Guard Operating Link Spring Pin	9081					
656	9	Safety Guard Operating Link Screw	C-187	C-187	C-187	C-187	C-187	C-187
656A	9	Safety Guard Switch	775-1	862-1		862-1		
656B	9	Safety Guard Switch	775-1					
656C	9	Safety Guard Switch Arm	2076					
656D	9	Safety Guard Switch Bracket	17490	17490		17490		
656E	9	Safety Guard Switch Bracket Screw	614-1	614-1		614-1		
656F	9	Safety Guard Switch Trip Plunger	17491	17491		17491		
656G	9	Safety Guard Switch Trip Plunger Yoke	457-2	457-2		457-2		
656H	9	Safety Guard Switch Trip Plunger Pin	458-2	458-2		458-2		
656J	9	Safety Guard Switch Trip Plunger Spring	7007	7007		7007		
656K	9	Safety Guard Switch Trip Plunger Washer	A-636	A-636		A-636		
657	9	Safety Guard Tie Rod	2112	28085-A	28085-A	17487	C-380-A	C-2072
658	9	Safety Guard Tie Rod End - L.H.	C-120-A	C-120-A	C-120-A	C-120-A	C-120-A	C-2073
659	9	Safety Guard Tie Rod End - R.H.	C-181-A	C-181-A	C-181-A	C-181-A	C-181-A	C-2074
660	9	Safety Guard Tie Rod End Pin	463-2	463-2	463-2	463-2	463-2	463-2
661	9	Safety Guard Tie Rod End Screw	428	428	428	428	445	445
662	9	Safety Guard Tie Rod End Swivel Pin	7065	7065	7065	7065	7065	7065
663		Safety Guard Tie Rod Shield						C-2075
664		Safety Guard Tie Rod Shield Clip						603-1
665		Safety Guard Tie Rod Shield Clip Screw						481-1
666		Safety Guard Tie Rod Shield Clip Screw Nut						482-1
667	9,13	Safety Guard Tubing			670		670	670
668	9,13	Safety Guard Tubing Junction			28255		28255	28255
669	9,13	Safety Guard Tubing Junction Screw			880		880	880
670	17	Thrust Shaft - (Short)					C-812	C-2143
671	17	Thrust Shaft - (Long)					C-811	C-2059
672	17	Thrust Shaft Bracket - L.H.					C-2060	C-2061
673	17	Thrust Shaft Bracket - R.H.					C-2060	C-2060
674	17	Thrust Shaft Bracket Bolt					1009	1009
675	17	Thrust Shaft Bracket Cap					773-1	773-1
676	17	Thrust Shaft Nut					8320	8320
677	17	Thrust Shaft Shoe					C-2062-A	C-2062-A
678	17	Thrust Shaft Shoe Bearer Pad					C-2063	C-2063
679	17	Thrust Shaft Shoe Bearer Pad Screw					464	464
680	17	Thrust Shaft Shoe Pin					7975	7975
681	1A,2A,3A,3C	V Belt	1164	1164	1166	1166	1167-F	1167-F
682	1A,2A,3A	V Belt Guard	2077	2077	28347	17496	C-820	C-2146-A

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN

Key No.	Plate	Part Name	Style 8-6 22 x 32 Part No.	Style 8-6 28 x 41 Part No.	Style 9-7 28 x 41 Part No.	Style 8-7 33 x 47 Part No.	Style 8-7 C-54 Part No.	Style 10-8-7 C-66 Part No.
683	1A,3A	V Belt Guard Support	5876	5876	5876	5876	5876	5876
684	1A,3A	V Belt Guard Support Screw.....	890	890	890	890	890	890
685	1A,3A	V Belt Guard Support Set Screw	1033	1033	1033	1033	1033	1033
686		V Belt Sheave	851-1	851-1	825-1	825-1	873-1	882-1
687	2A,3A,3C	Variable Motor Drive Bracket - L.H.	2064	2037	17447-A	C-818-B	C-2174
688	2A,3A	Variable Motor Drive Bracket - R.H.	2064	2037	17447-A	C-818-B	C-2174
689	3A	Variable Motor Drive Bracket Adjusting Screw.....	1037	1037
690	3A	Variable Motor Drive Bracket Adjusting Screw Block.....	1968	1968
691	3A	Variable Motor Drive Bracket Adjusting Screw Block Nut	403	403
692	6.....	Variable Motor Drive Bracket Bearing.....	766-1	766-1	766-1
693	6.....	Variable Motor Drive Bracket Bearing Bolt.....	404	404	404
694	6.....	Variable Motor Drive Bracket Set Screw ..	498	498	498	498
695	6.....	Variable Motor Drive Bracket Shaft	2075	2075	C-819-A	C-819-A	C-2177
696	3C	Variable Motor Drive Bracket Shaft Bearing.....	2040	2040
697	3C	Variable Motor Drive Bracket Shaft Bearing Bolt.....	473-2	473-2

IMPORTANT: WHEN ORDERING PARTS, SERIAL NUMBER OF PRESS MUST BE GIVEN